

T2 CORDLESS

Enterprise Portable Wi-Fi Phone

Administration Guide



PREFACE

PURPOSE

This document describes the installation, configuration and usage of T2 in detail, and provides guidance and instructions for administrators, technical support engineers and so on.

This document is mainly applicable to the following parties:

1. Conservator
2. Technical Support Engineer
3. Service engineer
4. Quality Testing Engineer

CONTENT

This manual consists of five chapters.

Chapter I Summary

Describes product hardware, status icons, and indicator lights.

Chapter II Introduction

Describes the product packaging list, installation, switch, phone status, and input or edit data.

Chapter III Configuration wizard

This paper introduces the configuration and operation method of the mobile phone end and the Web end of the product.

Chapter IV Basic function

Introduce the basic functions of the product.

Chapter V Advanced functions

Introduce the advanced features of the product.

COPYRIGHT

The copyright of this material is owned by VOGTEC TECHNOLOGY CO., LTD.

Reproduction or transmittal of the entire or any part, in any form or by any means, electronic or print, for any purpose without the express written permission of VOGTEC TECHNOLOGY CO., LTD. is not permitted.

Due to the continuous updating and improvement of products and technologies, the contents of this information may not be fully consistent with the actual products. If you need to find out about the update of the product, please contact the local office.

For the latest information, visit here:

<http://www.vogtec.com>

VOGTEC is a registered trademark in China and known in the other countries by its' right.

INDEX

OVERVIEW.....	8
Hardware Introduction	8
Icon Introduction	10
Indicator introduction	11
User Interface	11
Phone Interface	11
Web Interface	12
GETTING STARTED.....	13
Package list	13
Product Installation	13
Power On/Off	14
Phone Status	15
Enter or edit data	15
CONFIGURATION GUIDE.....	16
Configure Via Phone Interface	17
Customize Setting	17
Language	18
Backlit.....	19
After the user enters the standby interface, manually press the keys: Menu -> Preferences ->.....	19
Information screen, As shown in the following figure:	19
Brightness	19
Default Ring Tone.....	20
Keyboard light	21
Battery Power Level	22
Key Tone	23
The network is not connected to the prompt tone	24
Date & Time.....	25
Automatic Lock Screen	31
Call Prefix.....	33

Wallpaper Setting	34
Advance Setting	35
Account Information	36
Media.....	42
Virtual Private Network.....	43
Update	46
Log Setting	48
IPerf	49
Directory Management.....	51
Local directory	51
Contact Person Add.....	51
Blacklist.....	57
Group Management	59
Remote Directory	61
LDAP	63
LDAP Contact Person.....	64
LDAP Group.....	66
Speed-dial	68
History.....	69
Complete Documentation	69
Incoming Call Record.....	72
Phone Records Have Been Set.....	75
Missed Call Record	78
Transfer Call Record	81
Function Setting.....	84
Call Forwarding	84
Call Waiting	88
Do Not Disturb.....	89
Automatic Redial	89
Automatic Answer	91
Automatic answer after charging	92
WLAN	92

Search and connect	92
Set The Static Address.....	94
Add Network.....	95
Forget Network.....	97
Blue-tooth	98
On/Off	98
Search	99
Pairing	99
Volume	100
About	101
Web Setting	102
State	103
Account Setting	103
Enable/Disable account	104
Basic Setting	104
Call Setting	106
Advanced setting.....	108
Phone Settings	111
Date and Time Settings.....	112
Preferences.....	114
Screen settings	114
Click Phone->Preference->Screen Settings and enters screen setting page, As shown in the following figure:	114
Feature Settings.....	119
Media.....	121
Language	122
Network Setting	123
WLAN	124
QoS	126
VPN	127
Click Network->VPN to display as follows, through this page, enable VPN function to set up and view VPN.....	127


NAT Travel.....	131
Directory	132
Local directory	132
Add Contacts	132
Black List.....	140
Group Settings	147
Remote directory	150
LDAP Settings	150
Click Directory - > LDAP - > LDAP Settings to enter the LDAP settings page. After setting up, click the [Apply] key to complete the LDAP set-up operation. As shown in the following figure:	150
Auto Provisioning (Deploy)	157
System log.....	159
Capture Traces.....	161
Configuration management.....	163
Reboot Device.....	168
Basic function	168
Making a call	168
Dial directly	168
SIP calling	169
Point to point dialling	169
Redial.....	169
To make call through directory	169
To make a call through record list	170
User can make a call through the call record or history record (including all, dialled, received,	170
unconnected, transferred, etc).The specific steps are as follows:.....	170
Hearing Call	170
Manual Hearing	170
Reject Call	170
Call On Hold/Recover	170
Call Waiting	170
Call transfer	171

Inquiry transferring	171
Blind transferring	171
Conference Call	172
Forward Transfer	173
Unconditional forward transfer	173
Busy Forward Transfer	173
No Answer Forward Transfer	173
DND (Do not disturb)	174
Anonymity Calling	174
Refuse Anonymity Calling.....	174
Automatic Re-dialling.....	175
Advanced Function	175
Messages.....	175
New Messages.....	175
In box.....	177
Out-box.....	182
Draft.....	188
Voice Mail	193
Voice mail setting	193

OVERVIEW

Hardware Introduction

T2 The main components of the phone hardware include a LCD screen and a keyboard, as shown in the following figure:

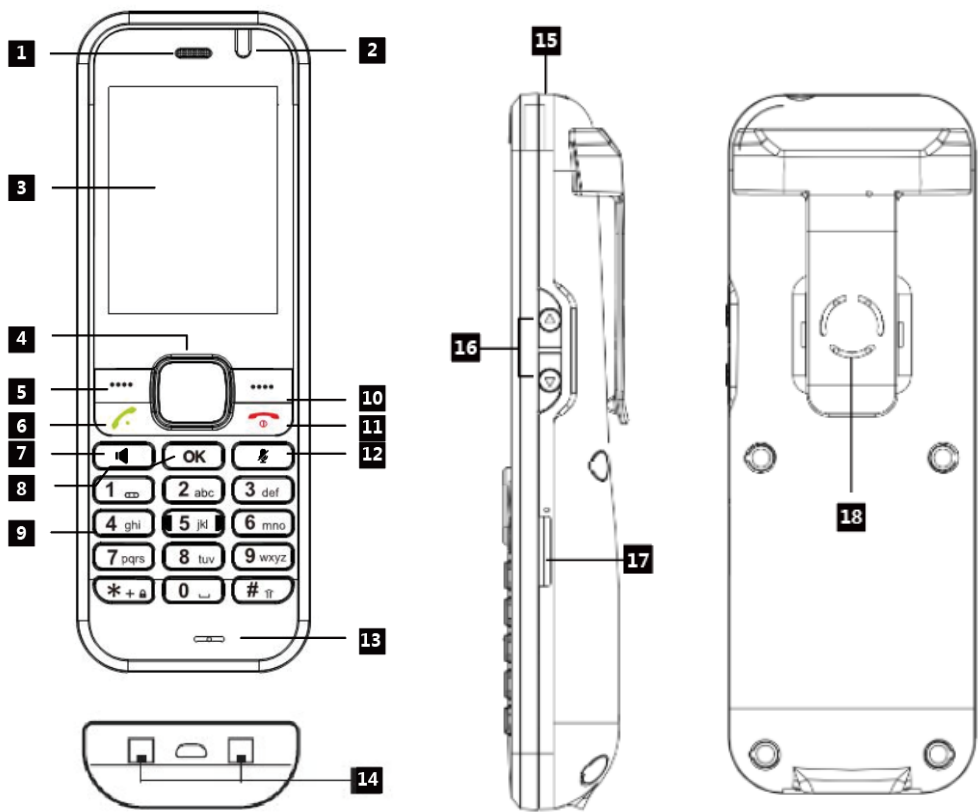

Note 1 : T2 Description

The main components of the phone hardware are described as follows:

KEYS	INSTRUCTIONS
Earpiece	Audio output
Indicator	Indicates the phone status: ● Charge status, when the battery power is high - the green light is on ● Charging status, when the battery power is low - the red light is on

	● Standby status, when the battery is low power - the red light flashes slowly ● When there is a missed call - The red light flashes slowly ● When receiving voice messages or SMS - The red light flashes slowly
Screen	Show calls, messages, short-cuts, time, date, and other related information: ● Call information—Caller ID, name, and call duration ● Icon ● Prompt messages - missed calls, transfer calls, unread messages, no-interference, etc. ● Time & Date
Navigation Key	Switch options, browse interface information
Left Soft Key	Directory short-cuts, select actions, confirm actions
Call Key	Calling numbers, answering a call, or holding/resuming a call
Hands-Free Key	Switch hands-free mode
OK Key	Confirm & submit operation
Number Key	Provide input for numbers, capital letters, and other special characters
Right Soft Key	Menu short-cut, return operation
Hang Up Key	Hang up the call, long press to Start/Stop key, click to return to the standby interface
Mute Key	Switch silent mode (Mute on standby, silence on call)
Microphone	Audio Input
Power Line Interface & Charger Interface	Provide device charging interface
Headphone Jack	Provide headphone jack
Volume Adjustment Key	Adjust the volume of earpieces, headphones, speakers, and ring tones
Battery Slot & SIM Card Slot	Provide battery and SIM insertion interface (requires SIM card)
Speaker	Provide audio output on hands-free

Icon Introduction

ICON	INSTRUCTIONS
	Wi-Fi connected successfully
	Not connected
	Blue-tooth headset connected
	Blue-tooth mode
	Battery percentage
	Battery power level
	Charging
	Headphones connected
	Hands-free state
	Mute status
	Do not disturb
	Unread SMS
	Successful registration or connected
	Failed registration
	Dialled number
	Received call
	Missed call
	Transfer call

Indicator introduction

INDICATOR STATUS	INSTRUCTIONS
Red light on	When the phone is charging and the battery is low
Red slow flash	Phone has unread messages Phone has missed call Phone has forward call Standby battery is low power level
Green light on	When the phone is charging and the battery charge is high power level
Close	Other statuses other than the above, such as (idle, in-call, hold, mute, etc.)

User Interface

T2 Supports two configurations:

- Phone interface configuration
- Web interface configuration

Phone Interface

Press the right soft key to enter into the phone menu interface. Usually, users can enter into any menu to configure without entering the password, unless the users have setted the automatic locking screen.

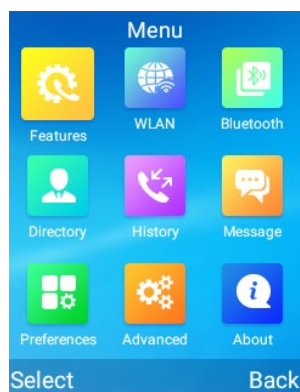


Figure 2 : Phone Menu

Web Interface

Except using the phone menu interface to configure the phone, users can also use web interface to configure it. But users need to know the phone IP address. Then input the IP address into a web page (eg: 192.168.1.1)

How to check the Phone IP address:

Be sure the phone connected to the network then press the down key from the standby interface. Now you can see the IP address.

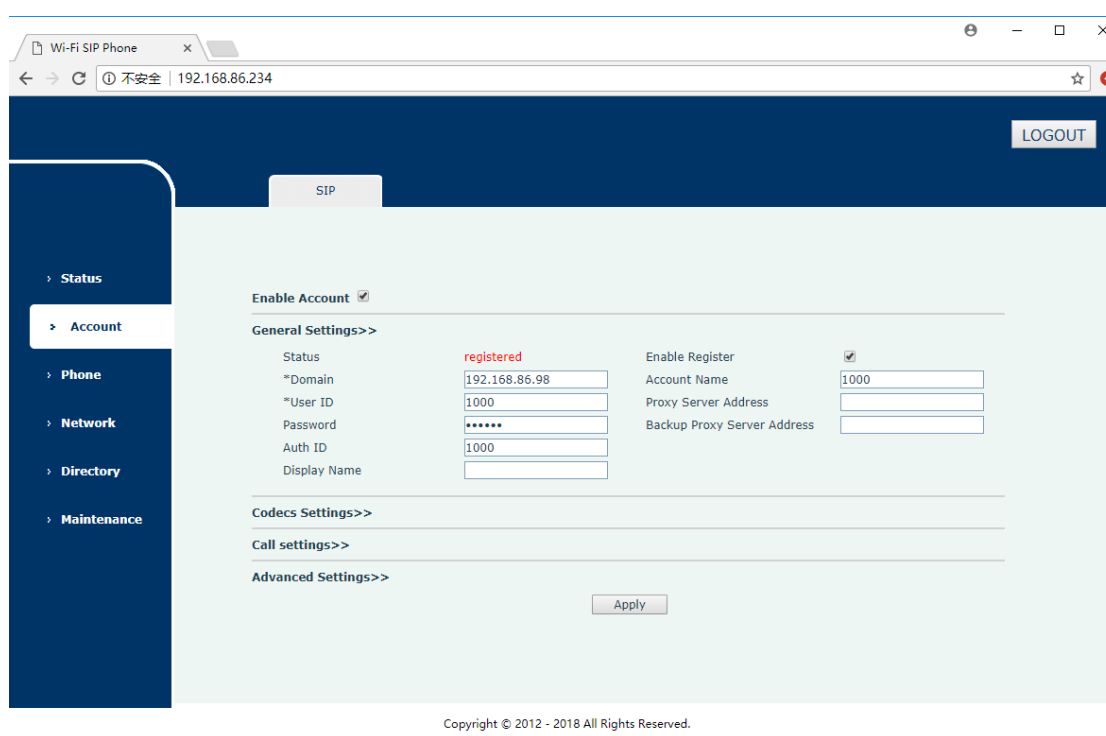


Figure 3 : Phone WEB Page

GETTING STARTED

Package list

T2 phone packaging contents are in below:

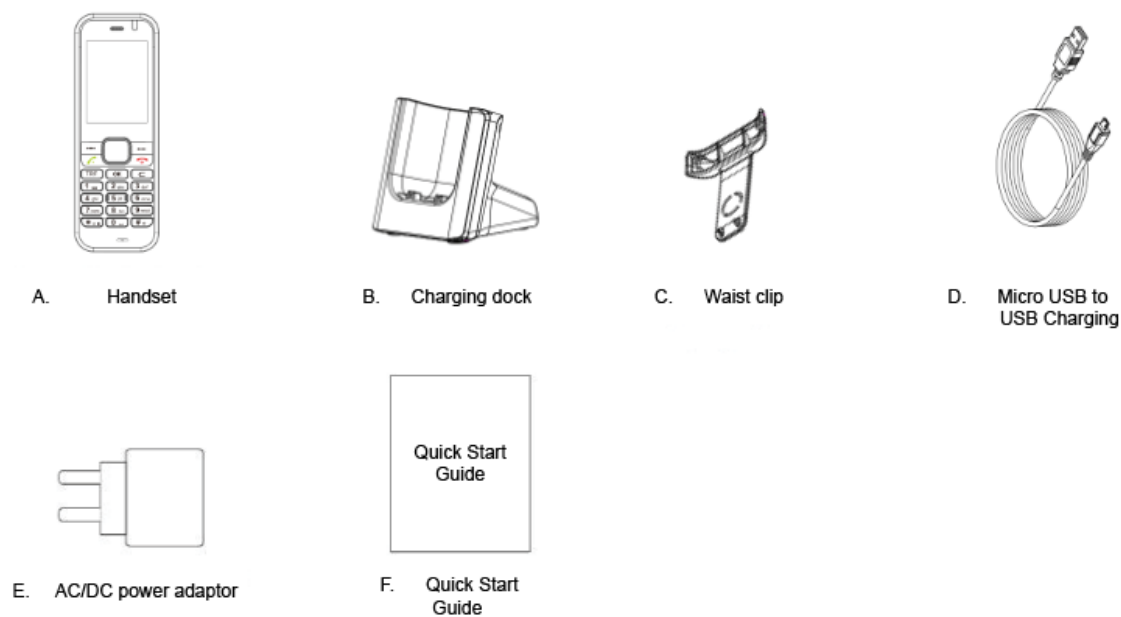


Figure 4 : Package List

Check the package list before installing the phone. If you have lost any accessories, contact your system administrator.

Product Installation

This section will introduce how to install the phone:

- Battery Installation
- Connect to power supply
- Phone placement

Connect to power supply

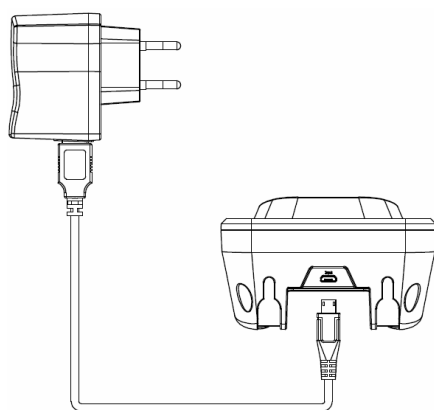


Figure 5 : Power Supply Connection

Power On/Off

Power On


Users can long press the **【】** key to start phone initialization process once battery installed . Then users can configure the phone from the phone user interface or web page user interface.



Figure 8 : Phone Getting Start

Power Off

Users can long press **【】** to a prompt window by confirmation to power off. Then press the left soft key to power off.

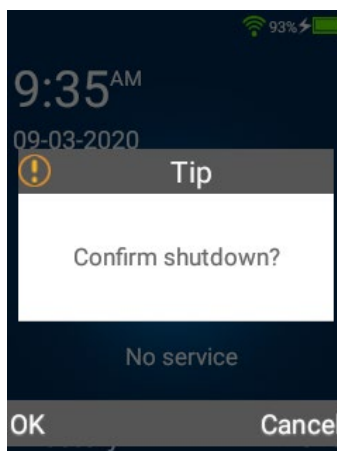

Note 9 : Shutting Down State

Phone Status

Users can check the phone's status through the phone interface or web interface.

Phone status information includes:

- Account information: SIP account, registration status;
- Network status: IP address, gateway address, DNS address, MAC address;
- VPN information: VPN connection status (acquisition address);
- Device Information: Product Model, System Version, Firmware Version

Check the phone status through the phone interface. **Please check the phone settings > About** Check the phone status through the web interface. **Please check the Web settings > About**

Enter or edit data

- Users can input or edit data in the edit box by using the phone keypad.
- Users can change the input method by pressing the # key. The input methods supported by the phone include: 2aB, abc, ABC, and 123. Each key on the keyboard provides a different character (or number). When the input method changes to the corresponding one, you can repeatedly press the down key to view the characters (or numbers) that can be input. You already select the corresponding character (or number) when you stop continue pressing. Then wait one second to input next character (or number).
- If users want to type letter "a", then he need to press key "1" once. If "b",then press key "2"twice.If "c",

then press key “3” for three times.

- If users want to delete the entered data, press the up & down, left & right navigation keys to delete.

The following table lists the characters (or numbers) that each key can provide under different input methods:

Input Method	2aB	abc	ABC	123
Key0	0、 space	space	space	0
Key1	1 . * # : , & @ ! " ^ \$ % ' ~ () + - \\ / ? ; < = > [] _	. * # : , & @ ! " ^ \$ % ' ~ () + - \\ / ? ; < = > [] _	. * # : , & @ ! " ^ \$ % ' ~ () + - \\ / ? ; < = > [] _	1
Key2	2aAbBcC	abc	ABC	2
Key3	3dDeEfF	def	DEF	3
Key4	4gGhHiI	ghi	GHI	4
Key5	5jJkKlL	jkl	JKL	5
Key6	6mMnNoO	mno	MNO	6
Key7	7pPqQrRsS	pqrs	PQRS	7
Key8	8tTuUvV	tuv	TUV	8
Key9	9wWxXyYzZ	wxyz	WXYZ	9
Key*	. * #	* #	* #	.
Key#	Change Input method	Change Input method	Change Input method	Change Input method

CONFIGURATION GUIDE

Two ways to configure a **T2** phone.

- Configure via phone interface
- Configure via web page interface

Configure Via Phone Interface

T2 standby interface is as below once power on:

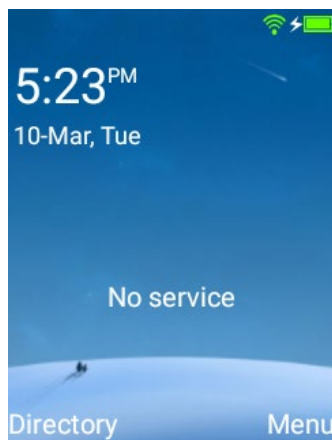


Figure 10 : Home Screen

After the phone entering the standby interface, manually press the right soft key to enter the main menu interface, As shown in the following figure:

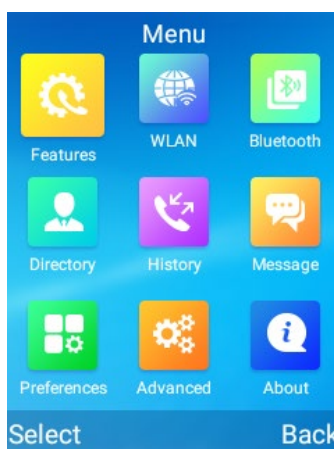


Figure 11 : Main menu interface

This main menu interface provides users with entrances to enter into other functional interfaces like: functional settings, WLAN, blue-tooth, directory, history, SMS, customized settings, Advanced, and related function interfaces.

Customize Setting

This settings enable users to customize the phone's basic settings, such as date & time, ring tone, information

screen, language, etc.

Language

After the user enters the standby interface, manually press the key: Menu -> Preferences-> Language, As shown in the following figure:



Figure 12 : Language Switching

- Command Function: change Language
- Optional parameters

Language

Input method : Left and right navigation keys or switch the corresponding left soft key (default: English).

Parameter description: The language of the phone interface.

Note After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Backlit

After the user enters the standby interface, manually press the keys: Menu -> Preferences -> Information screen, As shown in the following figure:



Figure 13 : Backlit

- Command function: change the backlit
- Optional Parameter

backlit input method : Left and right navigation keys or switch the corresponding left soft key (default: 60s).

Parameter description: The time of the phone between being idle changing to backlit being off.

Note After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Brightness

Manually operate the keys under standby interface: Menu -> Preferences -> Brightness, As shown in the following figure:

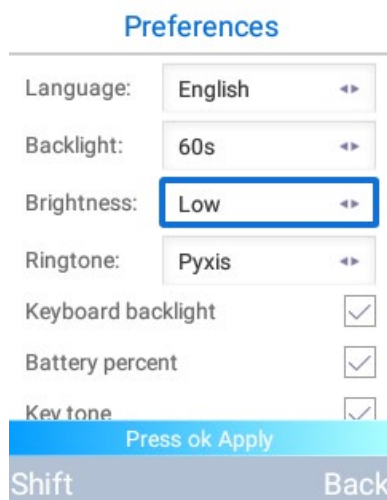


Figure 14 : Brightness

- Command function: switch background light
- Optional parameter:

Brightness

Input method: Left and right navigation keys or switch the corresponding left soft key (Default: Low).

Parameter description: phone background brightness.

Note After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Default Ring Tone

Manually operate the keys under standby interface: Menu -> Preferences -> Ring tone, As shown in the following figure:

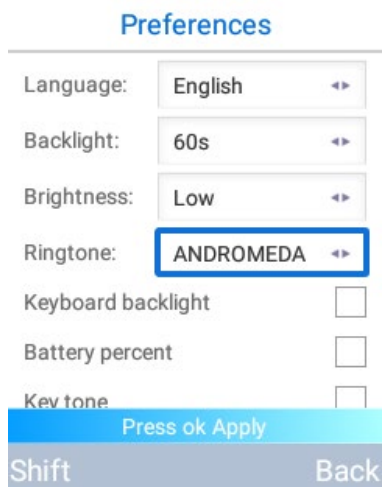


Figure 15 : Default Ring-tone Toggle

- Command function: switch default ring tone
- Optional parameter

Default Ring-tone

Input method: Left & right navigation keys or switch corresponding left soft key (Defaulted: ANDROMEDA)

Parameter description: Incoming ring-tone (the phone's ring-tone when somebody is calling your phone)

Note After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Keyboard light

Manually press the keys under the standby interface: Menu -> Preferences -> Keyboard Lights, As shown in the following figure:

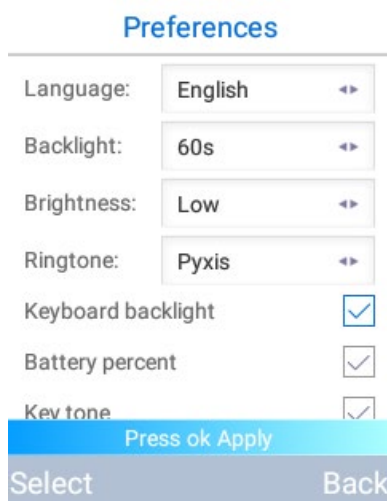


Figure 16 : Turn On The Keyboard Light

- Command function: start keyboard light
- Optional Parameter

Keyboard Light

Input method: Select the corresponding left soft key.

Parameter description: Start the keyboard light.

Note After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Battery Power Level

Manually press the key under standby interface: Menu -> Preferences -> Battery percent, As shown in the following figure:



Figure 17 : Start-up battery percentage

- Command function: Start-up battery percentage
- Required parameters

Battery power

Input method: choose corresponding left soft key.

Parameter description: show the battery power percentage under standby interface.

Note After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Key Tone

Manually press the keys under standby interface: Menu -> Preferences -> Key Tone, As shown in the following figure:



Figure 18 : Start Key Tone

- Command function: Start key tone
- Required parameters

Key Tone

Input method: choose corresponding left soft key.

Parameter description: whether to play the key sound when dialling

Note After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

The network is not connected to the prompt tone

After the user enters the standby interface, manually operate the keys: menu -> personalized Settings -> network is not connected to the prompt sound, as shown in the following figure:



Figure 19 : Start Network Not Connected Prompt

- Command Function: Start network not connected prompt
- Required Parameter:

The network is not connected to the prompt tone

Input method: Select the corresponding left soft key (default: start the network is not connected).

Parameter description: Not connected to the network or off the network whether to play the network is not connected to the prompt tone.

Note After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Date & Time

24-hour Mode

Manually press the keys under standby interface: Menu -> Preferences -> 24-hour, as shown in the following figure.

Preferences

Date&Time

24 Hour Clock ☐

Manual time ☐

Server Address: pool.ntp.org

Resync Cycle: 10080 hour

Timezone: +3:00 Kuwait <>

Date Format: DD MM YYYY <>

Press ok Apply

Select Back

Figure 20 : Start-up 24-hour Mode

- Command Function: Start 24-hour mode
- Required Parameter

24-hour mode

Input method: Select the corresponding left soft key.

Parameter description: Whether the standby interface time is displayed in 24-hour format.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Automatic

Manually press the key under the standby interface: Menu -> Preferences -> Set the date and time automatic and check it, As shown in the following figure:

The screenshot shows a 'Preferences' screen with the following settings:

- Date&Time**: A section header.
- 24 Hour Clock**: A checkbox that is currently unchecked.
- Manual time**: A checkbox that is currently checked.
- Server Address**: A text field containing 'pool.ntp.org'.
- Resync Cycle**: A numeric field containing '10080' followed by the unit 'hour'.
- Timezone**: A dropdown menu showing '+3:00 Kuwait' with left and right navigation arrows.
- Date Format**: A dropdown menu showing 'DD MM YYYY' with left and right navigation arrows.
- Buttons**: At the bottom, there are three buttons: 'Press ok Apply' (highlighted in blue), 'Select' (highlighted in grey), and 'Back' (highlighted in grey).

Figure 21 : Automatically Set Date & Time

- Command Function: Automatic set date and time
- Required parameters

Automatic Set The Date & Time

Input method: Select the corresponding left soft key.

Parameter description: whether to manually set the date and time.

Server address

Input method: manual key input - string, English numeric special characters can be.

Parameter description: Time server address.

Refresh Cycle

Input method: manual key input, format - number (default: 10080).

Parameter description: The period of synchronization with the time server.

Time zone

Input method: Left and right navigation keys or switch the corresponding left soft key (default: Beijing).

Parameter description: The time zone to where the terminal belongs.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Manually

Manually press the keys under the standby interface: Menu -> Preferences -> Manually set the date and time and check it, As shown in the following figure:

Preferences

Date&Time

24 Hour Clock ☐

Manual time ☒

2020	03	10
05	30	46

Date Format: 1 Jan, Mon <>

Date Separator: - <>

Press ok Apply

Select Back

Figure 22 : Manually Set Date & Time

- Command Function: Manually set date and time
- Required parameters:

Manually Set Date & Time

Input method: Select the corresponding left soft key.

Parameter description: whether to manually set the date and time

Year

Input method: manual key input, format - digital.

Parameter description: year.

Month

Input method: manual key input, format - digital.

Parameter description: month.

Day

Input method: manual key input, format - digital

Parameter description: day.

Hour

Input method: manual key input, format - digital.

Parameter description: hours.

Minute

Input method: manual key input, format - digital.

Parameter description: minutes.

Second

Input method: manual key input, format - digital.

Parameter description: Seconds.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Date format

Manually press the keys under standby interface: Menu -> Preferences -> Date Format,As shown in the following figure:

Preferences

Manual time ☒		
2020	03	10
05	32	55
Date Format: 1 Jan, Mon ↔		
Date Separator: - ↔		
Auto lock screen ☐		
Call Prefix:		
Press ok Apply		
Shift		Back

Figure 23 : Toggle Date Format

- Command function: switch date format
- Optional parameters

Date Format

Input method: Left and right navigation keys or switch the corresponding left soft key (default: 1 Jan, Mon).

Parameter description: Format of the date displayed on the standby screen.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Date Separator

Manually press the key under standby interface: Menu -> Preferences -> Date separator, As shown in the following figure:

The screenshot shows the 'Preferences' menu with the following options:

- Manual time: ☒
- Date: 2020 03 10
- Time: 05 32 55
- Date Format: 1 Jan, Mon
- Date Separator: - (highlighted with a blue box)
- Auto lock screen: ☐
- Call Prefix:
- Buttons: Press ok Apply, Shift, Back

Figure 24 : Toggle Day Period Spacer

- Command function: switch date separator
- Optional Parameter

Date Separator

Input method: Left and right navigation keys or switch the corresponding left soft key (default: -).

Parameter description: Standby interface displays the date separator.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Automatic Lock Screen

Manually press the keys under standby interface: Menu -> Preferences -> Auto Lock Screen, As shown in the following figure:

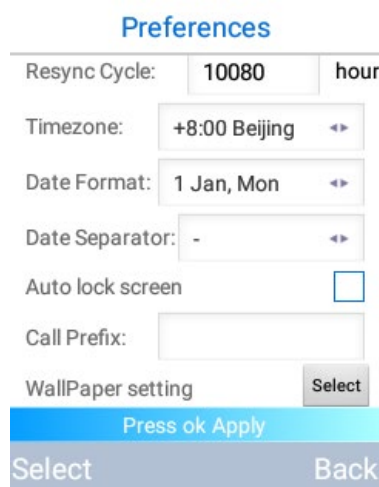


Figure 25 : Start Automatic Locking Screen

- Command function: start automatic lock screen
- Required parameters:

Automatic Lock Screen

Input method: Select the corresponding left soft key.

Description of the parameters: Automatic lock the screen when the phone backlit being off.

Lock Screen Password

Input method: manual key input, format - number (default: *)

Parameter description: lock screen unlock password.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Under automatic lock screen mode, the phone would lock screen automatically while backlit being off .You should unlock the screen after waking up the phone. As shown in the following figure:

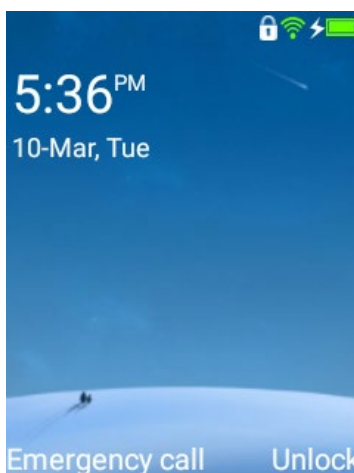


Figure 26 : Lock Screen Interface

Call Prefix

Manually press the keys under standby interface: Menu -> Preferences -> Call Prefix, As shown in the following figure:

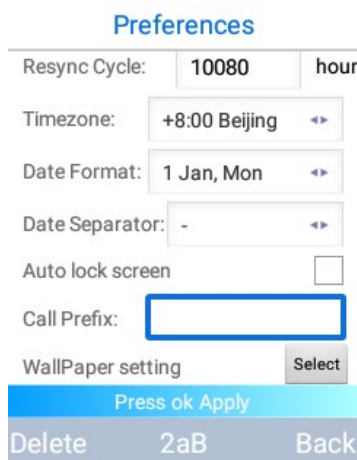


Figure 27 : Set Call Prefix

- Command function: set call prefix
- Required parameters:

Call Prefix

Input method: manual key input, format - digital .

Parameter description: Prefix number automatically dialled before call number.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Wallpaper Setting

Manually press the keys under standby interface: Menu -> Preferences -> Wallpaper, As shown in the following figure:

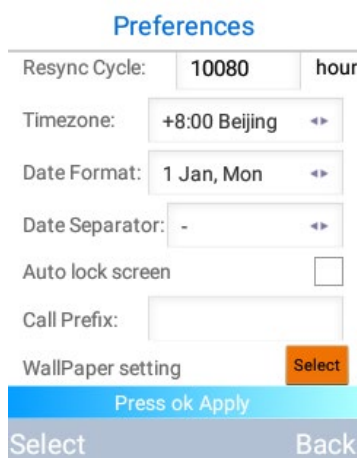


Figure 28 : Set Wallpaper

When users press the corresponding left soft key, the phone will enter into the wallpaper setting interface, As shown in the following figure:

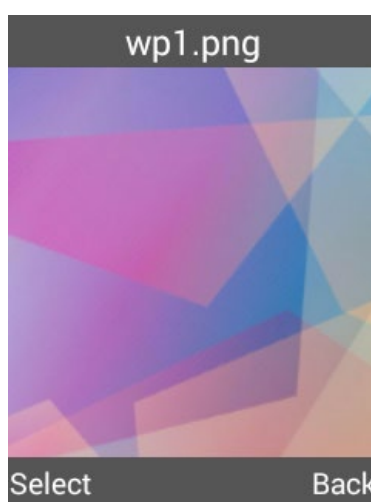


Figure 29 : Wallpaper Set-up Interface

Use the left and right navigation keys to switch wallpapers. When switching to some wallpaper, press & select the corresponding left soft key. The phone will pop up a prompt window to confirm the settings, As shown in the following figure:

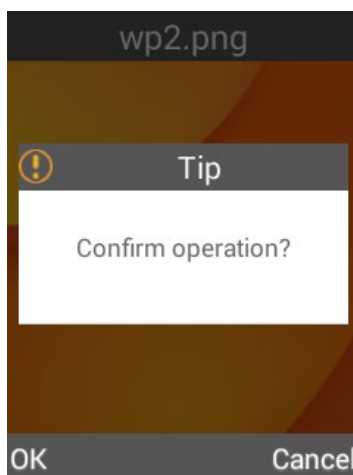


Figure 30 : Wallpaper Set-up Confirmation

In the prompt window, you can confirm whether to choose the wallpaper by press corresponding keys by “OK” or “cancel”.

Advance Setting

The Advanced provide users with interfaces such as account information, virtual private network, on-line update, log settings, network analysis, and factory restoration. Advanced interface is as follows:

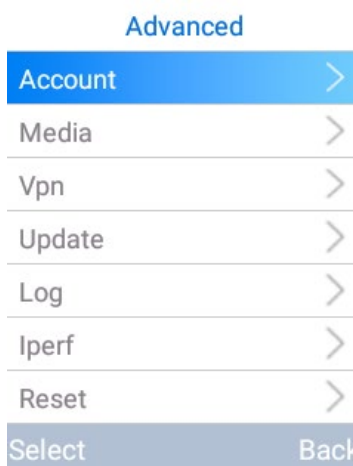


Figure 31 : Advanced Setting

Note: To enter Advanced, you need to enter the initial password of the configuration. The default password: 123.

Account Information

Switch Account

Manually press the keys under standby interface: Menu -> Advanced -> Account , As shown in the following figure:

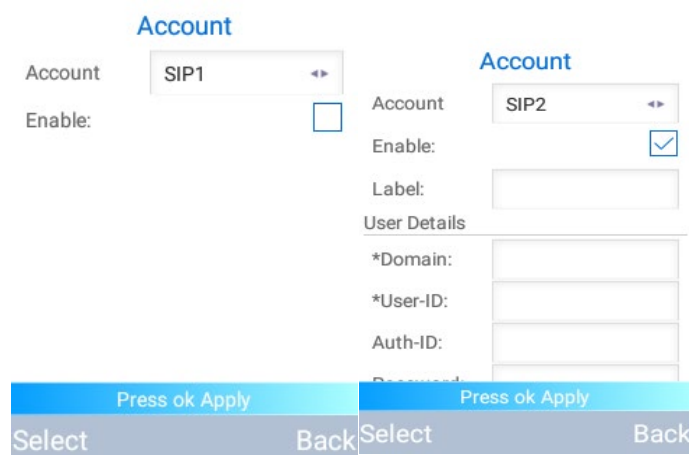


Figure 32 : Advanced Setting

- Command function: Account switch
- Optional Parameter:

Account

Input method: Left and right navigation keys or switch the corresponding left soft key (default: SIP1).

Parameter description: Switching Accounts.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Switch On/Off

Manually press the keys under standby interface: Menu -> Advanced -> Account Settings, As shown in the following figure:





Figure 33 : Account Information

- Command function: Account information switch
- Optional Parameter:

Switch On

Input method: Select the corresponding left soft key.

Parameter description: Start account information setting function.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Basic Settings

Manually press the keys under standby interface: Menu -> Advanced -> Account Settings, check the Account Settings switch, and use the down navigation key to scroll to the basic settings, As shown in the following figure:

Account

Label:

User Details

*Domain:	192.168.82.179
*User-ID:	6801
Auth-ID:	6801
Password:	123456
Name:	6801
Register:	☒

Press ok Apply

Select Back

Figure 34 : User Base Setting

- Command Function: User Basic Settings
- Required parameters:

Domain name

Input method: manual key input, format - string, English numeric special characters would be OK.

Parameter description: Register server address.

User ID

Input method: manual key input, format - string, English numeric special characters would be OK.

Parameter description: User ID for end SIP user pair.

Authentication ID

Input method: manual key input, format - string, English numeric special characters would be OK.

Parameter description: The authentication ID used by the phone SIP user for authentication.

Password

Input method: manual key input, format - string, English numeric special characters would be OK.

Parameter description: The password used by the phone SIP user for authentication.

Show name

Input method: manual key input, format - string, English numeric special characters would be OK.

Parameter description: The user name used by the phone to initiate a call.

Registration

Input method: Select the corresponding left soft key.

Parameter description: Start the phone SIP user registration function.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Proxy Server Settings

Manually press the keys under standby interface: Menu -> Advanced -> Account Settings, choose the Account Settings switch, and use the down navigation key to scroll to the proxy server settings, As shown in the following figure:

Figure 35 : Proxy Server Setting

- Command Function: Proxy Server Settings
- Optional Parameters:

Proxy Server 1

Input method: manual key input, format - string, English numeric special characters would be OK.

Parameter description: When the proxy server 1 exists, the server address registered by the phone SIP user and the sending address when the phone SIP user initiate the call.

Proxy Server 2

Input method: manual key input, format - string, English numeric special characters would be OK.

Parameter description: If the proxy server 1 does not exist, the server address registered by the phone SIP user & the sending address when the phone SIP user initiate a call.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

DTMF Mode Setting

Manually press the keys under standby interface: Menu -> Advanced -> Account Settings, choose the Account Settings switch, and use the down navigation key to scroll to the DTMF mode settings, As shown in the following figure:

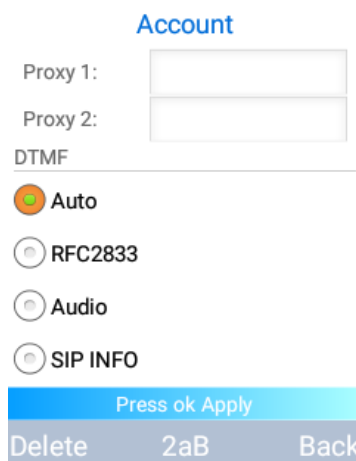


Figure 36 : DTMF Mode Setting

- Command function: DTMF mode setting
- Optional Parameter:

DTMF

Input method: single choice

Parameter description: The DTMF method used by the phone SIP user, should choose the value range according to the actual situation (Auto、RFC2833、Audio、SIP INFO).

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Session Timer Settings

Manually press the keys under standby interface: Menu -> Advanced -> Account Settings, choose the Account Settings switch, and uses the down navigation key to scroll the screen to the session timer settings, As shown in the following figure:

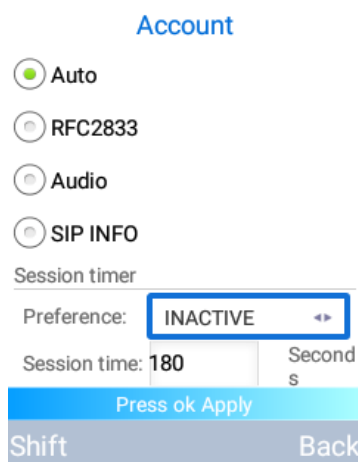


Figure 37 : Session Timer Setting

- Command Function: Session timer Settings
- Optional Parameter:

Preference

Input method: Left and right navigation keys or switch the corresponding left soft key. (INACTIVE)

Parameter description: Terminal SIP user session preferences, set according to the actual situation, range of values (OPTIONAL, REQUIRED, ALWAYS, INACTIVE).

Session Time

Input method: manual key input, format - digital.

Parameter description: The period for sending session updates in terminal calls must be greater than session MinSE.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Media

Manually press the keys under standby interface: menu - > Advanced - > Media. As shown in the following figure:

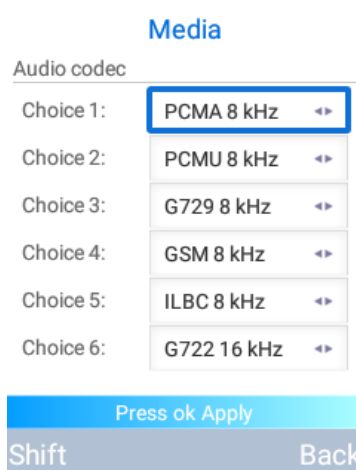


Figure 38 : Audio Encoding Setting

- Command Function:Media
- Optional parameter

Choice 1-6

Input method: Left and right navigation keys or switch the corresponding left soft key (The first entry defaults to opus).

Parameter description: The audio code supported by the phone SIP user should choose the value range according to the actual situation (PCMA, PCMU, G729, GSM, LIBC, G722, opus, Speex).

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Virtual Private Network

VPN switch

Manually press the keys under the standby interface: Menu - > Advanced - > Virtual Private Network Settings, As shown in the following figure:




Figure 39 : Start VPN Feature

- Command Function: Start VPN function
- Optional Parameters:

VPN switch

Input method: choose corresponding left soft key

Parameter description: Start VPN Set-up Function.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

VPN Type

Manually press the keys under the standby interface: Menu - > Advanced - > Virtual Private Network Settings, Check the VPN setting switch and scroll the screen to the VPN type setting using the down navigation key, As shown in the following figure:

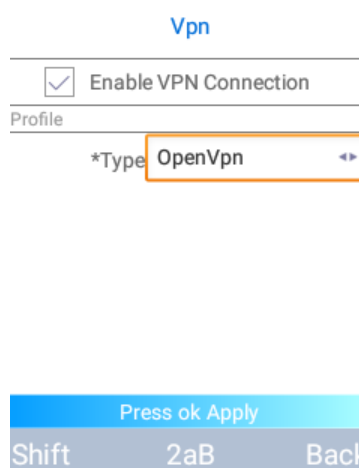


Figure 40 : VPN Type Setting

- Command function: VPN Type switch
- Required parameters:

Type

Input method: Left and right navigation keys or switch the corresponding left soft key (default: OpenVpn).

Parameter description: Settings VPN Categories, Choose according to the actual situation, Type of range (Open-VPN, PPTP, L2TP, L2TP/IPSec PSK, L2TP/IPSec RSA, IPSec Xauth PSK, IPSec Xauth RSA, IPSec Hybrid RSA)

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

User details

Manually press the keys under the standby interface: Menu - > Advanced - > Virtual Private Network Settings, Check the VPN setting switch and set the VPN type to other types except Open-VPN, As shown in the following figure:

Figure 41 : User Detail Setting

- Command Function: User Details Switch
- Required parameters:

User Name

Input method: manual key input - string, English numeric special characters can be.

Parameter description: User name used when terminal connects VPN.

Password

Input method: manual key input - string, English numeric special characters can be.

Parameter description: Password used when terminal connects VPN.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Update

Manually press the keys under standby interface: Menu - > Advanced - > Update. When the user enters the on-line update interface, the system will automatically check the update. As shown in the following figure, the system detects a new version:

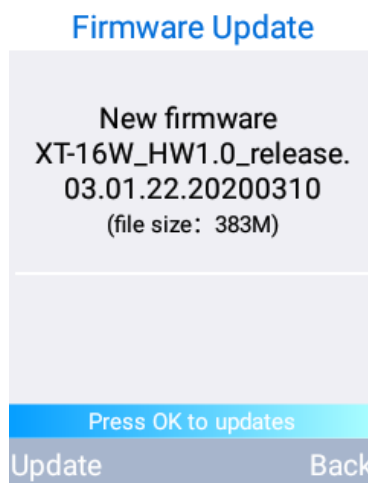


Figure 42 : On-line Update Interface

The user can start the update and download the latest version by pressing the corresponding left soft key or the [OK] key, As shown in the following figure:

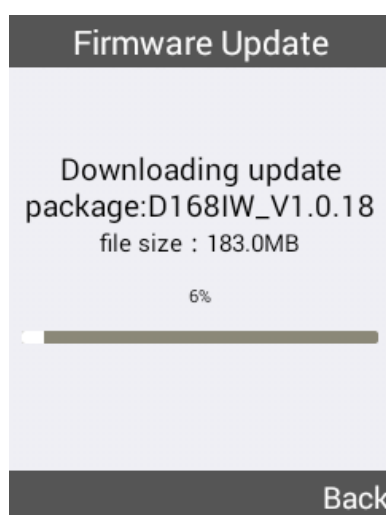


Figure 43 : New Version Download

In the process of downloading the new version, if the user press the right soft key to cancel the corresponding, the terminal will pop up the cancel download confirmation window, As shown in the following figure:

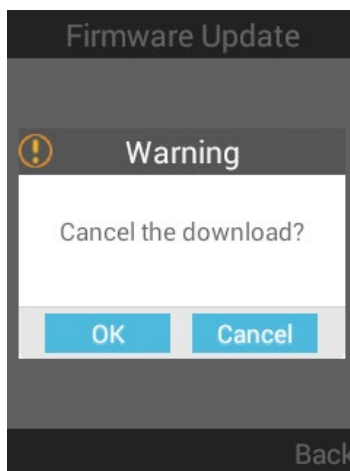


Figure 44 : Download Cancel Prompt

After downloading the new version, enter the update confirmation interface. If you press the corresponding left soft key to install, the system will automatically update, As shown in the following figure:

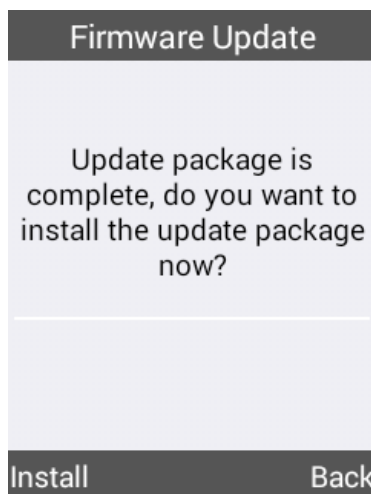


Figure 45 : System Update Tip

When the system is updated, the user is prompted to restart immediately. If the corresponding left soft key is pressed to confirm, the system will restart automatically.

Log Setting

Manually press the keys under standby interface: Menu - > Advanced - > Log Settings, As shown in the following figure:

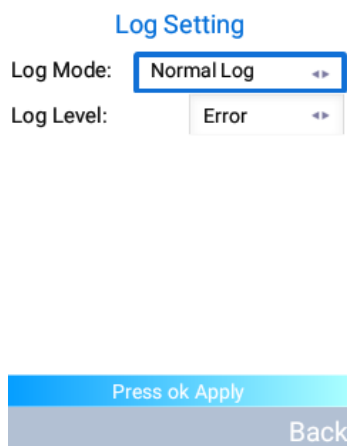


Figure 46 : Log Setting

- Command Function: Log Setting
- Required parameters:

Log Mode

Input method: Left and right navigation keys or switch the corresponding left soft key (default: Normal log).

Parameter description: Terminal log mode, set according to the actual situation, mode range (System Log、Disable、Normal log).

Log Level

Input method: Left and right navigation keys or switch the corresponding left soft key (default: Error).

Parameter description: Terminal log level (when the log mode is Normal Log, this setting item appears), set according to the actual situation, mode range (Error, Warm, Info, Debug, Verbose).

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

IPerf

Manually press the keys under standby interface: Menu - > Advanced - > IPerf, As shown in the following figure:

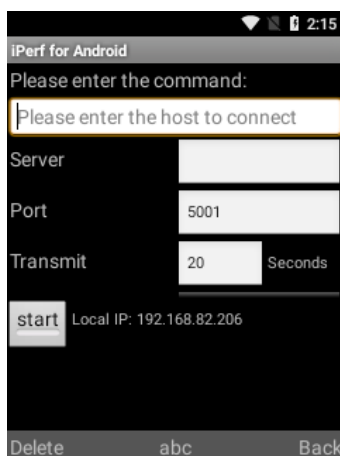


Figure 47: Network Analysis 1

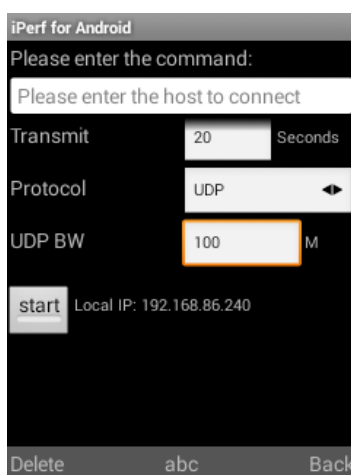


Figure 48: Network Analysis 2

- Command function: IPerf Switch
- Required parameters:

Server address

Input method: manual key input, format - IP address

Parameter description: IPerf server address.

Port

Input method: manual key input, format - digital (Range:1-65535, default: 5001).

Parameter description: IPerf server port.

Transmit

Input method: manual key input, format - digital (Range:1-65535, default: 5001).

Parameter description: time Length of Network Transmission Testing.

Protocol

Input method: left and right navigation keys or switch the corresponding left soft key (default: UDP).

Parameter description: protocol used in network transmission testing.

UDP BW

Input method: manual key input, format - digital (default: 100).

Parameter description: bandwidth using UDP protocol in network transmission testing.

Restore the factory

Manually press the button under the standby interface: menu -> advanced Settings -> to restore factory Settings, as shown in the following figure:

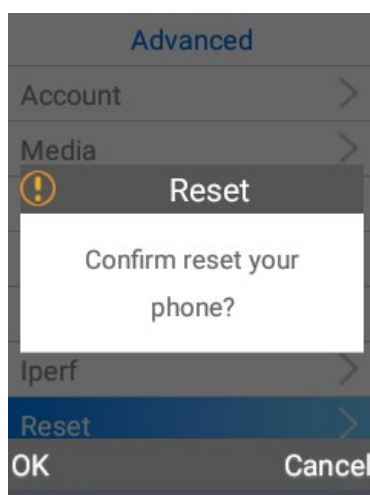


Figure 49 : Factory Data Reset

- Command function: factory data reset
- Required parameters:

Factory Data Reset

Input method: Left and right navigation keys or switch the corresponding left soft keys

Parameter description: The prompt of factory recovery pops up. Click OK to restore the device to the factory, click cancel to restore the factory.

Directory Management

The phone directory management provides the user interface for local phone directory, group management, remote phone directory, LDAP, and speed dial. Directory management interface is as follows.

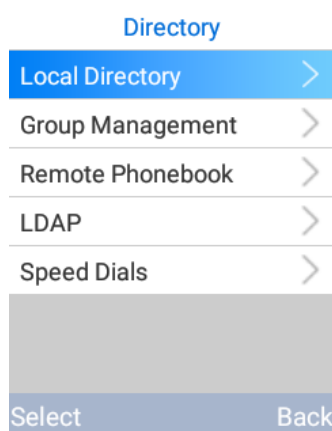


Figure 50: Phone Home Interface

Local directory

Contact Person Add

After the user enters the standby interface, manual operation key: menu -> phone directory-> local phone -> option -> added, then the terminal transfer to the added contact interface, as shown in the figure below.

Add Contact

Name:	
Office:	
Mobile:	
Other:	
Account:	SIP1 <>
Ring:	Default <>
Group:	default <>
Press ok Apply	
Delete	2aB Back

Note 51 : Add Contact

- Command Functions: add contact
- required parameters:

Name

Input mode: manual key input, format - string English numeric or special characters.

Parameter description: add the name of the contact.

Office Phone

Input mode: manual key input, format - string English numeric or special characters.

Parameter description: the office phone number of the contact person.

Mobile Phone

Input mode: manual key input, format - string English numeric or special characters.

Parameter description: the phone number of the contact person.

Other Phone

Input mode: manual key input, format - string English numeric or special characters.

Parameter description: additional calls to the contact person.

Associated Account

Input mode: left-right navigation key or the corresponding left soft key.

Parameter description: add the account number associated with the contact.

Ring Tone

Input mode: left-right navigation key or switch corresponding left soft key (default: Atria)

Parameter description: when the contact phone is added to the terminal, the terminal plays the ring tone.

In The Group

Input mode: left-right navigation key or switch corresponding left soft key (default: default)

Parameter description: the group to which the contact is added.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Edit

Users enter the standby interface, manual key: menu - > Directory - > local phone directory, select any need to modify the contact, press options corresponding left soft key, choose to edit in the options menu. Change the parameters that need to be modified and click the "OK" key to save it. Edit interface as shown below:


Add Contact

Name:	sam
Office:	369
Mobile:	
Other:	
Account:	SIP1 <>
Ring:	Default <>
Group:	default <>
Press ok Apply	
Delete 2aB Back	

Note 52 : Edit Contact

Delete

Users enter the standby interface, manual key: menu - > Directory - > local phone directory, select any need to delete the contacts, press options corresponding left soft key, in the options menu, choose delete. After the delete confirmation display, press the left soft key to confirm the deletion. Please reference the following figure shows:

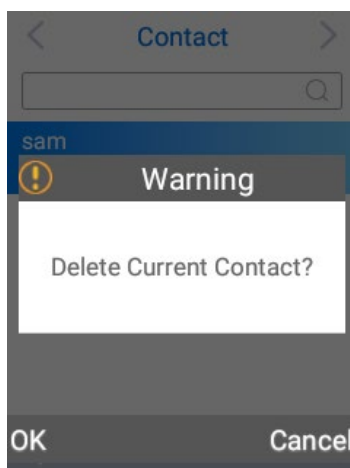


Note 53 : Delete Contact Confirmation

In addition, all delete operations can only be deleted in the options menu, other operations such as delete operation.

Call


After users enter standby interface, manual key: menu - > Directory - > local directory, select any contact need to call, press options corresponding left soft key, in the options menu, select the call. Select the number you want to call in the list of contact that pops up, and press select the corresponding left soft key to call. List of contact, as shown in figure 45.

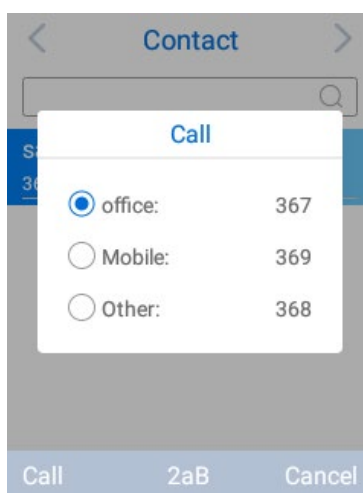

Note 54 : Call Contact

Instant Message

Users enter the standby interface, manual key: menu - > Directory - > local phone directory, select any need instant messaging contacts, press options corresponding left soft key, in the options menu instant messaging, which bring up this contact number, As shown in the following figure:

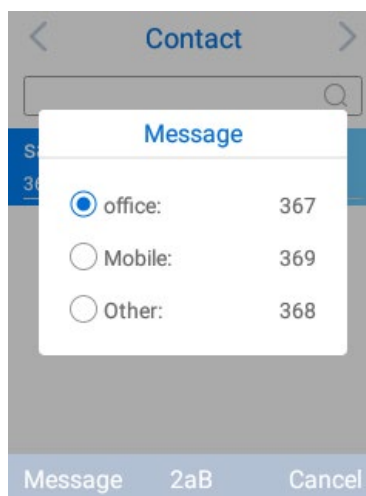

Note 55 : Instant Message

The user to select number needs to send instant messages, and follow the left soft key, instant messaging, corresponding terminal or switch to the instant messaging editor interface, As shown in the following figure:

New Message

From: SIP1 ↔

To: 367 👤

Text...

Press ok Send

Delete
2aB
Back

Note 56 : Instant Message Editing

Search

Users enter the standby interface, manual key: menu - > Directory - > local phone directory, enter the contact number or name in the contact search box, you can search the contact, As shown in the following figure:

<
Contact
>

367 🔍

sam

367	369
-----	-----

Delete
2aB
Back

Note 57 : Contact Search

Move into blacklist

After users enter the standby interface, manual key: menu - > Directory - > local phone directory, select any contacts in the contact list, press options corresponding left soft key, in the options menu select move into the blacklist, complete to move into the blacklist.

Blacklist

Add

Users enter the standby interface, manual key: menu - > Directory - > local phone directory, use the left and right navigation key switch to the blacklist, and options in accordance with the corresponding left soft key, in the options menu, select add, then the terminal switch to blacklist interface, As shown in the following figure:

The screenshot shows a 'New blacklist' form. It contains five input fields: 'Name:', 'Office:', 'Mobile:', 'Other:', and 'Account:'. The 'Account:' field is pre-filled with 'SIP1'. Below the form is a blue bar with the text 'Press ok Apply'. At the very bottom is a grey bar with three buttons: 'Delete', '2aB', and 'Back'.

Note 58 : Add To The Blacklist

- command functions add blacklist
- required parameters:

Name

Input mode: manual key input, format - string English numeric or special characters.

Parameter description: add the name of the blacklist.

Office Phone Number

Input mode: manual key input, format - string English numeric or special characters.

Parameter description: the blacklist office phone number.

Mobile Phone

Input mode: manual key input, format - string English numeric or special characters

Parameter description: the blacklist phone number.

Other Phone

Input mode: manual key input, format - string English numeric or special characters

Parameter description: the blacklist other phone number.

Associated Account

Input mode: left-right navigation key or the corresponding left soft key

Parameter description: add the blacklist associated account number.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Edit

Users enter the standby interface, manual key: menu - > Directory - > local phone directory, use the left and right navigation key switch to the blacklist, select any need to modify the list, press options corresponding left soft key, choose to edit in the options menu. Change the parameters that need to be modified and click the "OK" key to save it. Edit interface as shown below:

New blacklist

Name:	a
Office:	a
Mobile:	
Other:	
Account:	SIP1 

Press ok Apply

Delete 2aB Back

Note 59 : Blacklist Editor

Delete Option

Users enter the standby interface, manual key: menu - > Directory - > local phone directory, use the left and right navigation key switch to the blacklist, select any need to delete the blacklist, press options corresponding left soft key, in the options menu, choose delete. After the delete confirmation display, press the left soft key to confirm the deletion. As shown in the following figure:

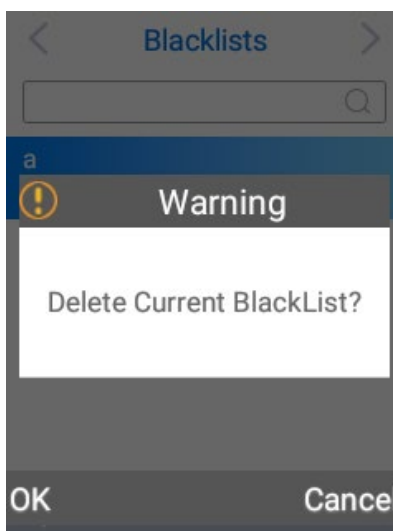


Figure 60: Blacklist Deletion Confirmation

delete operations only deleted in the options menu, other operations such as delete operation.

Remove

After users enter the standby interface, manual key: menu - > Directory - > local phone directory, use the left and right navigation key switch to the blacklist, select any blacklist in the contact list, press options corresponding left soft key in the options menu, select remove blacklist, can complete remove blacklist.

Group Management

Add

Users enter the standby interface, manual key: menu - > phone directory management - > group - > options - > add, the terminal switch to add group interface, As shown in the following figure:

Figure 61 : Add To The Group

- command functions add group
- required parameters:

Name

Input mode: manual key input, format - string English numeric special characters can be

Parameter description: name of the added group.

Ring

Input mode: left-right navigation key or switch corresponding left soft key (default: Pyxis)

Parameter description: when the group contact phone call the terminal, the terminal plays the ring tone.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Edit

Users enter the standby interface, manual key: management group - > menu - > Directory, select any need to modify the group, according to the options corresponding left soft key, choose to edit in the options menu. Change the parameters that need to be modified and click the "OK" key to save it. As shown in the following figure:

Figure 62 : Edit Group

Delete Option

Users enter the standby interface, manual key: management group - > menu - > Directory, select any need to delete the group, according to the options corresponding left soft key, in the options menu, choose delete. After the delete confirmation display, press the left soft key to confirm the deletion. As shown in the following figure:

Figure 63 : Deleting The Group

Note: When deleting a group, all contacts in the group will be automatically added to the default group contact list. The default group cannot be edited or deleted.

Remote Directory

T2 supports remote phone directory function. Users can set remote phone directory URL on web page and

import remote phone directory.After the user enters the standby interface, manual operation key: menu -> phone directory -> remote phone directory, terminal automatically search the remote phone directory,As shown in the following figure:

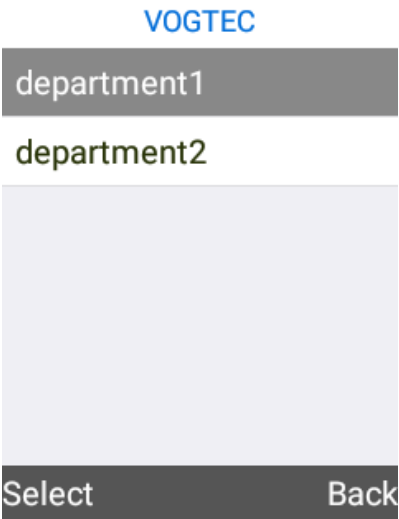


Figure 64 : Remote Phone Book

To use the upper and lower navigation keys to select the communication group and to choose the right and left soft keys to enter the group.

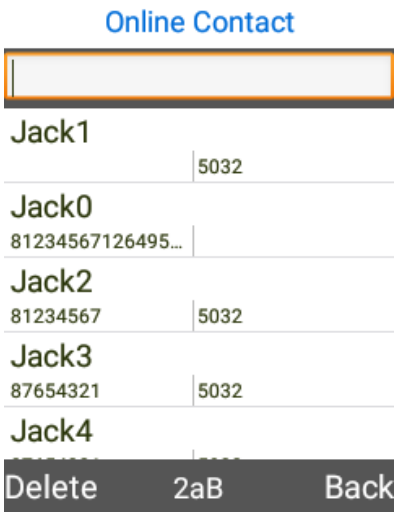


Figure 65 : On-line Contact

Select any contact or enter in the search box to find contacts, press the corresponding left soft key, select the

call in the appearance list of options menu, select the contact number in the contact list, and choose corresponding left soft key to call. List of contact, As shown in the figure below.

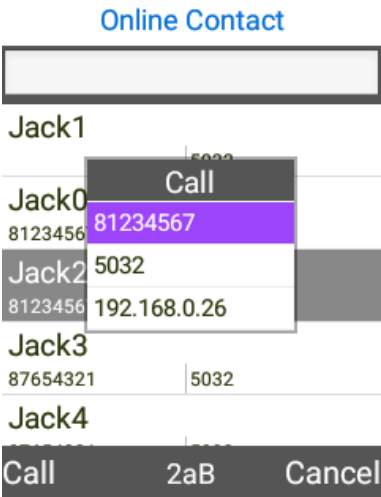


Figure 66 : Contact Call

LDAP

T2 supports LDAP capabilities, and users can configure LDAP on a web page, as shown in 3.2.5.3. After the user enters the standby interface, manual operation key: menu -> phone ben-> LDAP, the terminal automatically searches the LDAP data, As shown in the following figure:

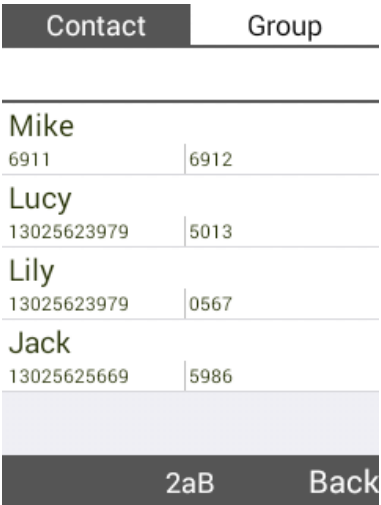


Figure 67 : LDAP Contact

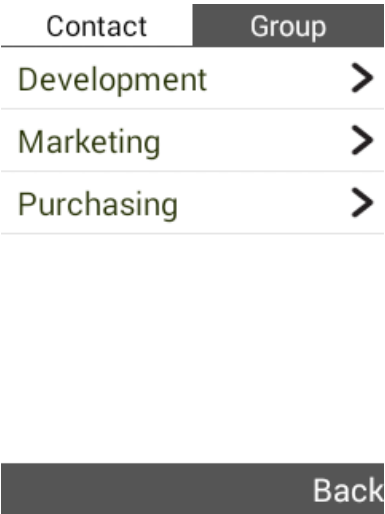


Figure 68 : LDAP Group

LDAP Contact Person

In the LDAP contact interface, select any contact with the upper and lower navigation keys, and click the corresponding left soft key, that is, the list of options menu appears, As shown in the following figure:

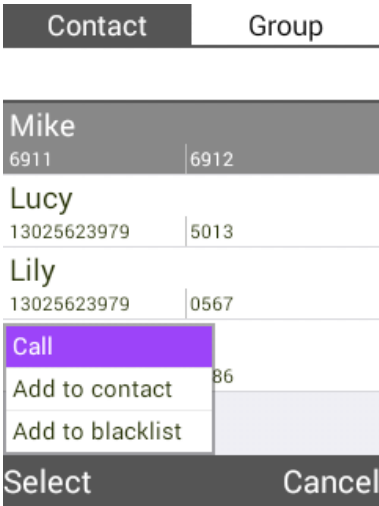


Figure 69 : Options Menu List

In the options menu list, select the call, the terminal interface that pop up call number list, according to the corresponding left soft key or direct call, press the key can dial to choose number, As shown in the following figure:

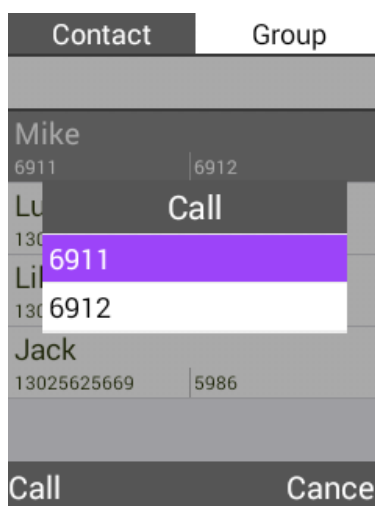


Figure 70 : Call Number List

In the options menu list, select add to contacts, terminal or pop-up add contact interface, edit the contact and press "OK" key to submit to complete the contact add operation, As shown in the following figure:

Add Contact

Name:	6802
Office:	
Mobile:	6802
Other:	
Account:	SIP1 <>
Ring:	Default <>
Group:	default <>
Press ok Apply	
Delete 2aB Back	

Figure 71 : Add Contact

In the options menu list is added to the blacklist, add blacklist interface terminal interface that pop up, edit the blacklist and press "OK" key to submit to complete the blacklist add operation, As shown in the following figure:

New blacklist

Name:	6802
Office:	
Mobile:	6802
Other:	
Account:	SIP1

Press ok Apply

Delete 2aB Back

Figure 72 : Add To The Blacklist

LDAP Group

In LDAP group interface, use the up and down navigation keys to select the group, and options in accordance with the corresponding left soft key, namely the group members interface, As shown in the following figure:

Development

Mike	
6911	6912
Lucy	
13025623979	5013

2aB Back

Figure 73 : Group Member

In the group member interface, select any contact with the upper and lower navigation keys, and click the left soft key corresponding to the option, that is, the list of options menu appears, As shown in the following figure:

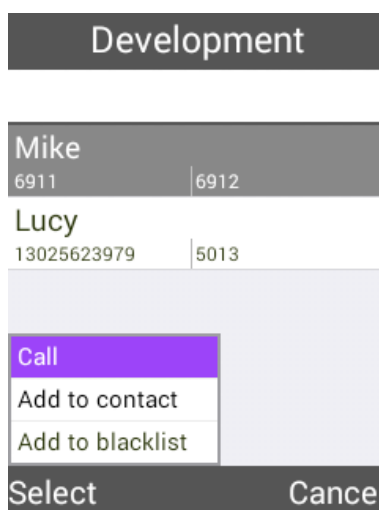


Figure 74 : Options Menu List

In the options menu list, select the call, the terminal interface that pop up call number list, according to the corresponding left soft key or direct call, press the dial key is to choose the number of calls, As shown in the following figure:



Figure 75 : Call Number List

In the options menu list, select add to contacts, terminal or pop-up add contact interface, edit the contact and press "OK" key to submit to complete the contact add operation, as shown in the figure below

Add Contact

Name:	6802
Office:	
Mobile:	6802
Other:	
Account:	SIP1 <>
Ring:	Default <>
Group:	default <>
Press ok Apply	
Delete	2aB Back

Figure 76 : Add Contact

In the options menu list is added to the blacklist, add blacklist interface terminal interface that pop up, edit the blacklist and press "OK" key to submit to complete the blacklist add operation, As shown in the following figure:

New blacklist

Name:	6802
Office:	
Mobile:	6802
Other:	
Account:	SIP1 <>
Press ok Apply	
Delete	2aB Back

Figure 77 : Add To The Blacklist

Speed-dial

After the user has entered into the computer, he will be able to use the phone to make the phone call.

The screenshot displays the 'Speed Dials' configuration interface. It features a list of seven keys, each with a corresponding input field. Key1 is pre-filled with 'Voice mail' and has a lock icon, indicating it is locked. Key2's input field is currently active, highlighted with a blue border. Keys 3 through 7 have empty input fields. At the bottom of the list is a cyan button labeled 'Press ok Apply'. Below this is a grey bar containing three options: 'Delete', '123', and 'Back'.

Figure 78 : Quick Dial Setting

- command functions: speed dial setting
- Optional parameters:

Key0、2-9

Input mode: manual key input, format - string, English numeric or special characters .

Parameter description: speed dial number.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

History

Historical records can view all call records of the current system, including incoming call records, phone records, missed call records, transfer calls and all records.

Complete Documentation

Users enter the standby interface, manual key: menu - > history - > all records, the terminal switch to record all interface, the user is use in historical records about navigation key switch to record all interface, As shown in the following figure:

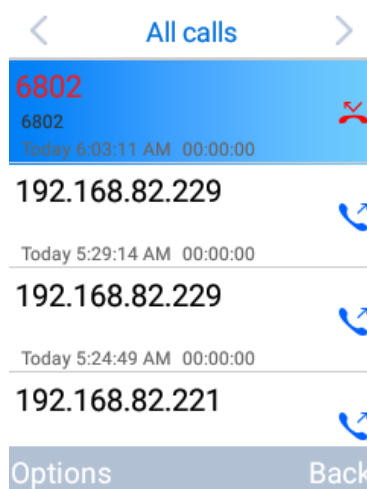


Figure 79 : Complete Documentation

Call

After the user enters the standby interface, manually operate the key: menu -> history record -> record, at this time, any call record can be selected and the left soft key corresponding to the option is selected. In the options menu that appears, select the call to complete the outbound call operation.

Instant message

Users enter the standby interface, manual key: menu-> history-> all records, can choose any phone records at this time and press options corresponding left soft key. In the options menu that appears, select instant message and the terminal switches to the instant message editing interface as shown in the figure below.

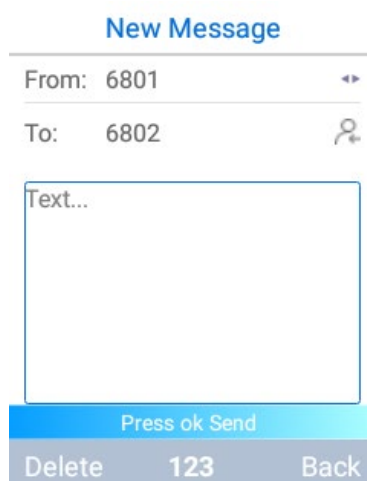


Figure 80 : Instant Message

Add Contact

Users enter the standby interface, manual key: menu - > history - > all records, can choose any phone records at this time and press options corresponding left soft key. In the options menu that appears, select add contact, and the terminal will switch to add the contact interface, As shown in the following figure:

Add Contact

Name:	6802
Office:	
Mobile:	6802
Other:	
Account:	SIP1 <>
Ring:	Default <>
Group:	default <>
Press ok Apply	
Delete	2aB Back

Figure 81 : Add Contact

Move To The Blacklist

Users enter the standby interface, manual key: menu - > history - > all records, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, choose to blacklist, terminal or switch to add blacklist interface. As shown in the following figure:

New blacklist

Name:	6802
Office:	
Mobile:	6802
Other:	
Account:	SIP1 <>
Press ok Apply	
Delete	2aB Back

Figure 82 : Move To The Blacklist

Delete Option

Users enter the standby interface, manual key: menu - > history - > all records, meanwhile you can choose any phone records and press options corresponding left soft key, in the options menu, choose delete, terminal or pop-up delete call records display, click confirm corresponding left soft key then finish delete. As shown in the figure below.

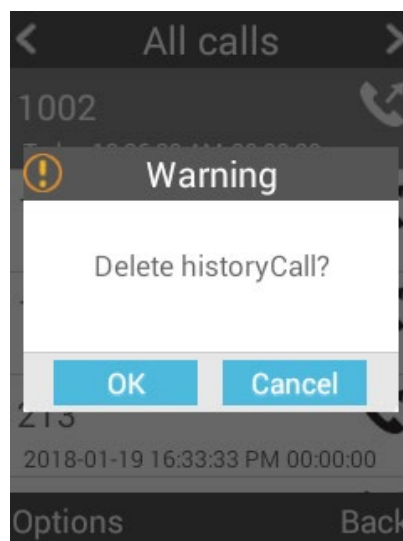


Figure 83 : Delete Record Confirmation

In addition, all delete operations can only be deleted in the options menu, other operations such as delete operation.

Incoming Call Record

After the user enters the standby interface, manually operate the key: menu -> history record -> has received the call record, and the terminal switch to the incoming call record interface, As shown in the following figure:

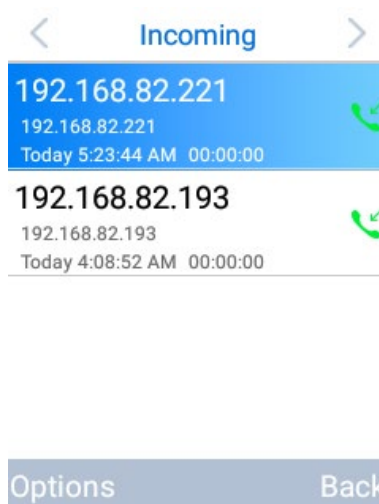


Figure 84 : Incoming Calls

Call

After users enter the standby interface, manual key: menu - > history - > has call recording, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, choose to call, to complete the operation.

Instant message

Users enter the standby interface, manual key: menu - > history - > has call recording, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, select instant messaging, terminal or switch to the instant message editing interface. As shown in the following figure:



Figure 85 : Instant Messages

Add Contact

Users enter the standby interface, manual key: menu - > history - > has call recording, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, select add contacts, terminal or switch to add contact interface. As shown in the following figure:

Add Contact

Name:	192.168.82.221
Office:	
Mobile:	192.168.82.221
Other:	
Account:	SIP1 <>
Ring:	Default <>
Group:	default <>
Press ok Apply	
Delete	2aB Back

Figure 86 : Add Contact

Move Into Blacklist

Users enter the standby interface, manual key: menu - > history - > has call recording, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, select into blacklist, terminal or switch to add blacklist interface. As shown in the following figure:

New blacklist

Name:	6802
Office:	
Mobile:	6802
Other:	
Account:	SIP1 <>
Press ok Apply	
Delete	2aB Back

Figure 87 : Move To The Blacklist

Delete Option

Users enter the standby interface, manual key: menu - > history - > has call recording, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, choose delete, terminal or pop-up delete call records display, click confirm corresponding left soft key then finish delete. As shown in the following figure:

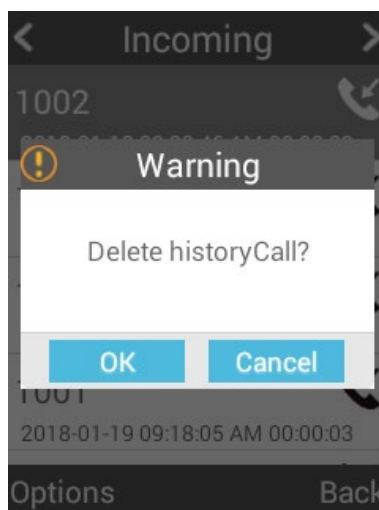


Figure 88 : Delete Record Confirmation

In addition, all delete operations can only be deleted in the options menu, other operations such as delete operation.

Phone Records Have Been Set

After the user enters the standby interface, manual operation key: menu -> history record -> dialled phone record, and the terminal switches to the dial recording interface. As shown in the following figure:

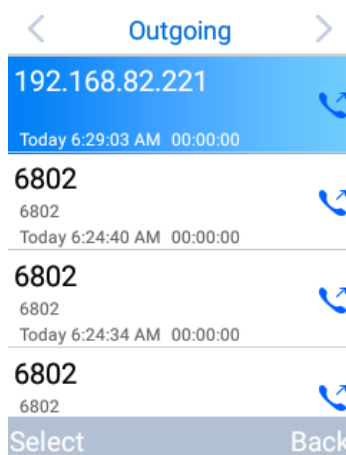


Figure 89 : Outgoing Calls

Call

After the user to enter standby interface, manual key: menu - > history - > have to dial the phone records, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, choose to call, to complete the operation.

Instant message

Users enter the standby interface, manual key: menu - > history - > have to dial the phone records, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, select instant messaging, terminal or switch to the instant message editing interface. As shown in the following figure:



Figure 90 : Instant Messages

Add Contact

Users enter the standby interface, manual key: menu - > history - > have to dial the phone records, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, select add contacts, terminal or switch to add contact interface. As shown in the following figure:

Add Contact

Name:	6802
Office:	
Mobile:	6802
Other:	
Account:	SIP1 <>
Ring:	Default <>
Group:	default <>

Press ok Apply

Delete 2aB Back

Figure 91 : Add Contact

Move To The Blacklist

After users enter the standby interface, manual key: menu - > history - > have to dial the phone records, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, choose to blacklist, terminal or switch to add blacklist interface. As shown in the following figure:

New blacklist

Name:	6802
Office:	
Mobile:	6802
Other:	
Account:	SIP1 <>

Press ok Apply

Delete 2aB Back

Figure 92 : Move To The Blacklist

Delete Option

After users enter standby interface, manual operation keys: menu -> history -> have to dial the phone records, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, choose delete, terminal or pop-up delete call records display, click confirm corresponding left soft key can finish delete. As shown in the following figure:

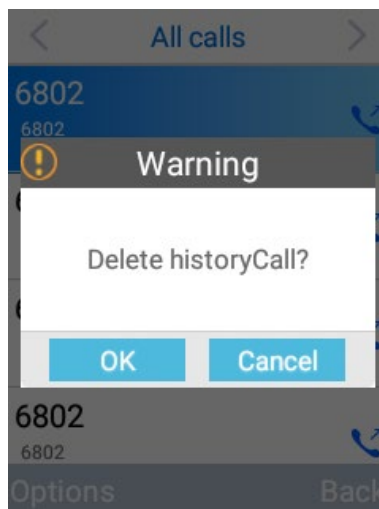


Figure 93 : Delete Record Confirmation

In addition, all delete operations can only be deleted in the options menu, other operations such as delete operation.

Missed Call Record

After the user enters the standby interface, manual operation key: menu -> history record -> does not answer the phone record, and the terminal switches to the unconnected phone record interface. As shown in the following figure:

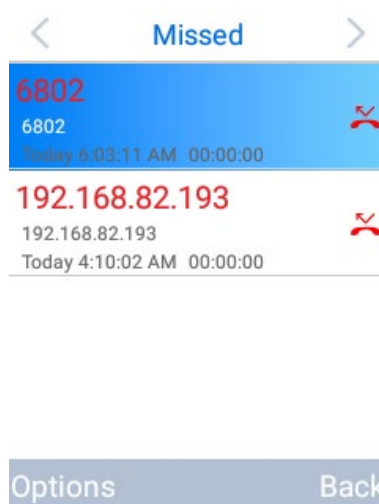


Figure 94 : Missed Calls

Call

After the user to enter standby interface, manual key: menu - > history - > don't answer the phone records, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, choose to call, to complete the operation.

Instant Message

Users enter the standby interface, manual key: menu - > history - > don't answer the phone records, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, select instant messaging, terminal or switch to the instant message editing interface. The following figure shows:



Figure 95 : Instant Message

Add Contact

Users enter the standby interface, manual key: menu - > history - > don't answer the phone records, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, select add contacts, terminal or switch to add contact interface. As shown in the following figure:

Add Contact

Name:	6802
Office:	
Mobile:	6802
Other:	
Account:	SIP1 <>
Ring:	Default <>
Group:	default <>
Press ok Apply	
Delete 2aB Back	

Figure 96 : Add Contact

Move Into Blacklist

users enter the standby interface, manual key: menu - > history - > don't answer the phone records, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, choose to blacklist, terminal or switch to add blacklist interface. The following figure shows

New blacklist

Name:	6802
Office:	
Mobile:	6802
Other:	
Account:	SIP1 <>
Press ok Apply	
Delete 2aB Back	

Figure 97 : Move To The Blacklist

Delete Option

After users enter standby interface, manual operation keys: menu - > history - > don't answer the phone records, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, choose delete, terminal or pop-up delete call records display, click confirm corresponding left soft key can finish delete.As shown in the following figure:

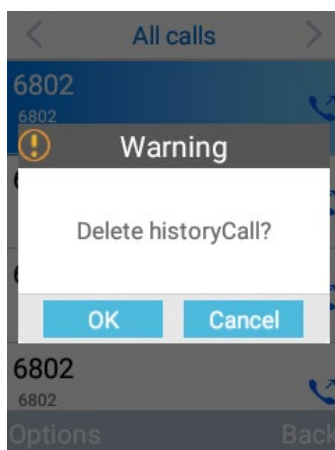


Figure 98 : Delete Record Confirmation

In addition, all delete operations can only be deleted in the options menu, other operations such as delete operation.

Transfer Call Record

users enter the standby interface, manual key: menu - > history - > Forward, the terminal interface transfer switch to call records.As shown in the following figure:

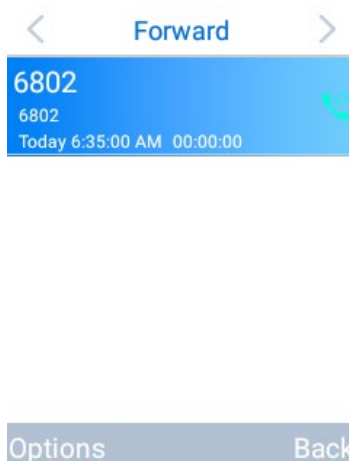


Figure 99 : Call Forward

Call

After users enter the standby interface, manual key: menu - > history - >Forward, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, select the call.You can complete the outbound call operation.

Instant Message

After users enter the standby interface, manual key: menu - > history - > Forward, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, select instant messaging, terminal or switch to the instant message editing interface.As shown in the following figure:



Figure 100 : Instant Messages

Add Contact

users enter the standby interface, manual key: menu - > history - > Forward, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, select add contacts, terminal or switch to add contact interface.As shown in the following figure:

Add Contact

Name:	6802
Office:	
Mobile:	6802
Other:	
Account:	SIP1 <>
Ring:	Default <>
Group:	default <>
Press ok Apply	
Delete	2aB Back

Figure 101 : Add Contact

Move To The Blacklist

Users enter the standby interface, manual key: menu - > history - > Forward, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, select add contacts, terminal or switch to add contact interface.As shown in the following figure:

New blacklist

Name:	6802
Office:	
Mobile:	6802
Other:	
Account:	SIP1 <>
Press ok Apply	
Delete	2aB Back

Figure 102 : Move To The Blacklist

Delete Option

Users enter the standby interface, manual key: menu - > history - > Forward, at this point you can choose any phone records and press options corresponding left soft key, in the options menu, choose delete, terminal or pop-up delete call records display, click confirm corresponding left soft key then finish delete. As shown in the following figure:

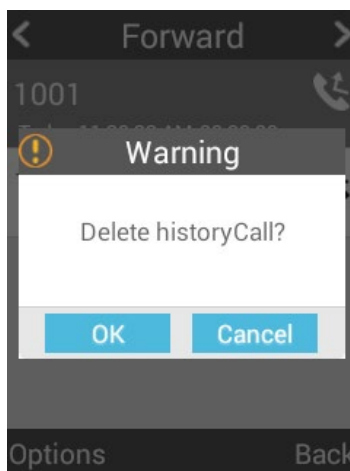


Figure 103 : Delete Record Confirmation

In addition, all delete operations can only be deleted in the options menu, other operations such as delete operation.

Function Setting

Feature set provides users to set a variety of interface of the business, including the forwarding business (unconditional transfer, busy before the turn, nobody reply before), call waiting, don't disturb, Automatic answer, anonymous call and automatic redial.

Call Forwarding

Call forwarding Always

users enter the standby interface, manual key: menu - > Settings, the terminal to switch to set the interface function, by using the navigation keys to scroll down to the unconditional transfer Settings. As shown in the following figure:

Feature

Call forward-6801

Always ☒

Number:

Busy ☐

Number:

No answer ☐

Number:

Press ok Apply

Delete 2aB Back

Figure 104 : Features (Always)

- command functions: call forward always Settings
- required parameters:

Call Forward (Always)

Input method: choose corresponding left soft key.

Parameter description: Start the unconditional transfer function.

Transfer number

Input mode: manual key input, format - string English numeric or special characters.

Parameter description: Number of unconditional transfer

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Call Forward (Busy)

users enter the standby interface, manual key: menu - > Settings, the terminal to switch to set the interface function, by using the navigation keys to scroll down to the busy tone forward Settings.As shown in the following figure:

Feature

Call forward-6801

Always ☐

Number:

Busy ☒

Number:

No answer ☐

Number:

Press ok Apply

Delete 2aB Back

Figure 105 : Call Forward (Busy)

- Command function: busy tone transfer settings
- Required parameters:

Busy Tone Forward

Input method: choose corresponding left soft key.

Parameter description: start busy tone transfer function

Number Transfer

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: the number of busy tone transfer number.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Call Forward (No Answer)

After the user enters the standby interface, manually operate key: menu - > function set, the terminal will switch to the function setting interface, Rolling screen to non response transfer settings by using the downward navigation key. As shown in the following figure:

Feature

Always ☐

Number:

Busy ☐

Number:

No answer ☒

Number:

Time: 60

Press ok Apply

Delete 2aB Back

Figure 106 : No Answer Divert Setting

- Command function: No answer transfer settings
- Required parameters:

No Answer Transfer

Input mode: select the corresponding left soft key.

Parameter description: start No answer transfer function.

Number Transfer

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: No answer number

Time Of No Answer Transfer

Input mode: Manually input, format – number.

Parameter description: time of No answer.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Call Waiting

After the user enters the standby interface, manually operate key: menu - > function set, the terminal will switch to the function setting interface, Rolling screen to call waiting settings by using the downward navigation key. As shown in the following figure:

The screenshot shows a terminal window titled 'Feature'. Under the 'Call waiting' section, there are three settings: 'Enable' (checked), 'Tone' (checked), and 'Do not disturb' (unchecked). Below this is the 'Auto redial' section with 'Enable' (unchecked) and 'Times' set to '3'. At the bottom, there is a blue bar with 'Press ok Apply' and a grey bar with 'Select' and 'Back' buttons.

Figure 107 : Call Waiting Setting

- Command function: call waiting settings
- Required parameters:

Call Waiting

Input mode: select the corresponding left soft-key (Default: check).

Parameter description: start call waiting function

Call Waiting Warning Tone

Input mode: select the corresponding left soft-key (Default: check).

Parameter description: start call waiting warning tone.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Do Not Disturb

After the user enters the standby interface, manually operate key: menu - > function set, the terminal will switch to the function setting interface, Rolling screen to do not disturb settings by using the downward navigation key. As shown in the following figure:

The screenshot shows a terminal interface titled "Feature". It lists several settings: "Call waiting" with "Enable" and "Tone" both checked; "Do not disturb" with "Enable" unchecked; and "Auto redial" with "Enable" unchecked. Below "Auto redial", there is a "Times:" field with the value "3". At the bottom, there are three buttons: "Press ok Apply" (highlighted in blue), "Select", and "Back".

Figure 108 : Do not Disturb Setting

- Command function: do not disturb transfer settings
- Required parameters:

Do not disturb

Input mode: select the corresponding left soft-key.

Parameter description: start do not disturb function

Note After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Automatic Redial

After the user enters the standby interface, manually operate key: menu - > function set, the terminal will switch to the function setting interface, Rolling screen to automatic redial setting by using the downward navigation key. As shown in the following figure:

The screenshot shows a configuration menu for 'Feature'. It includes checkboxes for 'Enable', 'Tone', 'Do not disturb', and 'Auto redial'. Below these are input fields for 'Times' (set to 3) and 'Interval' (set to 3). A blue bar at the bottom contains the text 'Press ok Apply'. At the very bottom, there are three buttons: 'Delete', '2aB', and 'Back'.

Figure 109 : Auto Redial Setting

- Command function: automatic redial settings
- Required parameters:

Automatic redial

Input mode: select the corresponding left soft key.

Parameter description: start automatic redial function

Automatic redial times

Input mode: input by hand, format - number

Parameter description: automatic redial times

Automatic redial frequency

Input mode: input by hand, format – number.

Parameter description: automatic redial frequency.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Automatic Answer

After the user enters the standby interface, manually operate key: menu - > function set, the terminal will switch to the function setting interface, Rolling screen to automatic redial setting by using the downward navigation key. As shown in the following figure:

Figure 110 : Automatic Answering Setting

- Command function: Automatic answer setting
- Required parameters:

Automatic answer

Input mode: select the corresponding left soft key.

Parameter description: start automatic answer function

Delay time

Input mode: input by hand, format - number

Parameter description: Set the delay time.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Automatic answer after charging

After the user enters the standby interface, manually operate key: menu - > function set, At this time, the terminal switches to the function setting interface and scrolls the screen through the use of the downward navigation key to the automatic charging reception setting. As shown in the following figure:

The screenshot shows a 'Feature' settings menu. It includes fields for 'Times' (set to 3) and 'Interval' (set to 3). Under the 'Auto answer' section, there is an 'Enable' checkbox (unchecked) and an 'Answer after' field (set to 0). Below this is the 'Auto Answer after pickup from the base' section, which has an 'Enable' checkbox (checked with an orange checkmark icon). At the bottom of the screen are three buttons: 'Press ok Apply' (blue), 'Select' (light blue), and 'Back' (grey).

Figure 111 : Automatic Answering Setting

- Command function: Automatic answer setting
- Required parameters:

Automatic Answer

Input mode: select the corresponding left soft key (default: auto enabled).

Parameter description: Start the end of charging automatic answer function

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

WLAN

Search and connect

After the user enters the standby interface, manually operate key: menu - > WLAN set, the terminal will switch to WLAN interface. As shown in the following figure:



Figure 112 : WLAN Interface

User can refresh and search available WiFi hotspot by pressing "OK" key.

If the terminal is connected to a hotspot, the user can select the hotspot by using the downward navigation key. As shown in the following figure:

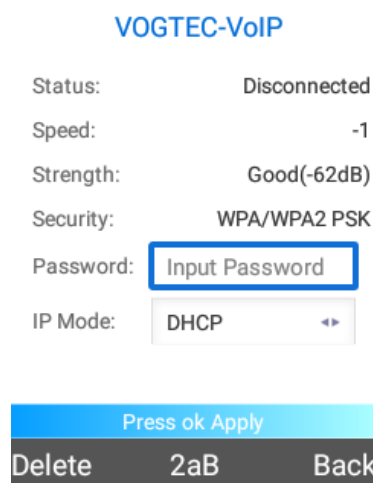


Figure 113 : WiFi Connection Setting

- Command function: WiFi connection settings
- Required parameters:

Password

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: password for WiFi.

IP Mode

Input mode: left/right navigation key or switch corresponding left soft key (default: DHCP)

Parameter description: IP address setting method

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Set The Static Address

After the user enters the standby interface, manually operate key: menu-> WALAN-> USES the downward navigation key to select the hotspot and press the corresponding left soft key. At this time, the terminal switches to the static address setting interface of the phone. As shown in the following figure:

VOGTEC-VoIP

Password: Input Password

IP Mode: STATIC

IP Address: 192.168.0.103

Gateway: 192.168.0.1

DNS1: 8.8.8.8

DNS2: 8.8.4.4

Prefix Length: 24

Press ok Apply

Delete 2aB Back

Figure 114 : Static Address Settings

- Command function: Set the static address
- Required parameters:

IP Address

Input mode: Manual key-stroke input, format - string, numeric special characters are available.

Parameter description:Add the static IP address of the network.

Gateway

Input mode: Manual key-stroke input, format - string, numeric special characters are available.

Parameter description:Add a gateway to the network.

DNS Server 1

Input mode: Manual key-stroke input, format - string, numeric special characters are available.

Parameter description:Add DNS server 1.

DNS Server 2

Input mode: Manual key-stroke input, format - string, numeric special characters are available.

Parameter description:Add DNS server 2.

Prefix Length

Input mode: Manual key input, format - number.

Parameter description:Sets the length of the network prefix.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Add Network

After the user enters the standby interface, manually operate key: menu - > WLAN->Select add network by using the downward navigation key and press left soft key. The terminal will turn to add network interface. As shown in the following figure:

Figure 115 : Add Network

- Command function: add network settings
- Required parameters:

SSID

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: SSID of add network.

Encryption

Input mode: left/right navigation key or switch corresponding left soft key (default: NONE)

Parameter description: Encryption method of adding network.

IP Mode

Input mode: left/right navigation key or switch corresponding left soft key (default: DHCP)

Parameter description: IP address setting method.

Note: After the user settings are completed, you must manually press the "OK" key to submit to save, otherwise it will not take effect.

Forget Network

After the user enters the standby interface, manually operate key: menu -> WLAN->Select connected network by using the downward navigation key. As shown in the following figure:

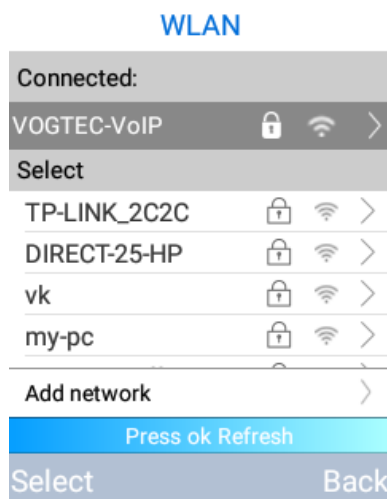


Figure 116 : Select Connected Network

Select corresponding left soft key, enter WiFi settings page. Select forget network by down navigation keys. Forget network operation can be completed by pressing corresponding left soft key. As shown in the following figure:

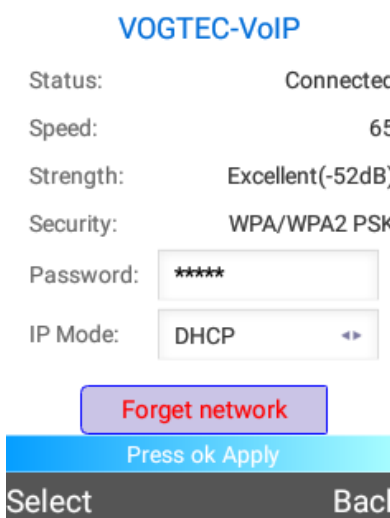


Figure 117 : Forget The Network

Blue-tooth

After the user enters the standby interface, manually operate the following buttons: menu -> blue-tooth, and the terminal switches to the blue-tooth interface. As shown in the following figure:


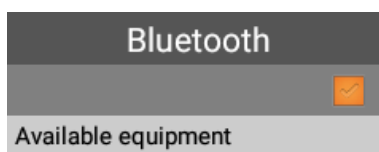


Figure 118 : Blue-tooth Interface

On/Off

After entering the blue-tooth interface, manually operate the left and right navigation keys to select the blue-tooth switch, and press the left soft key to start and close the blue-tooth function. As shown in the following figure:


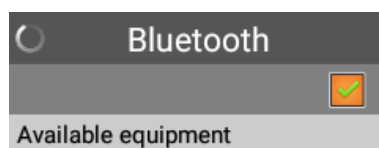


Figure 119 : Start The Blue-tooth

Search

After the blue-tooth function is activated, the terminal will automatically search for the available blue-tooth devices around, and the user can also press the [OK] key to search the surrounding **blue-tooth** devices again. As shown in the following figure:

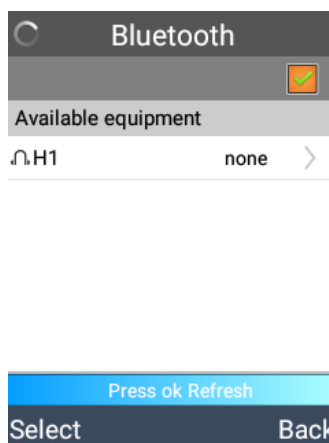


Figure 120 : Search For Blue-tooth Devices

Note: after starting **blue-tooth**, only available nearby **blue-tooth** headsets and speakers can be searched.

Pairing

Start the **blue-tooth** function and search the surrounding connected **blue-tooth** devices. Manually select the **blue-tooth** device you want to connect by using the navigation keys on the left and right sides, and press the left soft button to pair with the device. As shown in the following figure:

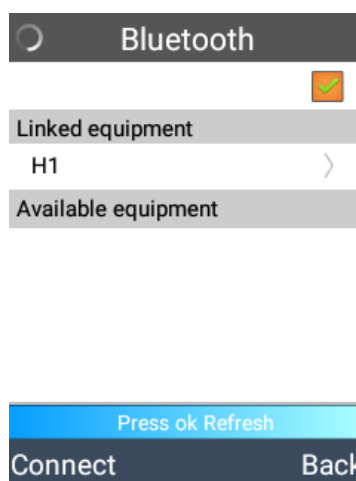


Figure 121 : Blue-tooth Pairing

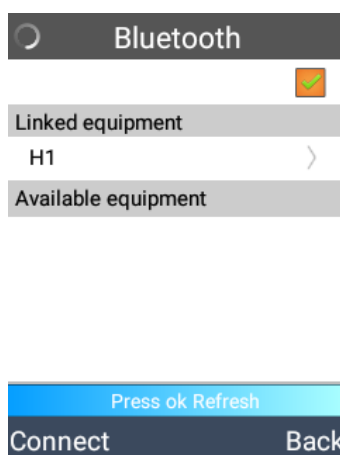


Figure 122 : Matching Success

Other settings

Volume

Users can adjust the volume by volume control key during standby time. Volume can also be adjusted by volume key when voice equipment's are currently used, such as receiver, speaker, earphone and **blue-tooth** headset.

Adjust volume in standby state:

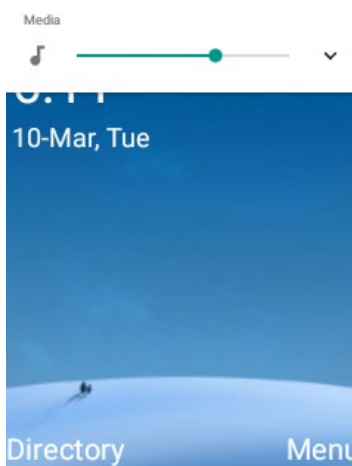


Figure 123 : Volume Adjustment

Adjust volume in call state:


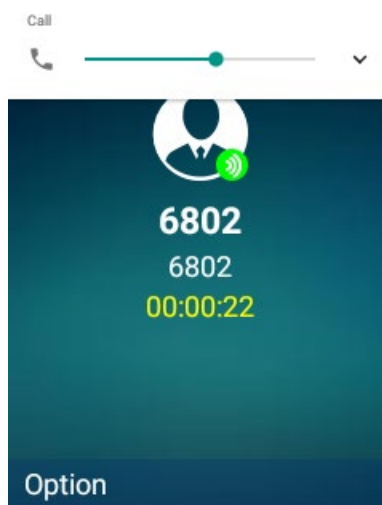


Figure 124 : Volume Adjustment

About

After the user enters the standby interface, manually operate key: menu - >About. As shown in the following figure:

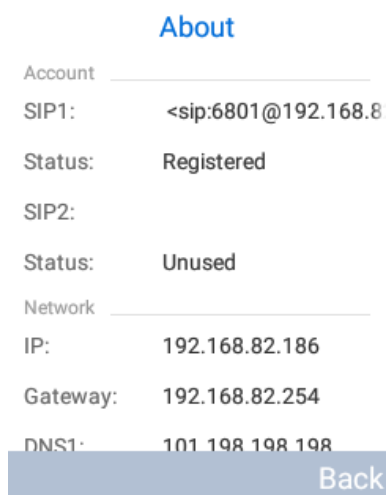

Note 125 : About Interface 1

[About](#)

DNS1:	119.29.29.29
DNS2:	114.114.114.114
MAC:	4c:3b:74:03:47:72
VPN	
Status:	Unused
Phone	
Model:	T2+
Application:	VM_3.5.13_T
System:	2_T2+_HW2.0_EN11_

Back

Note 126 : About Interface 2

Main Function and Features

Check the account information, network information, VPN information and product information of the terminal set.

Account information: account number, registration state;


Network information: IP address, gateway, DNS server 1, DNS server 2, physical address;

VPN: IP address;

Product information: model, application version, system version.

Web Setting


Open the browser, enter the terminal's IP address in the browser's address bar, and log in to the terminal device WEB page with the default password (empty). As shown in the following figure:

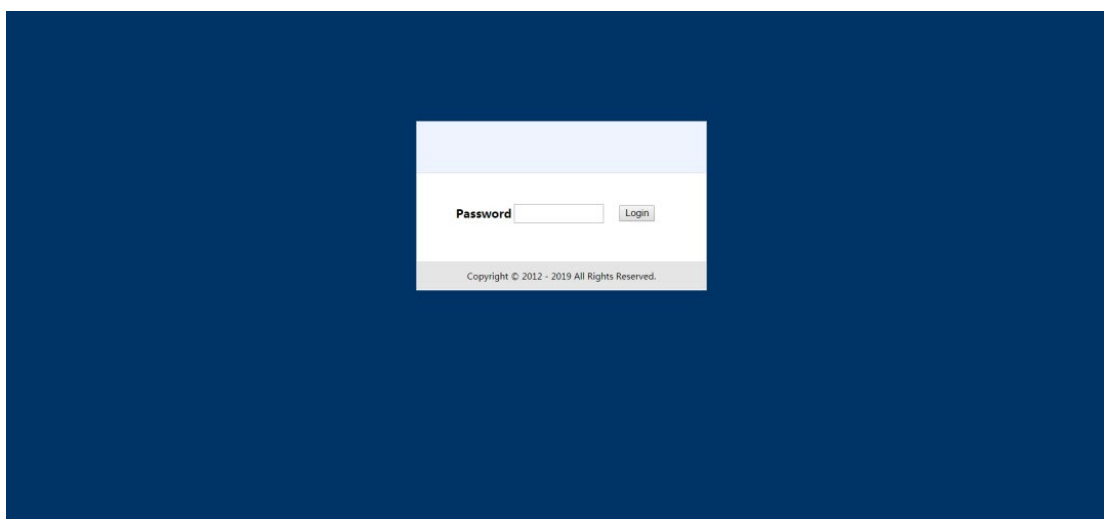

Note 127 : WEB Login

State

After logged in, enters the home page. The status page can be used to check the system information, account status and network status of the terminal. As shown in the following figure:

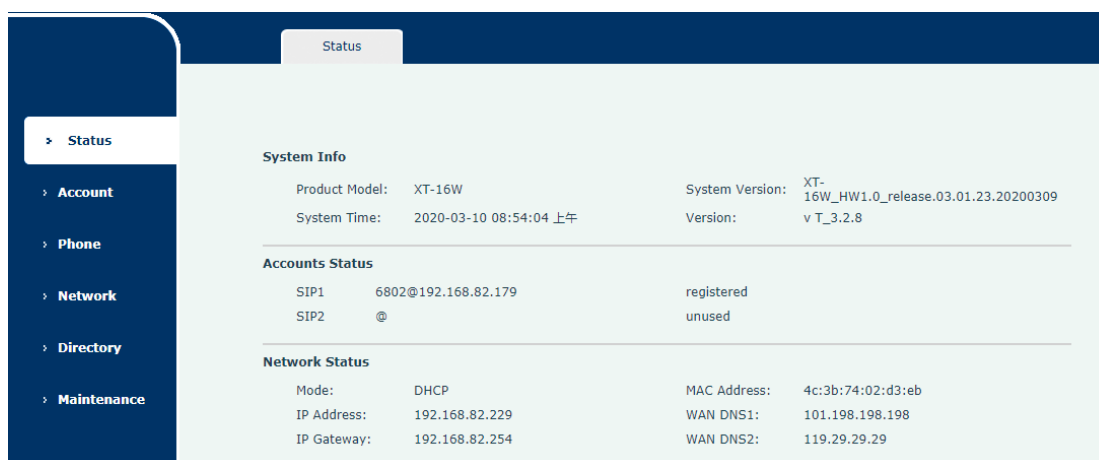

Note 128 : Status Page

Account Setting

Click Account->SIP, start account setting function through this page, setting up account, audio encoding, call, Advanced, etc.

Note 129 : Account Setting

Enable/Disable account

Click Account->SIP, enter account setting page, and start account setting function by select Enable Account.

Note 130 : Account Setting Switch

Basic Setting

Click Account->SIP->General Settings, enter the basic setting page. As shown in the following figure:

Enable Account ☒

General Settings>>

Status	registered	Enable Register	☒
*Domain	192.168.91.136	Display Name	008
*User ID	008	Account Name	008
Password	*****	Proxy Server Address	
Auth ID	Vog00608	Backup Proxy Server Address	

Call settings>>

Advanced Settings>>

Note 131 : Foundation Setting

- Command function: basic settings
- Required parameters:

Domain

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: registration server address.

User ID

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: terminal SIP user to user ID

- Optional parameter:

Enable Register

Input mode: check box selection.

Parameter description: start the registration function.

Authentication ID

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: SIP end user's authentication ID

Password

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: SIP end user's authentication password.

Display name

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: User name used by the terminal when initiating a call.

Proxy Server Address

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: with the presence of the proxy server, the server address registered by the terminal SIP user and the sending address of the terminal SIP user when the call is initiated.

Backup Proxy Server Address

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: without the presence of the proxy server, the server address registered by the terminal SIP user and the sending address of the terminal SIP user when the call is initiated.

Note: After setting, the "Apply" key must be clicked to save, otherwise it will not work.

Call Setting

Click Account->SIP->Call Settings, enter call setting page. As shown in the following figure:

Enable Account ☒

General Settings>>

Call settings>>

Always Forward	☐	Always Forward Number	
Busy Forward	☐	Busy Forward Number	
No Answer Forward	☐	No Answer Number	
No Answer Time	60 (0-120 s)	Anonymous Call	☐
Do Not Disturb	☐	Ban Anonymous Call	☒

Advanced Settings>>

Note 132 : Call Set-up

- Command function: call settings
- Optional Parameter:

Always Forward

Input mode: drop-down box selection.

Parameter description: start the unconditional transfer function.

Always Forward Number

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: start the always forward number function.

Busy Forward

Input mode: check box selection.

Parameter description: start the busy forward number function.

Busy Forward Number

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: busy forward number.

No Answer Forward

Input mode: check box selection.

Parameter description: start the no answer forward number function.

No Answer Number

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: no answer forward number.

No Answer Time

Input mode: input by hand, format - number,

Parameter description: no answer time.

Do Not Disturb

Input mode: check box selection.

Parameter description: start do not disturb function.

Anonymous Call

Input mode: check box selection.

Parameter description: start anonymous function.

Ban Anonymous Call

Input mode: check box selection.

Parameter description: start ban anonymous function.

Note: After setting, the "Apply" key must be clicked to save, otherwise it will not work.

Advanced setting

Click Account->SIP->Advanced Settings, enter Advanced page. As shown in the following figure:

Enable Account ☒

General Settings>>

Call settings>>

Advanced Settings>>

Session Timer Mode

Inactive

Session Expires

180

(≥ 90s)

Session MinSE

90

(≥ 90s)

Use SRTP Mode

None

100 REL

Not Used

Transport Protocol

UDP

MWI Subscription

☒

Enable Missed Call Log

☒

Only Receive ServerCalls

☐

DTMF Type

Auto

Keep Auth

☐

DNS SRV

☐

UDP Keep-alive Message

☒

UDP Keep-alive Interval

30

(> 0s)

Local Port

5060

(1025~65535)

RTP port:

10000

(1025~65535)

MWI Cycle

900

Register Expire

90

(> 60s)

Dial Plan

Apply

Note 133 : Advanced Setting

- Command function: Advanced
- Required parameters:

Session Timer Mode

Input mode: drop-down box selection (default: Inactive)

Parameter description: Session timer mode.

Session Expires

Input mode: input by hand, format – number.

Parameter description: Session MinSE expires (>=Session MinSE)

Session MinSE

Input mode: input by hand, format – number.

Parameter description: Session MinSE time (>=90s)

Use SRTP Mode

Input mode: drop-down box selection.

Parameter description: secure real-time transmission protocol selection.

100 REL

Input mode: drop-down box selection.

Parameter description: 100REL parameter selection.

Transport Protocol

Input mode: drop-down box selection.

Parameter description: transport protocol selection.

Local Port

Input mode: input by hand, format – number.

Parameter description: Local port (default: 5060, range: 1025-65535)

DNS SRV

Input mode: check box selection.

Parameter description: start DNS SRV function.

UDP Keep-alive Message

Input mode: check box selection.

Parameter description: start UDP Keep-alive Message function.

UDP Keep-alive Interval

Input mode: input by hand, format – number.

Parameter description: UDP Keep-alive Interval

MWI Subscription

Input mode: check box selection.

Parameter description: start MWI subscription function.

NWI Cycle

Input mode: input by hand, format – number.

Parameter description: NWI cycle.

Register Expire

Input mode: input by hand, format – number.

Parameter description: Register Expire.

Only Receive Server Calls

Input mode: check box selection.

Parameter description: start only receiving server calls function.

Dial Plan

Input method: manual key input - string, English numeric special characters can be.

Parameter description: Calls are allowed only if the number that meets the set rules. The rules need to be set by the user and the rules need to follow regular expressions.

Note: After setting, the "Apply" key must be clicked to save, otherwise it will not work.

Phone Settings

Click Phone, which is shown as follows, and start the phone date & time setting, Preferences, function settings, language settings, etc though this page.

The screenshot shows the VOGTEC web interface. At the top right is a 'LOGOUT' button. Below it is a navigation bar with tabs: 'Time&Date', 'Preference', 'Feature', 'Media', and 'Language'. On the left is a sidebar menu with options: 'Status', 'Account', 'Phone' (highlighted), 'Network', 'Directory', and 'Maintenance'. The main content area is titled 'Date and Time Settings' and contains the following fields:

- 24-Hour Clock: ☐
- Manual Time: ☐
- Obtained Server Address from DHCP Option43: ☐
- Server Address:
- Resync Cycle: Hour
- Timezone:

An 'Apply' button is located at the bottom of the settings area.

Note 134 : Phone Set-up Interface

Date and Time Settings

Click Phone->Time&Date->Date and Time Settings, and enter Date and Time Settings page, As shown in the following figure:

This screenshot is identical to the one in Note 134, showing the 'Date and Time Settings' page in the VOGTEC interface. It displays the same sidebar, navigation tabs, and configuration fields for time and date settings.

Note 135 : Date and Time Setting

- Command function: Date and Time Settings
- Required parameters:

24-Hour Clock

Input mode: check box selection.

Parameter description: whether the standby interface time is displayed in 24 hours.

Manual Time

Input mode: check box selection.

Parameter description: manual date and time settings.

Obtained Server Address from DHCP Option43

Input mode: check box selection.

Parameter description: Obtained Server Address from DHCP Option43

Server Address

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: server address

Re-sync Cycle

Input mode: input by hand, format - number (default: 10080)

Parameter description: the re-sync cycle with the time server.

Time zone

Input mode: drop-down box selection (default: Beijing)

Parameter description: the time zone that the terminal belongs to.

Note: After setting, the "Apply" key must be clicked to save, otherwise it will not work.

Preferences

Screen settings

Click Phone->Preference->Screen Settings and enters screen setting page, As shown in the following figure:

Note 136 : Screen Setting

- Command function: screen settings
- Required parameters:

Unlock Password

Input mode: input by hand, format - number (default: 1234)

Parameter description: unlock password.

Auto Lock Screen

Input mode: check box selection.

Parameter description: auto lock the screen when the terminal is off.

Device Brightness

Input mode: check box selection (default: Middle).

Parameter description: device brightness

Backlit Time

Input mode: drop-down box selection (default: 60s)

Parameter description: backlit Time

Date Format

Input mode: drop-down box selection (default: 1 Jan, Mon)

Parameter description: date format.

Date Separator

Input mode: drop-down box selection (default: -)

Parameter description: date separator

Note: After setting, the "Apply" key must be clicked to save, otherwise it will not work.

Ring-tone Setting


Click Phone->Preference->Ring-tone Setting, enters ring tone setting page, As shown in the following figure:

Ringtone Setting	
Upload Ringtone	Choose File No file chosen Upload (*.wav/*.mp3)
Ringtone Type	Andromeda Apply Delete

Note 137 : Ring-tone Setting

Upload Ring Tone

Click Phone->Preference->Ring-tone Setting, and enter ring tone setting page, click [Select File] key, appear the interface as shown below, choose to upload ring-tone file and click OK, in the ring settings page click on the [Upload] key to complete the upload ring-tone.

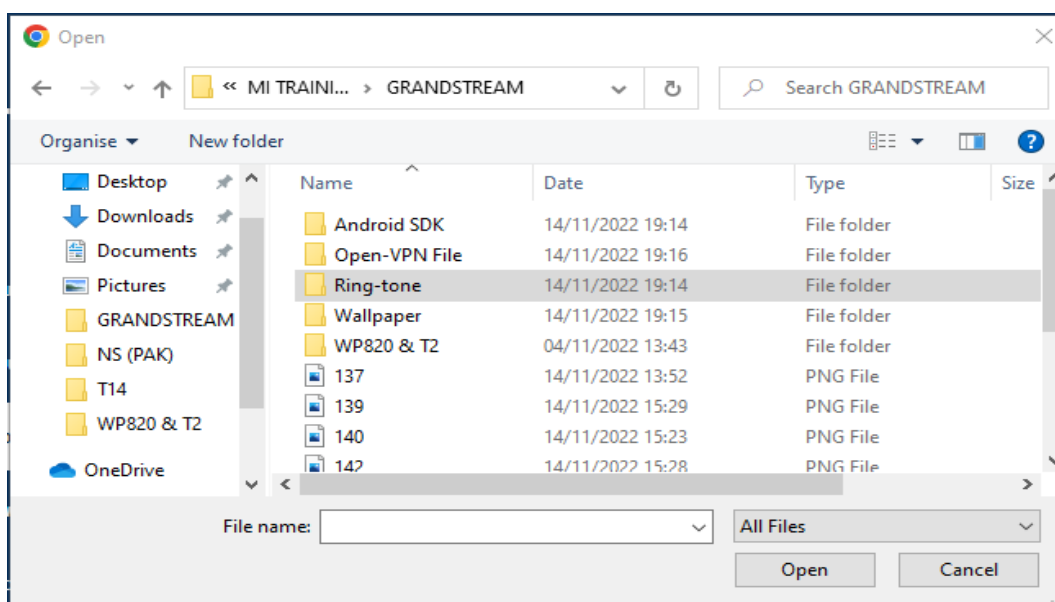

Note 138 : Ring-tone Selection

Delete Ring-tone

Click Phone->Preference->Ring-tone Setting, and enter ring-tone setting page, click [Ring-tone Type] key, choose the ring-tones file and click [Delete] key. The ring-tone deletion operation can be completed by clicking in the delete confirmation window that pops out.

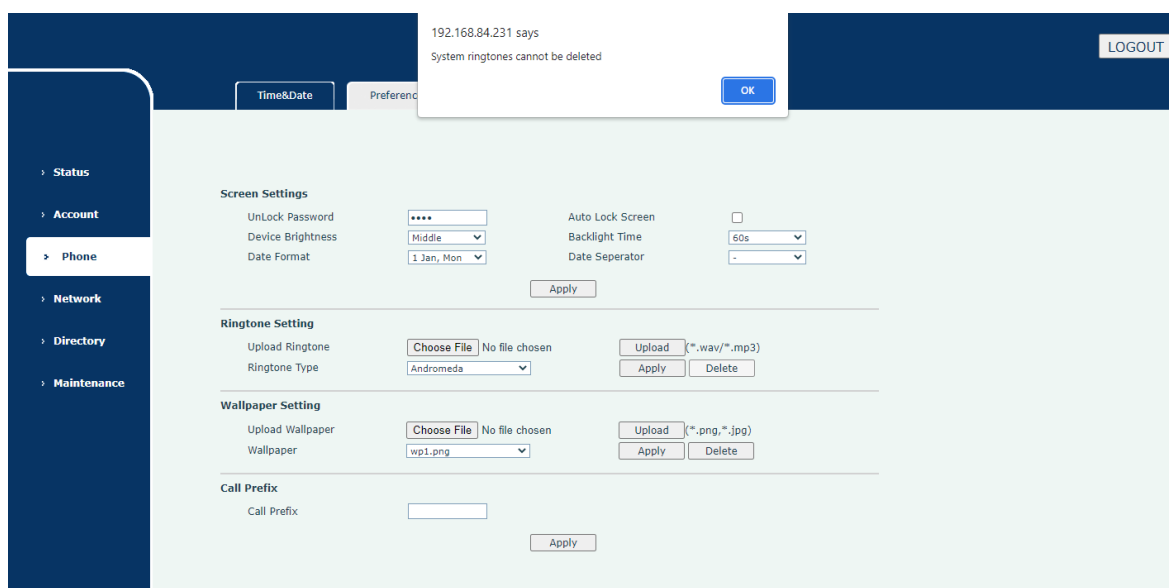


Figure 139 : Delete Ring-tone Confirmation

Note: Default /system ring-tone cannot be deleted.

Ring-tone Setting

Click Phone->Preference->Ring-tone Setting, and enter ring-tone setting page, click [Ring-tone Type] key, choose the ring-tones file and click [Apply] key, the ring-tone setting operation can be completed.

Wallpaper Settings

Click Phone->Preference->Wallpaper Setting, enter the wallpaper settings page, As shown in the following figure:

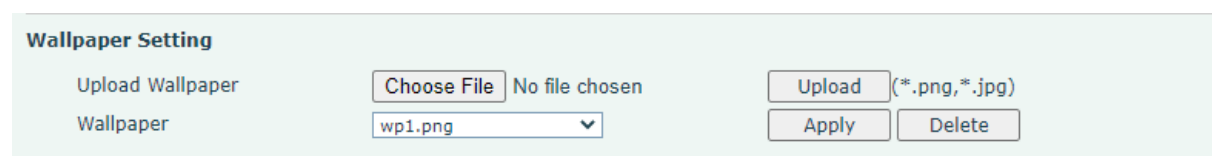


Figure 140 : Wallpaper Setting

Upload Wallpaper

Click Phone->Preference-> Wallpaper Setting, and enter Wallpaper setting page, click [Select File] key, appear the interface as shown below, choose to upload Wallpaper file and click OK, in the ring settings page click on the [Upload] key to complete the upload Wallpaper.

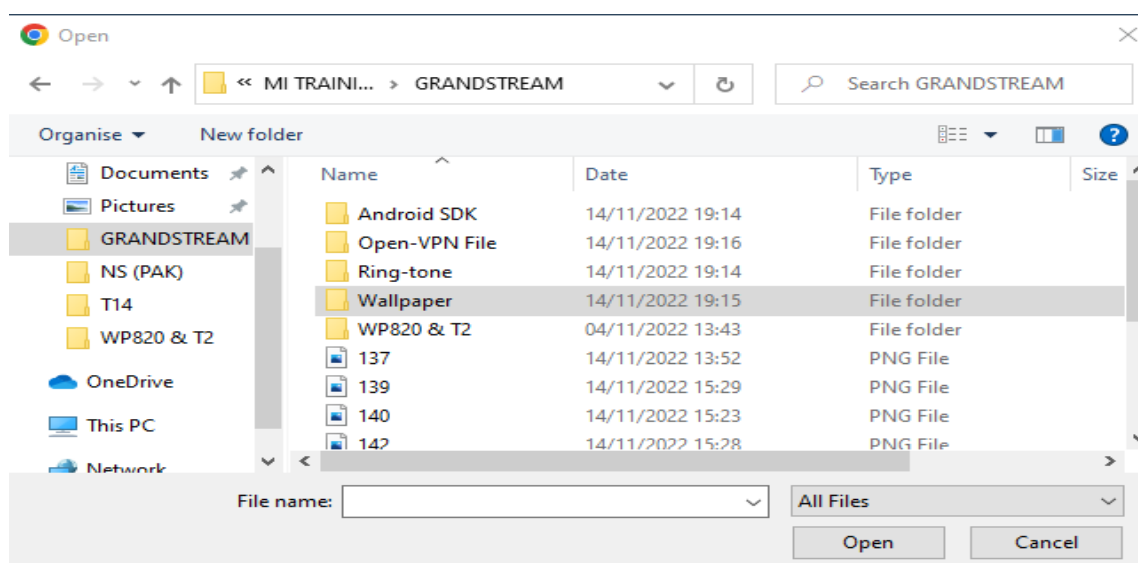


Figure 141 : Upload Wallpaper Selection

Delete Wallpaper

Click Phone->Preference-> Wallpaper Setting, and enter Wallpaper setting page, click [Wallpaper Type] key, choose the Wallpaper file and click [Delete] key. The Wallpaper deletion operation can be completed by clicking the delete confirmation window that pops out.

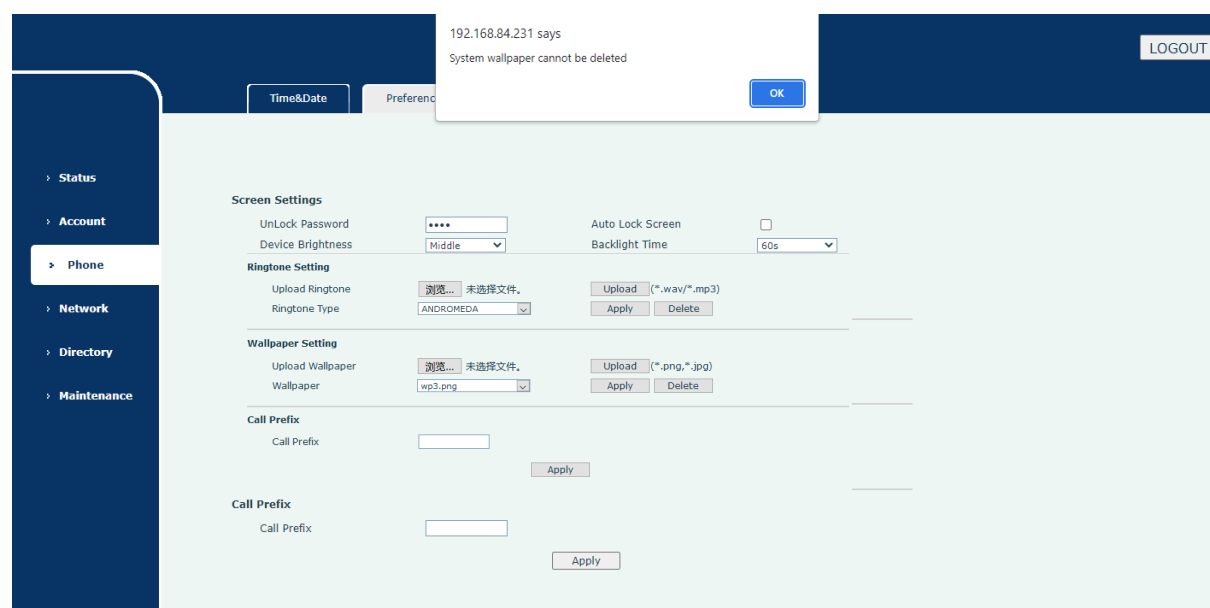


Figure 142 : Delete Wallpaper Confirmation

Note: default/system wallpaper cannot be deleted.

Wallpaper Setting

Click Phone->Preference->Wallpaper Setting, enter the wallpaper setting page, click the [Wallpaper] drop-down box, select the wallpaper to set and click the [Apply] key to complete the wallpaper setting operation.

Auto Restart Settings

Click Phone->Preference->Auto Restart, Enter the device automatic restart page, As shown in the following figure:

Auto Restart

Device Auto Restart ☒

Auto Restart Time(hh:mm):

Apply

Note 143 : Auto Restart Setting

Call Prefix Settings

Click Phone->Preference->Call Prefix, Enter the device function setting page, As shown in the following figure:

Call Prefix

Call Prefix

Apply

Note 144 : Call Prefix Setting

Feature Settings

Click Phone->Feature, enters feature settings page, As shown in the following figure:

Feature Settings

Device DND ☐

Incoming Intercom ☒

Call Waiting ☒

Call Out Timeout (30~120 s)

Auto Redial ☐

Auto Redial Times (0~99 s)

Menu Type:

Auto Answer after pickup from the base: ☒

Don't Escape '#' as %23 ☐

Intercom Tone ☒

Call Waiting Tone ☒

Incoming Timeout (30~120 s)

Auto Redial Interval (0~999 s)

Emergency Call Number

Local PhoneBook First: ☐

Apply

Note 145 : Function Setting

- Command function: feature settings

- Optional parameters:

Device DND

Input mode: check box selection.

Parameter description: start auto device DND function

Don't Escape '#' as %23

Input mode: check box selection.

Parameter description: start don't escape '#' as %23 function

Incoming Intercom

Input mode: check box selection.

Parameter description: start Incoming intercom function

Incoming Tone

Input mode: check box selection.

Parameter description: start Incoming Tone function

Call Waiting

Input mode: check box selection.

Parameter description: start call waiting function

Call Waiting Tone

Input mode: check box selection.

Parameter description: start wall waiting tone.

Call Time-out Time

Input mode: input by hand, format – number.

Parameter description: Call time-out time (range: 30-120)

Incoming time-out Time

Input mode: input by hand, format – number.

Parameter description: Incoming time-out time (range: 30-120)

Auto Redial

Input mode: check box selection.

Parameter description: start auto redialling function.

Auto Redial Interval

Input mode: input by hand, format – number.

Parameter description: auto redial interval (range: 0-999)

Auto Redial Times

Input mode: input by hand, format – number.

Parameter description: auto redial times (range: 0-999)

Emergency Call Number

Input mode: input by hand, format – number.

Parameter description: emergency call number settings.

Menu Type

Input mode: drop-down box selection (default: Normal)

Parameter description: menu type.

Pick up auto responder from charging dock

Input mode: Check box selection.

Parameter description: Start and finish charging automatic reply.

Note: After setting, the "Apply" key must be clicked to save, otherwise it will not work.

Media

Click Phone->Media, enters media setting page, As shown in the following figure:

Figure 146 : Media Setting

- Command function: media
- Optional parameters:

Choice 1-6

Input mode: drop-down box selection.

Parameter description: audio coding supported by terminal SIP users, selected according to actual conditions, range of values (PCMA、PCMU、G729、GSM、G722、OPUS、Speex-WB)

Enable Call Video

Input mode: drop-down box selection.

Parameter description:Enable Call Video.

Play-load

Input mode: input by hand, format – number.

Parameter description: Play-load parameter.

G729AB Packaging Time

Input mode: drop-down box selection.

Parameter description: the length of terminal RTP, selected according to actual situation, range of value (10, 20, 30, 40, 50, 60ms)

User_Agent

Input mode: Fill in by hand, format -- English number is OK.

Parameter description:User agent name

Note: After setting, the "Apply" key must be clicked to save, otherwise it will not work.

Language

Click Phone->Language, enters language setting page, As shown in the following figure:

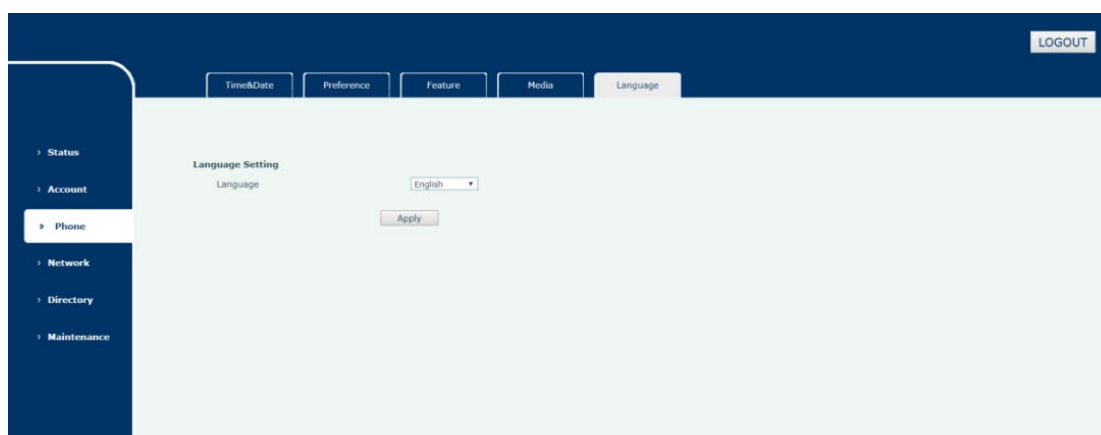


Figure 147 : Language Setting

- Command function: language settings
- Optional parameters:

Language

Input mode: drop-down box selection (default: English)

Parameter description: language shown in the terminal.

Note: After setting, the "Apply" key must be clicked to save, otherwise it will not work.

Network Setting

Click Network to display as follows, through this page, you can set WLAN settings, QoS settings, VPN settings and so on.

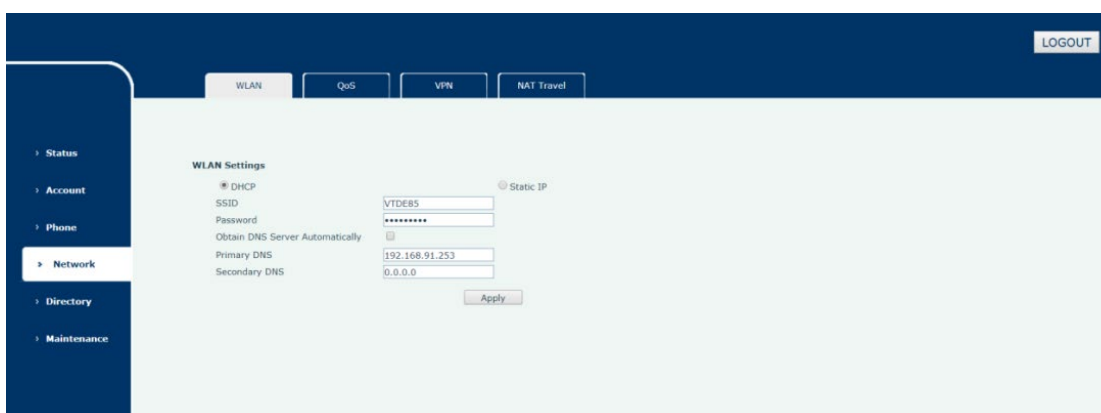


Figure 148: Network Setting

WLAN

DHCP

Click Network->WLAN->WLAN Settings, enter WLAN setting page, click DHCP, As shown in the following figure:

Figure 149 : WLAN Settings (DHCP)

- Command function: WLAN setting (DHCP)
- Optional parameters:

SSID

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: hotspot SSID

Password

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: hotspot password

Note: After setting, the "Apply" key must be clicked to save, otherwise it will not work.

Static IP

Click Network->WLAN->WLAN Settings, enter WLAN setting page, click Static IP, As shown in the following figure:

WLAN Settings

☐ DHCP ☒ Static IP

SSID: PHICOMM_2.4G

Password: [masked]

IP Address: 192.168.86.234

Subnet Mask: 255.255.255.0

IP Gateway: 192.168.86.254

Primary DNS: 202.96.134.133

Secondary DNS: 114.114.114.114

Apply

Figure 150 : WLAN Settings (Static IP)

- Command function: WLAN settings (static IP)
- Optional parameters:

SSID

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: hotspot SSID

Password

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: hotspot password

IP Address

Input mode: input by hand, format - IP address format, point decimal point.

Parameter description: IP address

Subnet Mask

Input mode: input by hand, format - IP address format, point decimal point.

Parameter description: subnet mask.

IP Gateway

Input mode: input by hand, format - IP address format, point decimal point.

Parameter description: gateway address

Primary DNS

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: primary DNS

Secondary DNS

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: secondary DNS

Note: After setting, the "Apply" key must be clicked to save, otherwise it will not work.

QoS

Click Network->QoS->Quality of Service (QoS) Settings, enter QoS setting pag, As shown in the following figure:

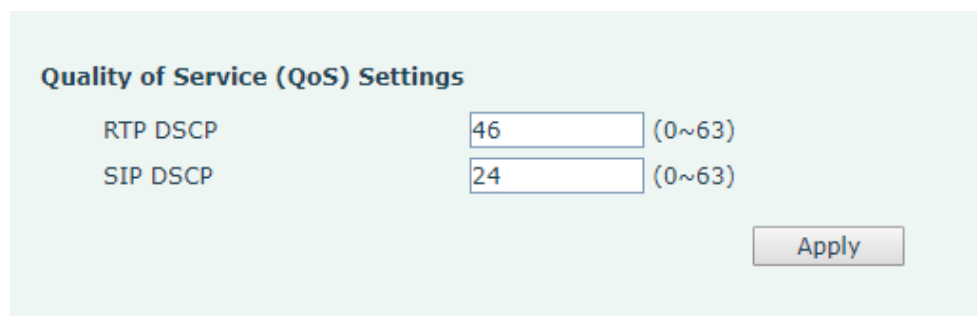


Figure 151 : QoS Setting

- Command function: QoS setting
- Optional parameters:

RTP DSCP

Input mode: input by hand, format – numbers (range: 0-63)

Parameter description: RTP DSCP

SIP DSCP

Input mode: input by hand, format – numbers (range: 0-63)

Parameter description: SIP DSCP

Note: After setting, the "Apply" key must be clicked to save, otherwise it will not work.

VPN

Click Network->VPN to display as follows, through this page, enable VPN function to set up and view VPN.

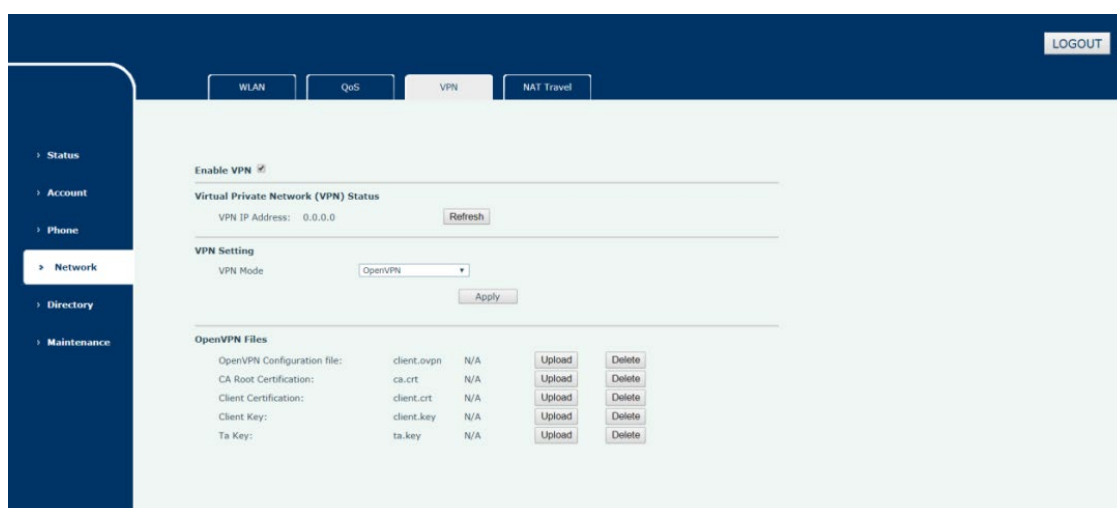


Figure 152 : VPN Set-up Interface

ON/OFF

Click Network->VPN to enter the VPN set-up page and start the VPN set-up function by tick Enable VPN. As shown in the following figure:

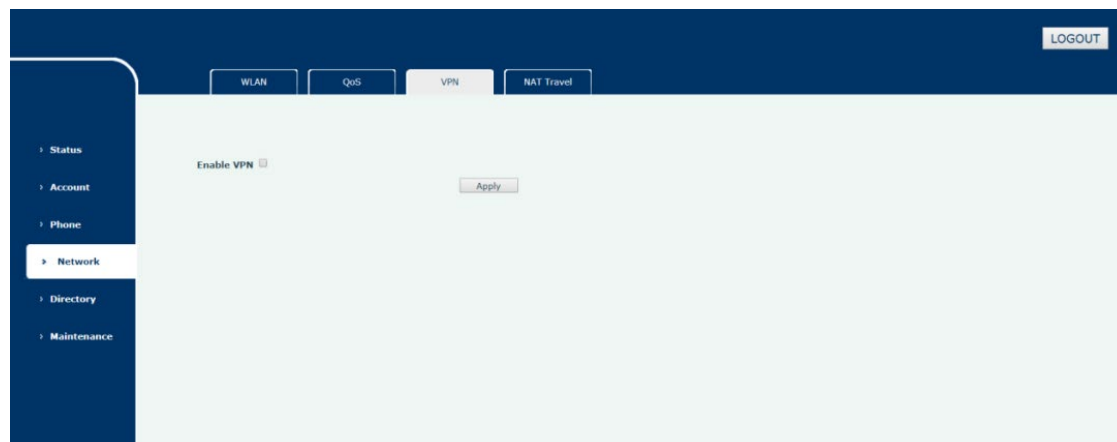


Figure 153 : VPN Setting Switch

VPN settings

Click Network->VPN->Virtual Private Network (VPN) Status, enter the VPN status page. You can see the status and the address of VPN connection on this page. As shown in the following figure:

Enable VPN ☒

Virtual Private Network (VPN) Status

VPN IP Address: 0.0.0.0 Refresh

VPN Setting

VPN Mode OpenVPN Apply

OpenVPN Files

OpenVPN Configuration file:	client.ovpn	N/A	Upload	Delete
CA Root Certification:	ca.crt	N/A	Upload	Delete
Client Certification:	client.crt	N/A	Upload	Delete
Client Key:	client.key	N/A	Upload	Delete
Ta Key:	ta.key	N/A	Upload	Delete

Figure 154 : VPN Connection Status

Click Network->VPN-> Virtual Setting enter the VPN setting page. As shown in the following figure:

Enable VPN ☒

Virtual Private Network (VPN) Status

VPN IP Address: 0.0.0.0 Refresh

VPN Setting

VPN Mode OpenVPN Apply

OpenVPN Files

OpenVPN Configuration file:	client.ovpn	N/A	Upload	Delete
CA Root Certification:	ca.crt	N/A	Upload	Delete
Client Certification:	client.crt	N/A	Upload	Delete
Client Key:	client.key	N/A	Upload	Delete
Ta Key:	ta.key	N/A	Upload	Delete

Figure 155 : VPN Setting

- Command function: VPN Setting
- Optional parameters:

VPN Mode

Input mode: drop-down box selection

Parameter description: VPN mode

Open-VPN files

Upload files

Click Network->VPN->Open-VPN Files, enter the Open-VPN file setting page, in order to upload the corresponding location of the file, click the [Upload] key, appear the interface as shown below, select the Open-VPN file to upload to complete the file upload operation.

OpenVPN Files				
OpenVPN Configuration file:	client.ovpn	N/A	Upload	Delete
CA Root Certification:	ca.crt	N/A	Upload	Delete
Client Certification:	client.crt	N/A	Upload	Delete
Client Key:	client.key	N/A	Upload	Delete
Ta Key:	ta.key	N/A	Upload	Delete

Figure 156 : Open-VPN File Upload

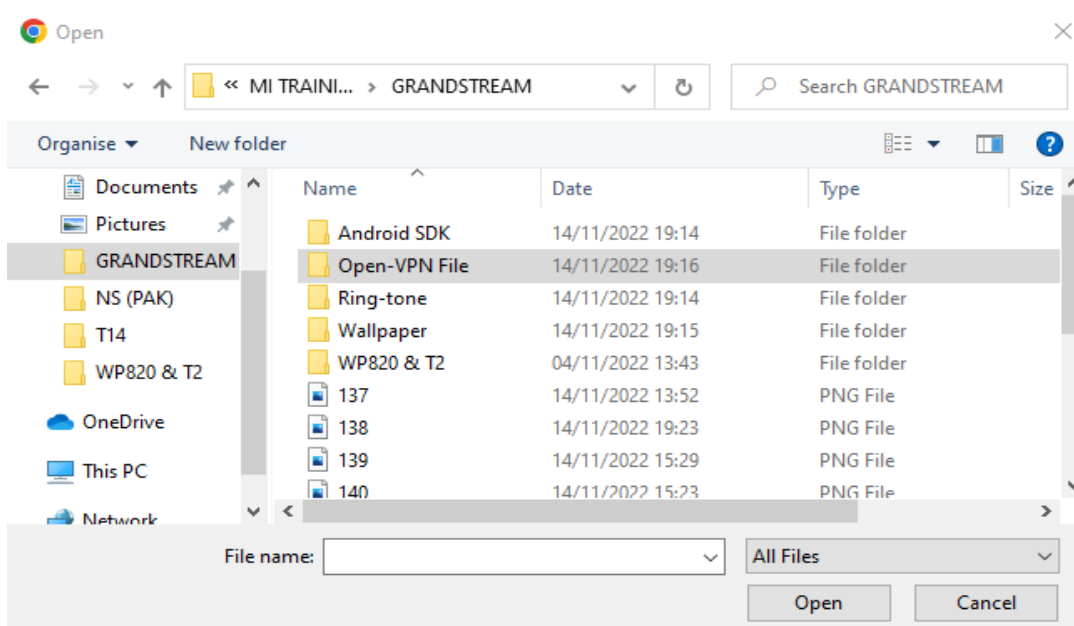


Figure 157 : Open-VPN File Selection

File Delete

Click Network->VPN->Open-VPN Files, enter the Open-VPN file setting page, in order to upload the corresponding location of the file, click the [Delete] key, appear the interface as shown below, select the Open-VPN file to upload to complete the file delete operation.



Figure 158 : Open-VPN File Deletion

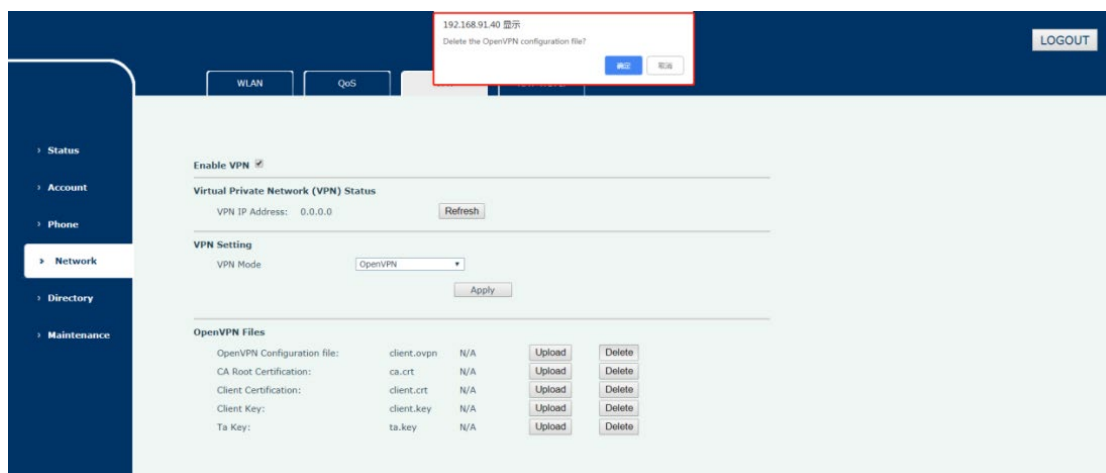


Figure 159 : Open-VPN File Delete Confirmation

NAT Travel

Click Network->NAT Travel ,to enter the STUN settings page, As shown in the following figure:

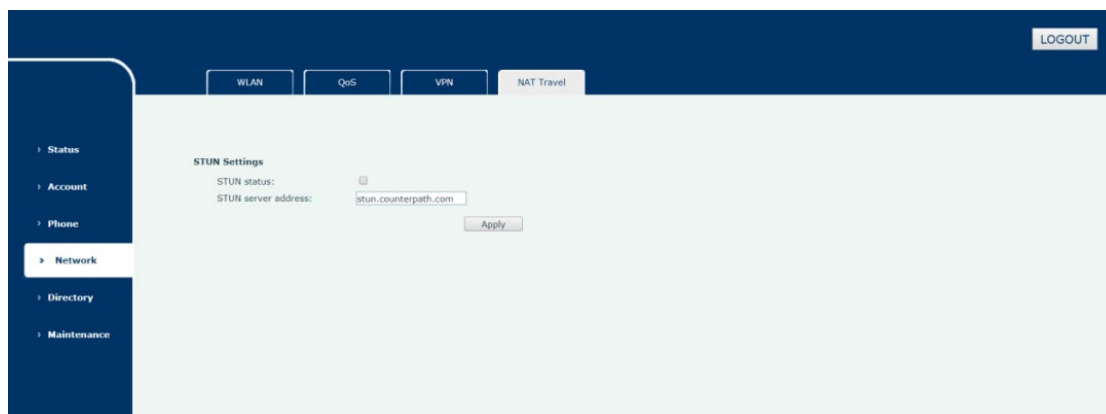


Figure 160 : Start STUN Feature

STUN status

Input mode: check box selection.

Parameter description: start STUN function.

STUN Server address

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: STUN server address.

Note: After setting, the "Apply" key must be clicked to save, otherwise it will not work.

Directory

Click Directory to show the following settings. Through this page, you can set up local phone book, remote phone book, phone book import and export, LDAP and so on.

Figure 161 : Phone Book

Local directory

Add Contacts

Click Directory->Contacts->local directory->Contacts, enter the contact setting page, edit the contact in Contacts, and click the [Add]key to complete the contact addition operation. As shown in the following figure:

The screenshot shows a web form titled 'Contacts'. It contains several input fields and dropdown menus. The fields are: Name (text input with 'Lily'), Office Number (text input with '2000'), Mobile Number (text input with '2001'), Other Number (text input with '2002'), Account (dropdown menu with '1000'), Ring (dropdown menu with 'Atria'), and Group (dropdown menu with 'Default'). At the bottom of the form, there are three buttons: 'Add', 'Edit', and 'Search'. The 'Add' button is highlighted with a red rectangular box.

Figure 162 : Add Contact

- Command function: Add contacts
- Optional parameters:

Name

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: the name of the added contact.

Office Number

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: the business phone of the added contact.

Mobile Number

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: the cell phone number of the added contact.

Other Number

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: the others phone numbers of the added contact.

Account

Input mode: drop-down box selection

Parameter description: associated account of the added contact

Ring

Input mode: drop-down box selection

Parameter description: the ringing tone played by the terminal when the contact's calling the terminal.

Group

Input mode: drop-down box selection.

Parameter description: group of the added contact.

After adding the contacts, users need to click the [Save] key to save the added contacts.

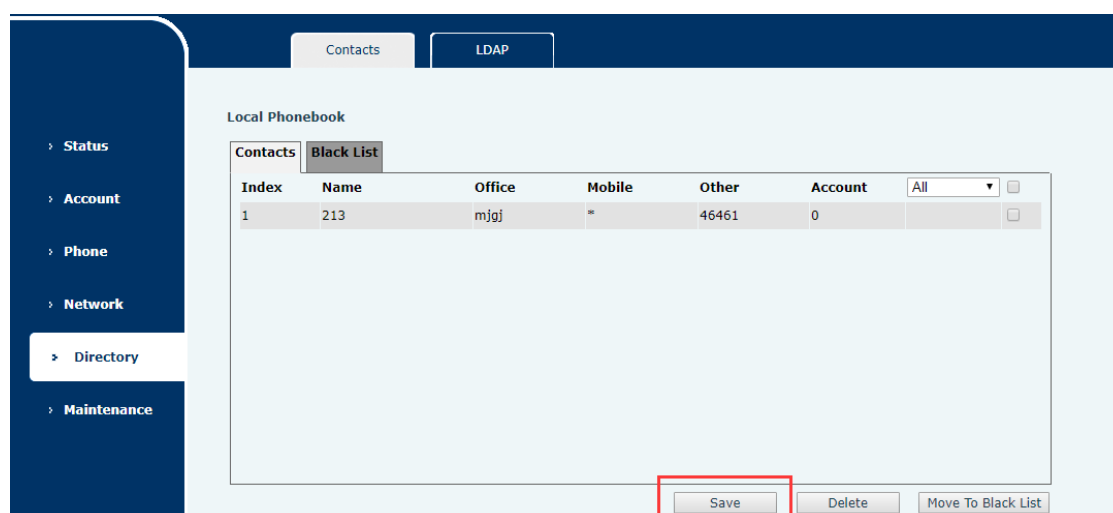


Figure 163 : Save Changes

Edit

Click Directory->Contacts->local directory->Contacts, enter the contact settings page, select the contact that needs to be edited in the Contacts list and edit the contact in the Contacts edit page. When the editor is finished, click the [Edit] key to complete the contact editing operation. As shown in the following figure:

Figure 164 : Edit Contact

- Command function: Edit contacts
- Optional parameter:

Name

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: name of the contact

Office Number

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: business of the contact

Mobile Number

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: mobile of the contact

Other Number

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: the other phone number of the contact

Account

Input mode: drop-down box selection

Parameter description: the account number that is edited by the editor.

Ring

Input mode: drop-down box selection

Parameter description: the call ringing played by the terminal when the contacts call the terminal

Group

Input mode: drop-down box selection

Parameter description: the group where the contacts are edited.

After users edit the contacts, you need to click the [Save] key to save the edited contacts. As shown in the following figure:

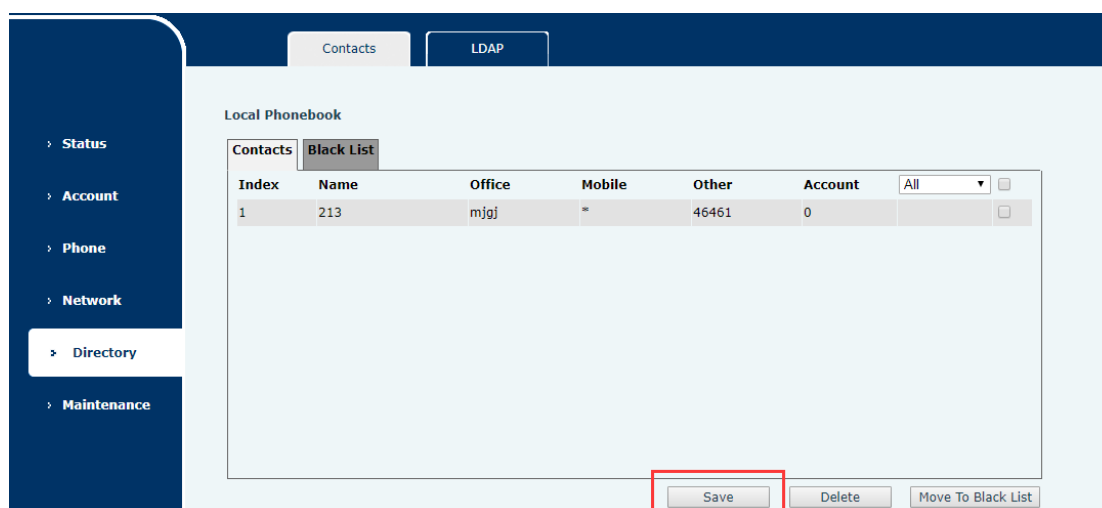


Figure 165 : Save Changes

Search

Click Directory->Contacts->local directory->Contacts, enter the contact settings page, in the Contacts edit page to enter the contact name, office phone, phone number, or other numbers click [Search] key to complete the contact query operation. As shown in the following figure:

Figure 166 : Contact Query

After performing the contact searching operation, you can view the query results in the contact list. As shown in the following figure:

Contacts		Black List					
Index	Name	Office	Mobile	Other	Account	All	
1	213	mjjj	*	46461	0		☒

Figure 167 : Query Results

Delete

Click Directory->Contacts->local directory->Contacts, enter the contact settings page, select the contact that you need to delete in the Contacts list, and click the [Delete] key. As shown in the following figure:

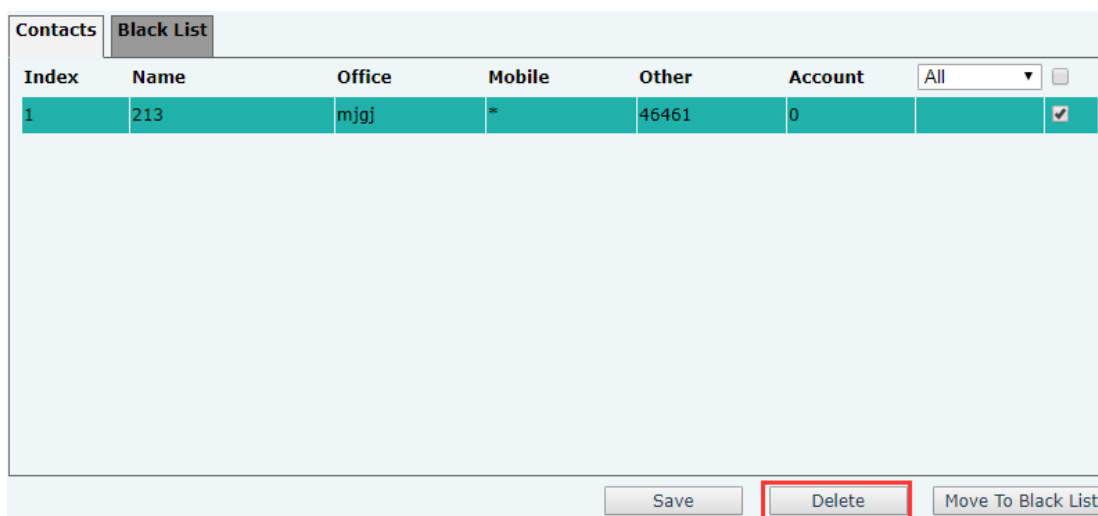


Figure 168 : Delete Contact

After clicking the delete key, the delete prompt window is popped up, and the contact is deleted by clicking confirmation. As shown in the following figure:

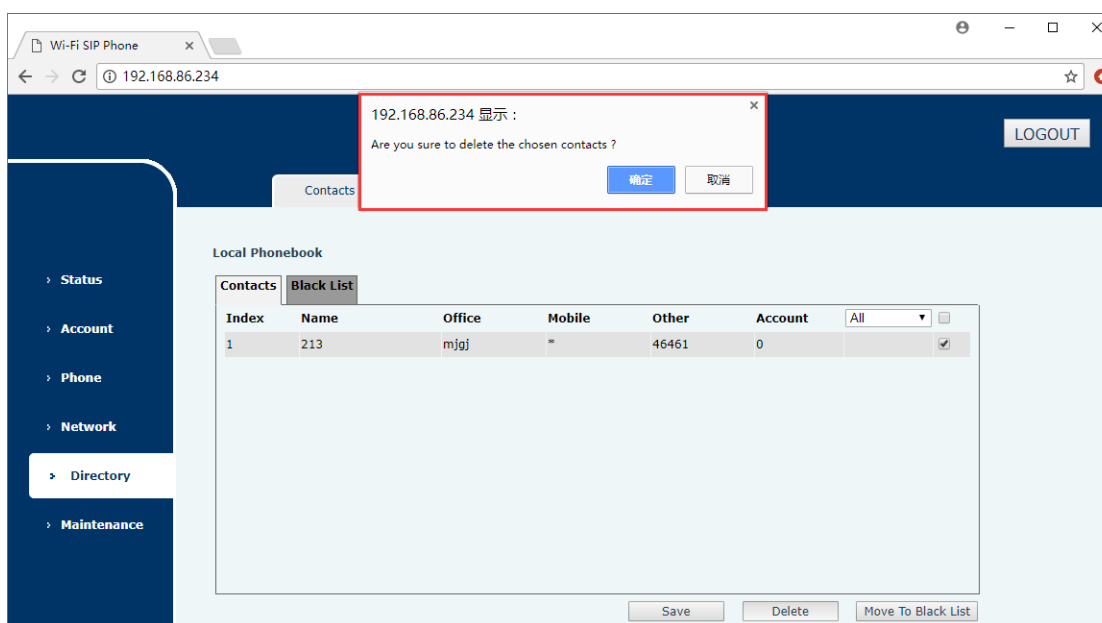


Figure 169 : Contact Deletion Confirmation

After deleting the contact, the user needs to click [Save] key to delete the contact successfully. As shown in the following figure:

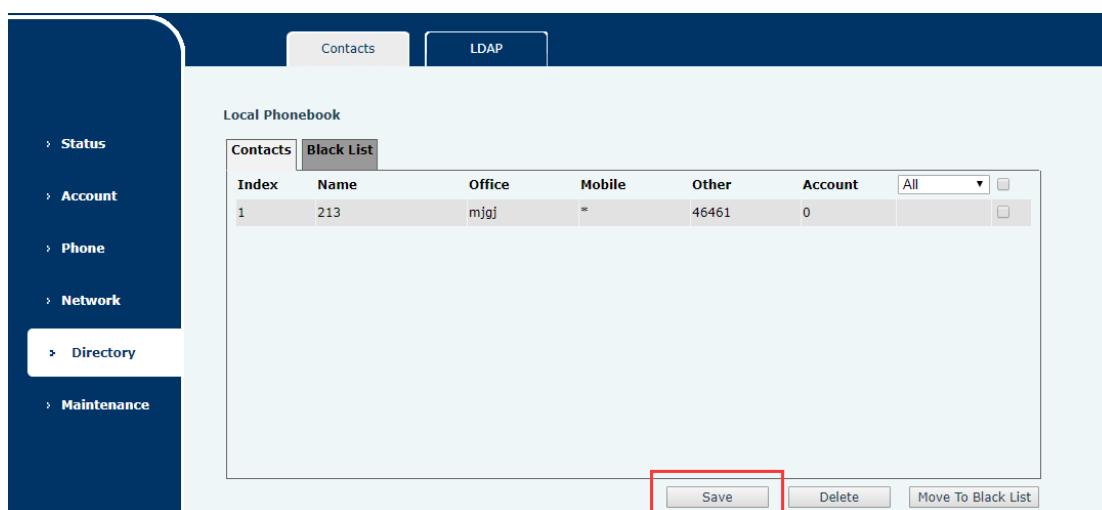


Figure 170 : Save Changes

Move To The Black list

Click on Directory->Contacts->local directory->Contacts, enter the contact settings page, select the contacts that need to be moved to the blacklist in the Contacts list, and click the [Move To Black List key]. As shown in the following figure:

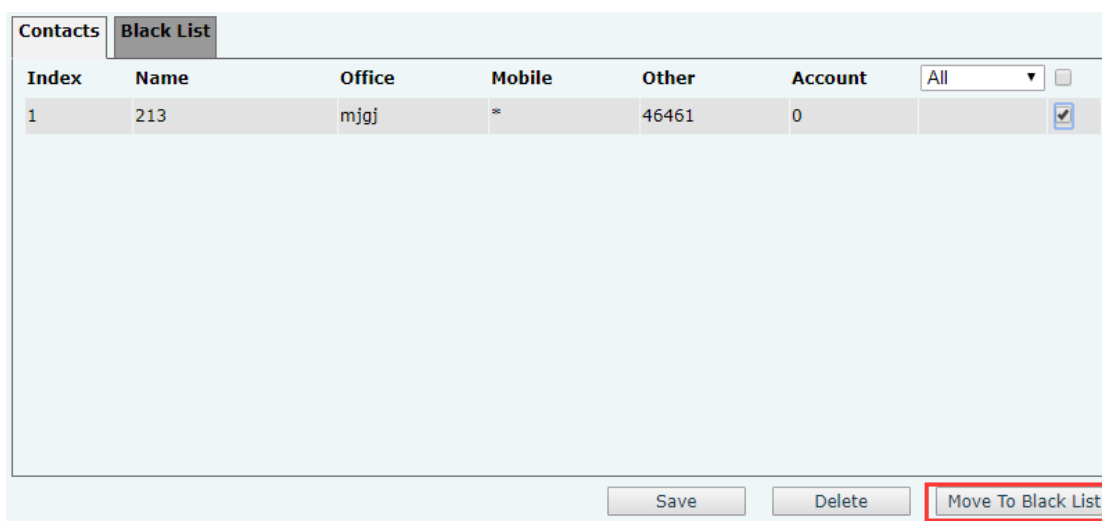


Figure 171 : Move To The Blacklist

After the user moves the contact to the blacklist, click [Save] key to transfer successfully. As shown in the following figure:

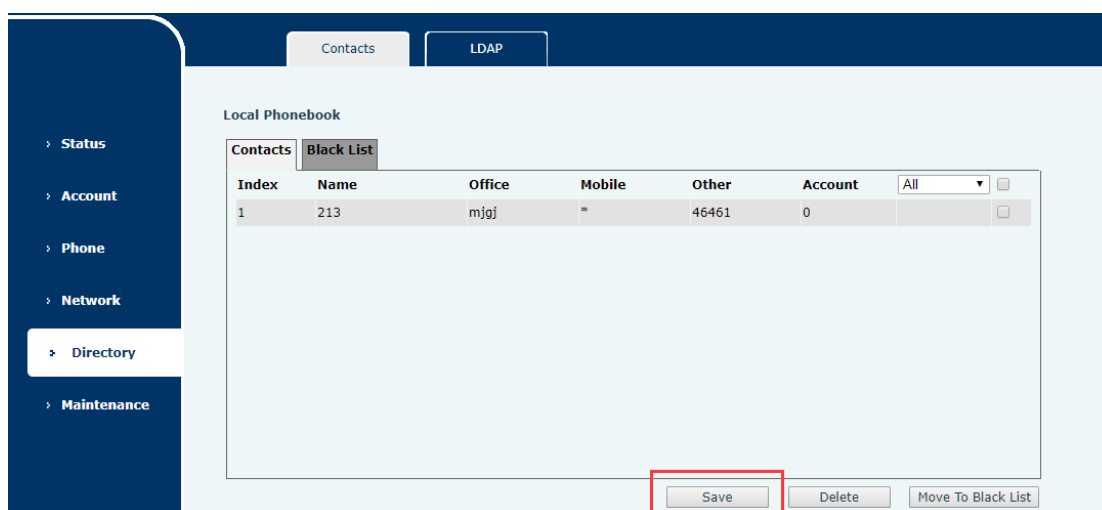


Figure 172 : Save Changes

Black List

Add

Click Directory->Contacts->local directory->Black list, enter the blacklist setting page, edit the blacklist in Contacts, click the [Add] key to complete the blacklist addition operation. As shown in the following figure:

The screenshot shows the 'Add Blacklist' form with the following fields: Name (Lucy), Office Number (3000), Mobile Number (3001), Other Number (3002), and Account (1000). The 'Add' button is highlighted with a red box, along with 'Edit' and 'Search' buttons.

Figure 173 : Add Blacklist

- Command function: add black list
- Optional parameters:

Name

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: the name of the added blacklist.

Office Number

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: the business phone of the added blacklist.

Mobile Number

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: the mobile phone number added to the blacklist.

Other Number

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: the others mobile phone numbers added to the blacklist.

Account

Input mode: drop-down box selection

Parameter description: the account associated with the added blacklist

After adding the blacklist, users need to click the Save key to save the added blacklist. As shown in the following figure:

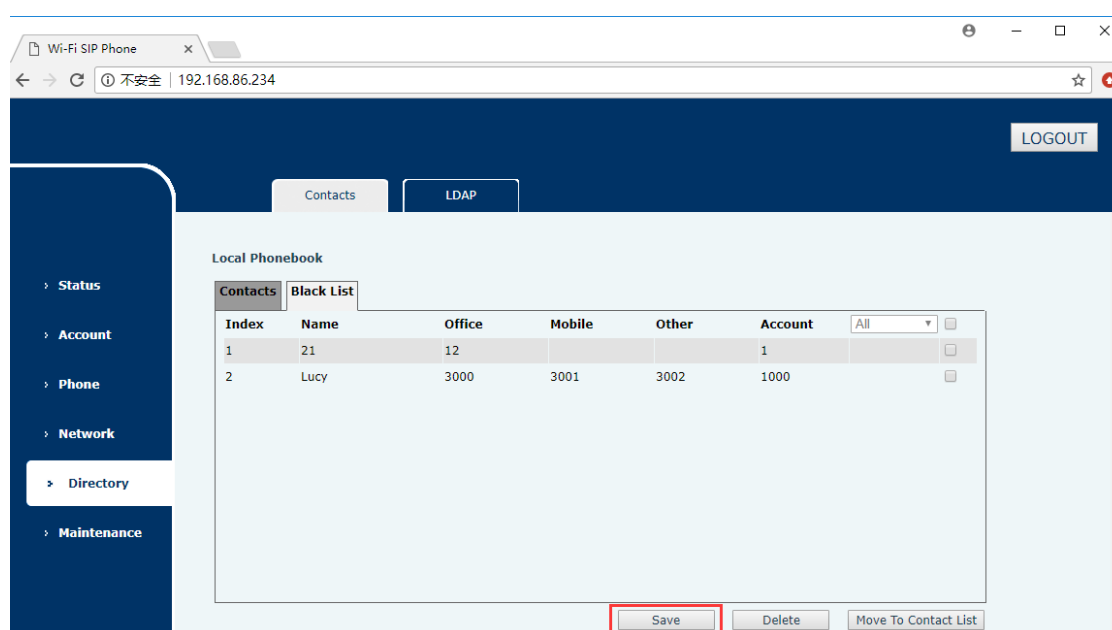


Figure 174 : Save Changes

Edit

Click Directory->Contacts->local directory->Black list, enter the blacklist setting page, select the blacklist to edit in the Black List list and edit the blacklist on the Contacts edit page. After the editing is completed, click the [Edit] key to complete the blacklist editing operation. As shown in the following figure:

Contacts	
Name	Lucy
Office Number	3000
Mobile Number	3001
Other Number	3002
Account	1000
Add Edit Search	

Figure 175 : Edit Blacklist

- Command function: edit blacklist
- Optional parameters:

Name

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: name of edited blacklist

Office Number

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: business phone number of edited blacklist

Mobile Number

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: mobile phone number of edited blacklist

Other Number

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: the others phone number of edited blacklist

Account

Input mode: drop-down box selection

Parameter description: The account related to the edited blacklist

After you edit the blacklist, you need to click the Save key to save the blacklist that has been edited. As shown in the following figure:

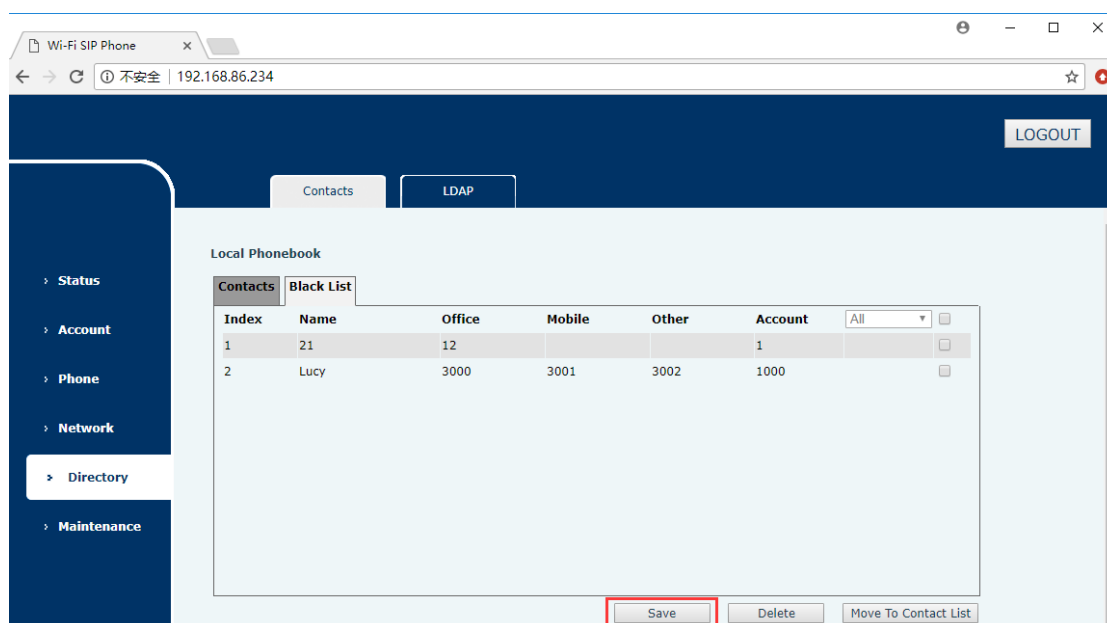


Figure 176 : Save Changes

Search

Click Directory->Contacts->local directory->Black List, enter the blacklist settings page, in the Contacts edit page to enter the name of the blacklist, office phone, cell phone number, or other numbers click the [Search] key to complete the blacklist query operation. As shown in the following figure:

Contacts

Name

Office Number

Mobile Number

Other Number

Account

1000

Add

Edit

Search

Figure 177 : Blacklist Query

After executing the blacklist search operation, we can see the results in the blacklist. As shown in the following figure:

Contacts

Black List

Index	Name	Office	Mobile	Other	Account	All	
1	21	12			1		
2	Lucy	3000	3001	3002	1000		

Figure 178 : Query Results

Delete

Click on Directory->Contacts->local directory->Black List, enter the blacklist setting page, select the blacklist to delete in the Black List list, and click the [Delete] key. As shown in the following figure:

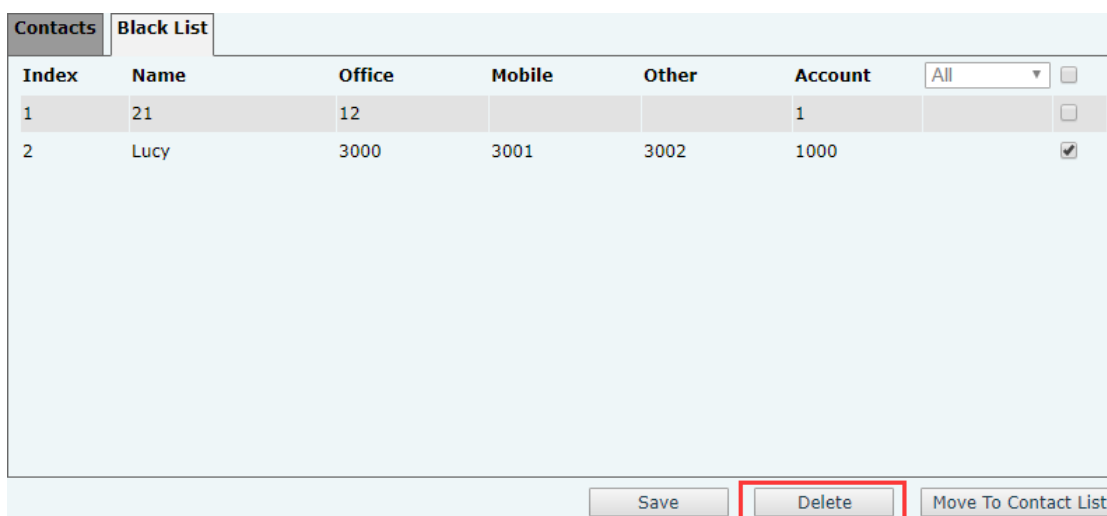


Figure 179 : Delete Blacklist

After clicking the delete key, pop-up the delete prompt window, click the confirmation to delete the blacklist.

As shown in the following figure:

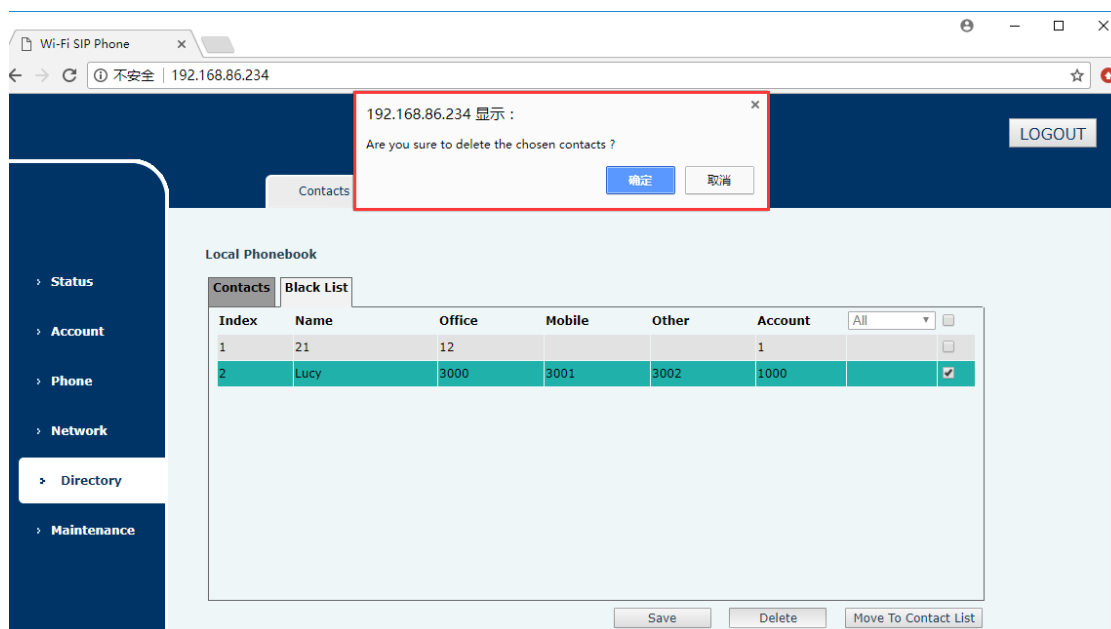


Figure 180 : Blacklist Deletion Confirmation

After deleting the blacklist, the user needs to click [Save] key to Save the blacklist that has been deleted. As

shown in the following figure:

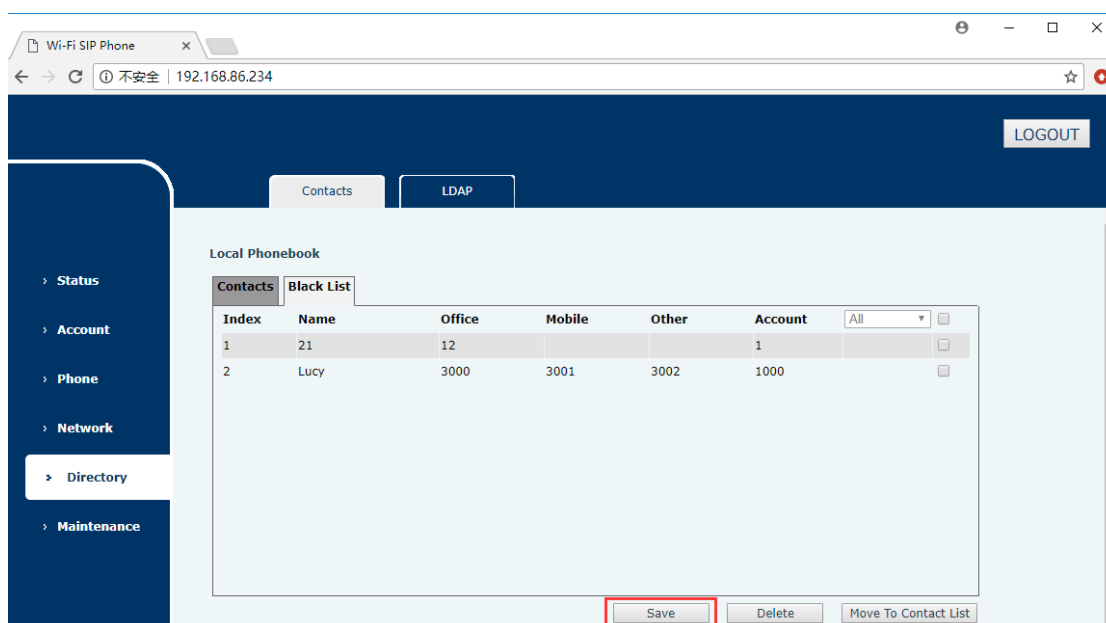


Figure 181 : Save Changes

Move To The Contacts List

Click on Directory->Contacts->local directory->Black List, enter the blacklist setting page, select the blacklist that needs to be moved to the contact list in the Black List list, and click the [Move To Contacts List] key. As shown in the following figure:

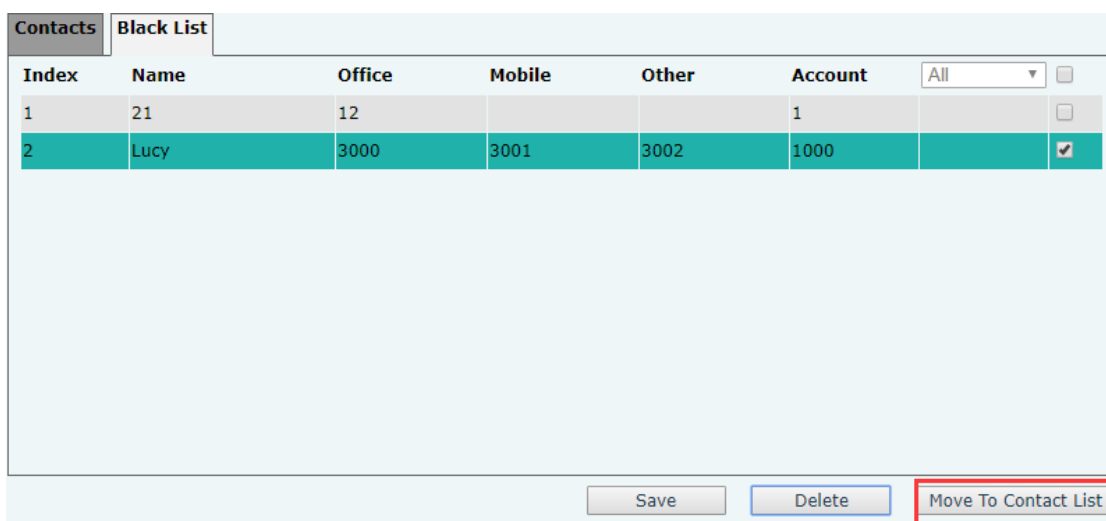


Figure 182 : Blacklist Removal

After the user removes the blacklist, click [Save] key to Save the blacklist that has been removed. As shown

in the following figure:

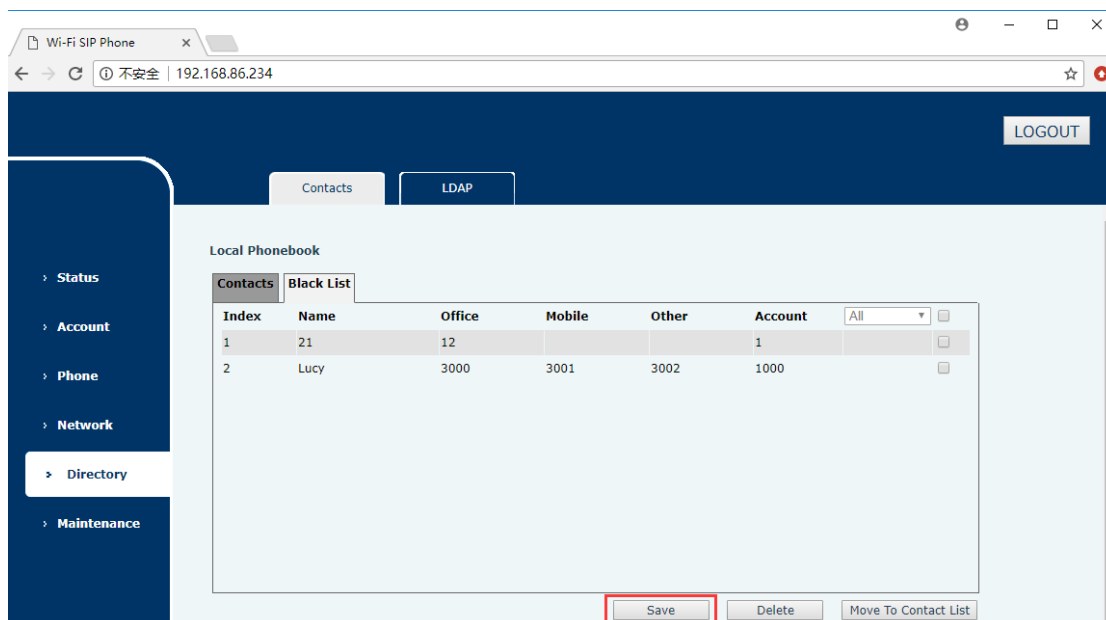


Figure 183 : Save Changes

Group Settings

Add

Click Directory->Contacts->local directory->Group Setting and enter the group settings page. After editing the group, click the Add key to complete the group addition operation. As shown in the following figure:

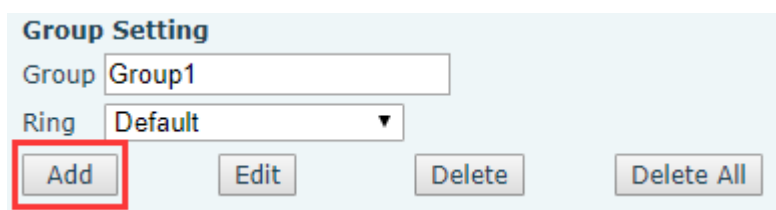


Figure 184 : Add Group

- Command function: Add group
- Optional parameters:

Group

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: name of added group

Ring

Input mode: drop-down box selection

Parameter description: ring of added group

After the user adds the group, click [Save] key to Save the group. As shown in the following figure:

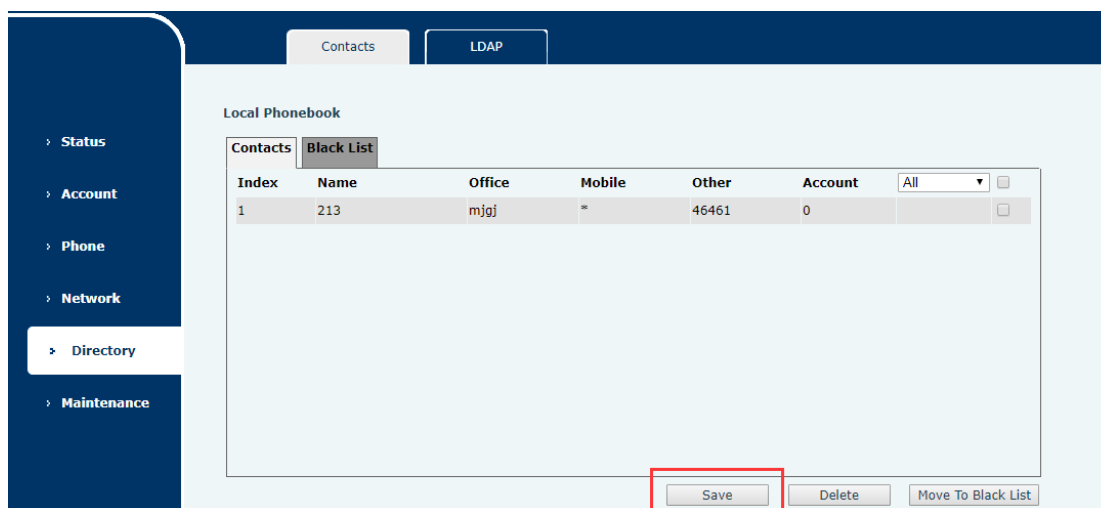


Figure 185 : Save Changes

Delete

Click Directory->Contacts->local directory->Group Setting, enter the group settings page, enter the group name to delete and click the [Delete] key. As shown in the following figure:

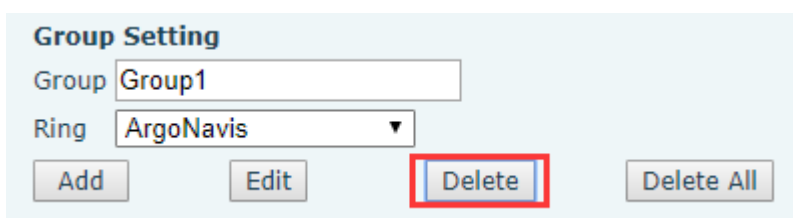


Figure 186 : Delete Group

After clicking the delete key, the delete prompt window is popped up, and the group is deleted by clicking confirmation. As shown in the following figure:

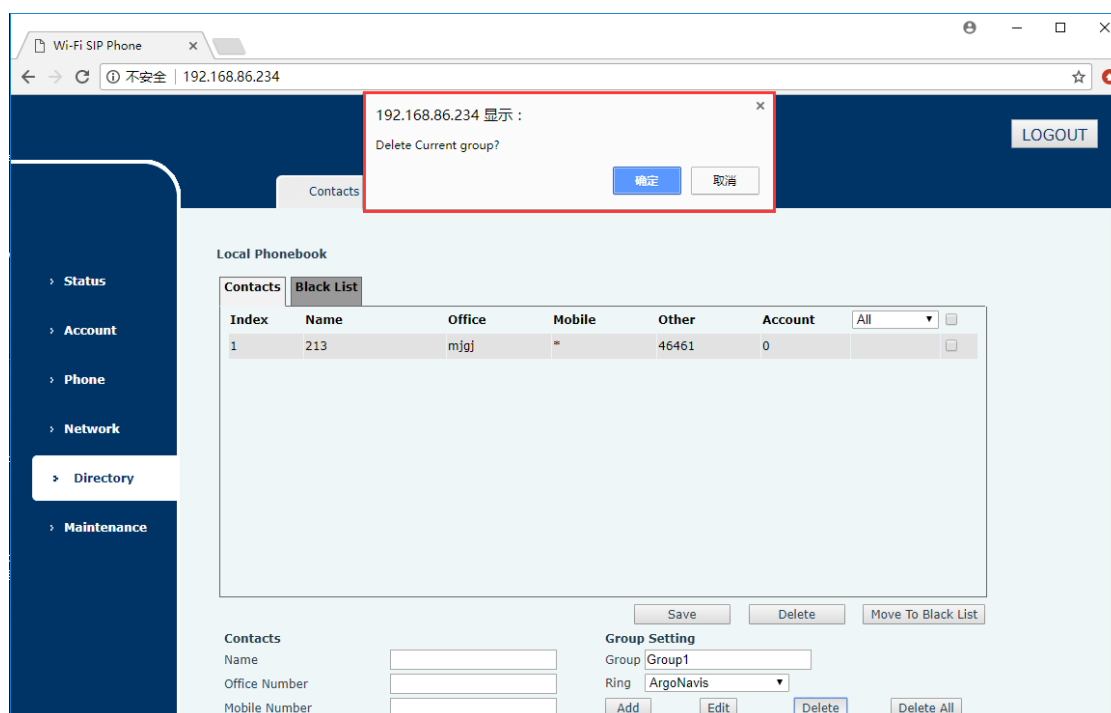


Figure 187 : Delete Group Confirmation

After deleting the group, the user needs to click [Save] key to delete the group successfully. As shown in the following figure:


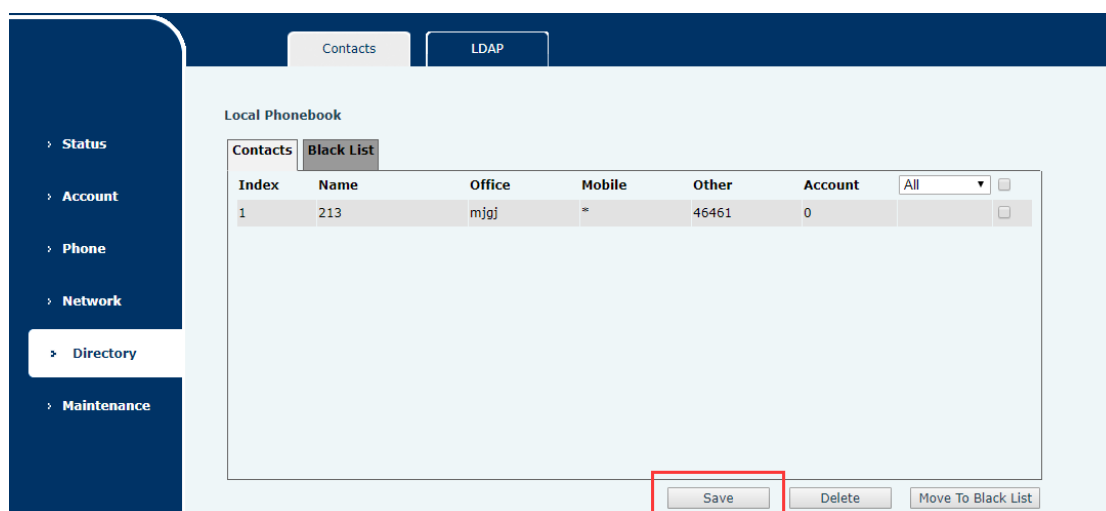


Figure 188 : Save Changes

Note: Default groups cannot be deleted.

Remote directory

Click Directory->Contacts->Remote directory, enter the remote phone boOK setting page, after the completion of the remote phone boOK, click the [Apply] key to complete the remote phone boOK setting. As shown in the following figure:

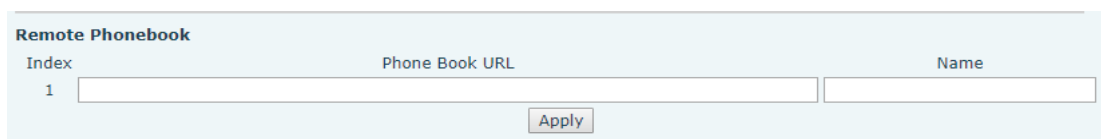

The figure shows a 'Remote Phonebook' configuration form. It has a table with two columns: 'Index' and 'Phone Book URL'. The first row has '1' in the 'Index' column and an empty text box in the 'Phone Book URL' column. To the right of the table is a 'Name' label and another empty text box. Below the 'Phone Book URL' text box is an 'Apply' button.

Figure 189 : Remote Phone Book Setting

- Command function: remote directory settings
- Optional parameters:

Phone Book URL

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: remote directory URL.


Name

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description: The name of the remote phone book.

LDAP Settings

Click Directory - > LDAP - > LDAP Settings to enter the LDAP settings page. After setting up, click the [Apply] key to complete the LDAP set-up operation. As shown in the following figure:

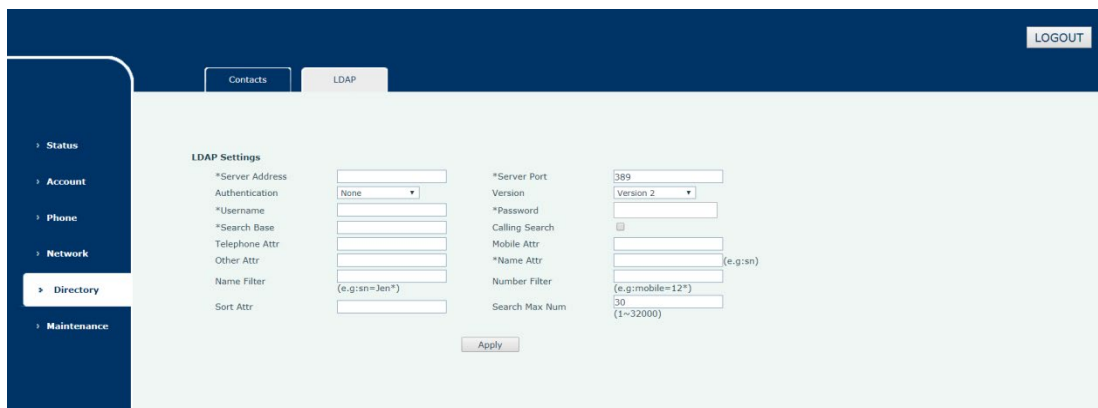

The figure shows the 'LDAP Settings' configuration page. It has a sidebar on the left with a menu: Status, Account, Phone, Network, Directory (selected), and Maintenance. The main area has two tabs: 'Contacts' and 'LDAP' (selected). Below the tabs is the 'LDAP Settings' form. It contains two columns of fields. The left column has: *Server Address, Authentication (dropdown), *Username, *Search Base, Telephone Attr, Other Attr, Name Filter (with example '(e.g:sn=Jen)'), and Sort Attr. The right column has: *Server Port, Version (dropdown), *Password, Calling Search, Mobile Attr, *Name Attr (with example '(e.g:sn)'), Number Filter (with example '(e.g:mobile=12)'), and Search Max Num (with example '30 (1~32000)'). An 'Apply' button is at the bottom center.

Figure 190 : LDAP Setting

- Command function: LDAP settings
- Optional parameters:

Server Address

Input mode: input by hand, format - string, English, numbers, special characters can be used.

Parameter description:LDAP server address.

Server Port

Input mode: input by hand, format - numbers.

Parameter description: LDAP Server Port.

Authentication

Enter mode: drop-down box

Data description: approval mode

Version

Enter mode: drop-down box

Data description: LDAP version

User name

Enter mode: inputting by hand. Format: character string, English character, number special character are acceptable.

Data description: user name

Password

Enter mode: inputting by hand. Format: character string, English character, number special character are acceptable.

Data description: password

Search Base

Enter mode: inputting by hand. Format: character string, English character, number special character are acceptable.

Data description: search base

Calling Search

Enter mode: drop-down box section

Data description: to select “testing B dial to LDAP testing machine A” in combo box. Testing machine A will query the contacting code, when queried the corresponding code, LCD will display the contacting person name, or display code.

Phone Attr

Enter mode: inputting by hand. Format: character string, English character, number special character are acceptable.

Data description: to input the phone number in phone attr, LDAP will return the attributive code, to input others, will return to empty code.

Mobile Attr

Enter mode: inputting by hand. Format: character string, English character, number special character are acceptable.

Data description : to input mobile in Mobile attr, LDAP will return the attributive code, to input others, will return to empty code.

Other Attr

Enter mode: inputting by hand. Format: character string, English character, number special character are acceptable.

Data description: to input home Phone in other attr, LDAP will return the attributive code, to input others, will return to empty code.

Name Attr

Enter mode: inputting by hand. Format: character string, English character, number special character are acceptable.

Data description: name attribute, LDAP will return the corresponding attribute name, or will be empty.

Name Filter

Enter mode: inputting by hand. Format: character string, English character, number special character are acceptable.

Data description: contacting person filter, to input “cn=jack”, LDAP will display the contacting person which named with “Jack”, to input “cn=*”, will display all contacting person.

Number Filter

Enter mode: inputting by hand. Format: character string, English character, number special character are acceptable.

Data description: code filter. When input phone number=6911, LDAP will display contacting person which phone number with 6911. if all the contact person phone number is not 6911, LDAP will display no contact person. To input mobile=6911, in a similar way, LDAP will display the contact person which mobile phone number with 6911. if all the contact person mobile phone number is not 6911, LDAP will display no contact person. To input home phone=6911, in a similar way, LDAP will display the contact person which home phone number with 6911. if all the contact person home phone number is not 6911, LDAP will display no contact person.

Sort Attr

Enter mode: inputting by hand. Format: character string, English character, number special character are acceptable.

Data description: sort attribute, to sort all the searched contact person based on this attribute.

Search Max Number

Enter mode: inputting by hand. Format: character string, English character, number special character are acceptable.

Data description: the max contact person.

Maintenance Management

To press maintenance, and will display as below. User can carry on the account web management, auto deploy management, log management, package capturing management, configuration management, and certificate management in this page.

Figure 191 : Maintenance Management Page

WEB Settings

Press maintenance -- web --web setting to enter WEB setting page, after finish setting, press APPLY to save setting, As shown in the following figure:

Figure 192 : WEB Setting

- Command function: WEB Setting
- Required parameters:

HTTPS

Enter mode: Check box selection

Data description: Enable HTTPS protocol

Web Server Port

Enter mode: Fill in by hand, format - string, number, range 1025-65535

Data description: Server port number changes

Change Web Authentication Password

Press maintenance -- web --web setting to enter Change Web Authentication Password page, after finish setting, press APPLY to save setting, As shown in the following figure:

Figure 193 : WEB Authentication Password Setting

- Command function: WEB Authentication Password Setting
- Required parameters:

Current Password

Enter mode: Manual filling, format -- Numbers, English, special characters can be.

Data description: Old password

New Password

Enter mode: Manual filling, format -- Numbers, English, special characters can be.

Data description: New password.

Confirm Password

Enter mode: Manual filling, format -- Numbers, English, special characters can be.

Data description: Confirm new password

Change Menu Authentication Password

Press maintenance -- web --web setting to enter Change Menu Authentication Password page, after finish setting, press APPLY to save setting, As shown in the following figure:

Figure 194 : Menu Authentication Password Setting

- Command function: Menu Authentication Password Setting
- Required parameters:

Current Password

Enter mode: Manual filling, format -- Numbers, English, special characters can be.

Data description: Old password

New Password

Enter mode: Manual filling, format -- Numbers, English, special characters can be.

Data description: New password.

Confirm Password

Enter mode: Manual filling, format -- Numbers, English, special characters can be.

Data description: Confirm new password

Auto Provisioning (Deploy)

Provisioning Settings

Press maintenance ->Auto Provisioning->Provisioning Settings, to enter auto provisioning setting page, after finish setting, to press **【Apply】** to achieve this function. As shown in the following figure:

Figure 195 : Automatic Deployment Setting

- Command function: auto provisioning setting
- Required parameters:

Mode

Enter mode: drop-down box selection

Data description: auto provisioning mode

Protocol Type

Enter mode: drop-down box selection

Data description: agreement

DHCP Option

Enter mode: drop-down box selection

Data description: auto provisioning server address from DHCP server.

Server URL

Enter mode: inputting by hand. Format: character string, English character, number special character are acceptable.

Data description: server URL address (only when selecting DHCP Option 66, it will be achieved.)

FTP User Name

Enter mode: inputting by hand. Format: character string, English character, number special character are acceptable.

Data description: FTP user name (only when selecting FTP, it will be achieved.)

FTP Password

Enter mode: inputting by hand. Format: character string, English character, number special character are acceptable.

Data description: FTP password (only when selecting FTP, it will be achieved.)

Interval Time

Enter mode: inputting by hand,format- number

Data description: interval time (only when selecting Update at the time interval in auto provisioning, it will be achieved.)

Local Update

Press maintenance ->Auto Provisioning->Local update, to enter Local update setting page, after finish setting, to press **【Apply】** to achieve this function. As shown in the following figure:

Figure 196 : Local Upgrade Setting

- Command function: Local upgrade Settings
- Required parameters:

Local Update Enable

Enter mode: Check box selection.

Data description: Gets the server address for the local upgrade.

Local Update URL

Enter mode: Manual filling, format - string, English numeric special characters can be.

Data description: Server URL address.

System log

Log setting

Press Maintenance->Syslog->Log Settings, to enter log setting page, to select the corresponding log in the log combo box, and press **【Apply】** to apply for log setting.

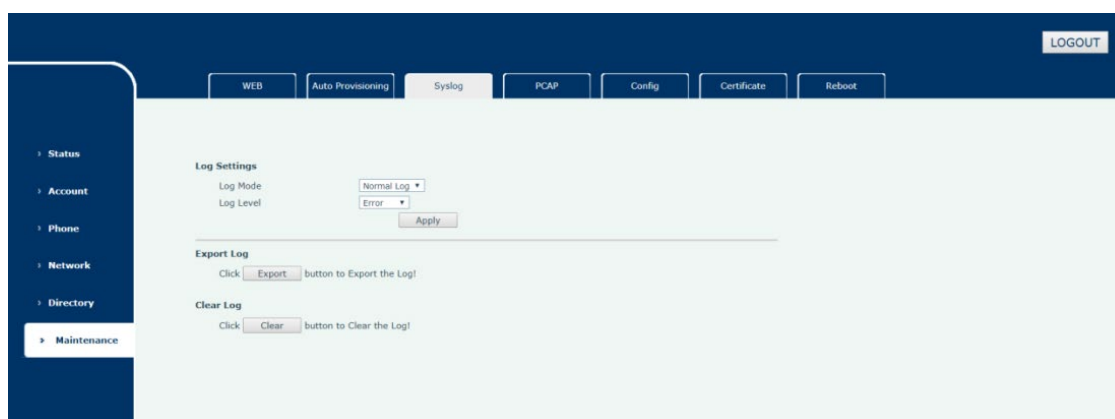


Figure 197 : Log Type Setting

Export Log

Press Maintenance->Syslog->Export Log, to enter log exporting page, to press 【Export】 to achieve this operation. As shown in the following figure:

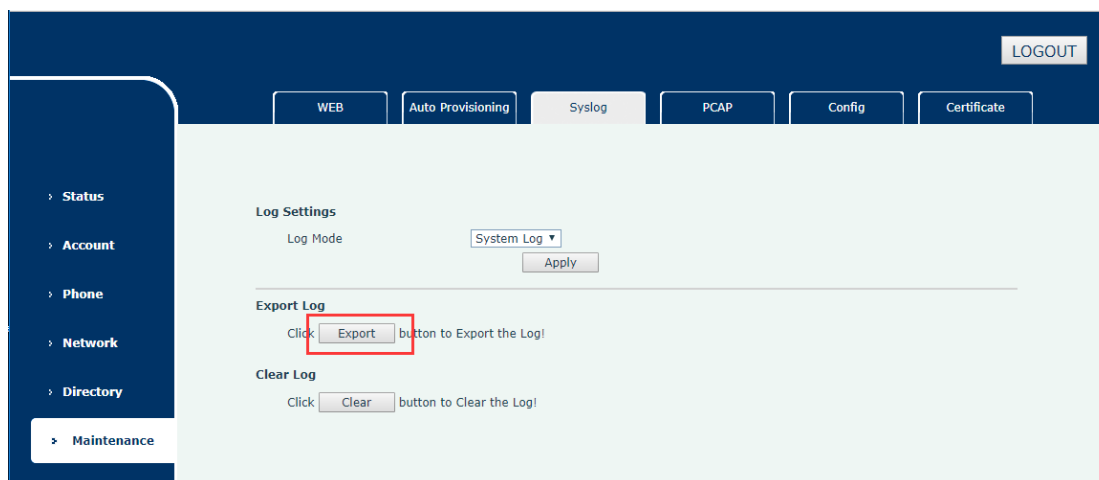


Figure 198 : Log Export

Clear Log

Press Maintenance->Syslog->Clear Log, to enter log clearing page, to press 【Clear】 and the confirmation of log clearing which be pop-up. As shown in the following figure:

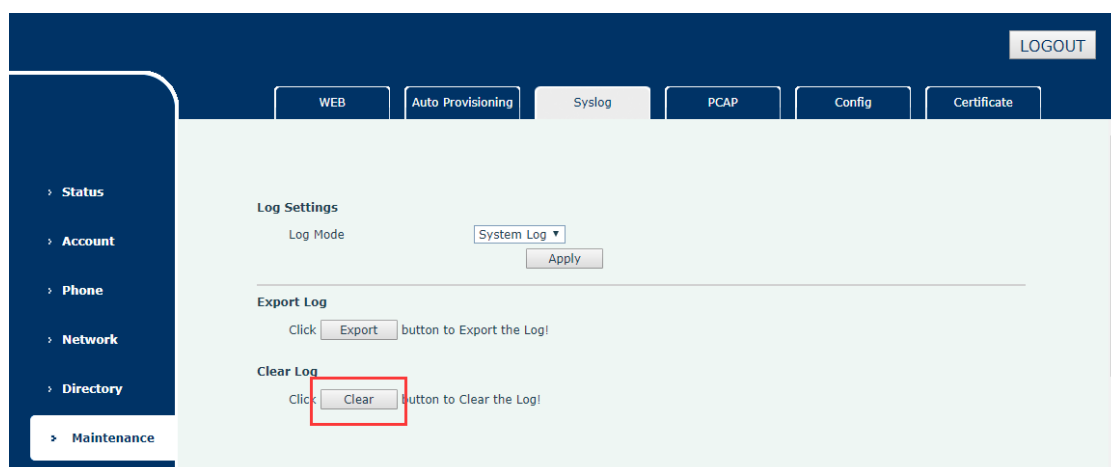


Figure 199 : Clear Log

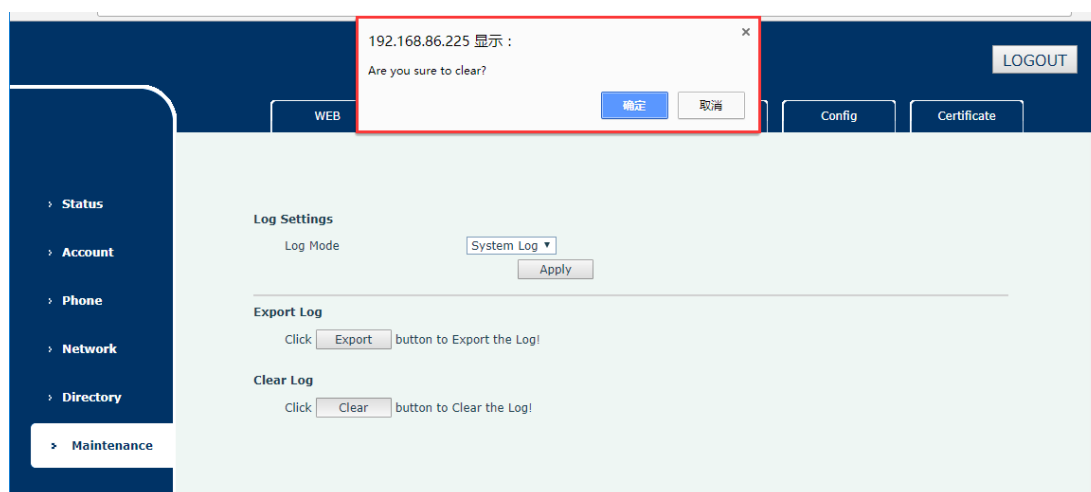


Figure 200 : Clear Log Acknowledgement

Capture Traces

Press Maintenance->PCAP ->Capture Traces, to enter traces capturing page. Press **【Start】** to carry out traces capturing. As shown in the following figure:

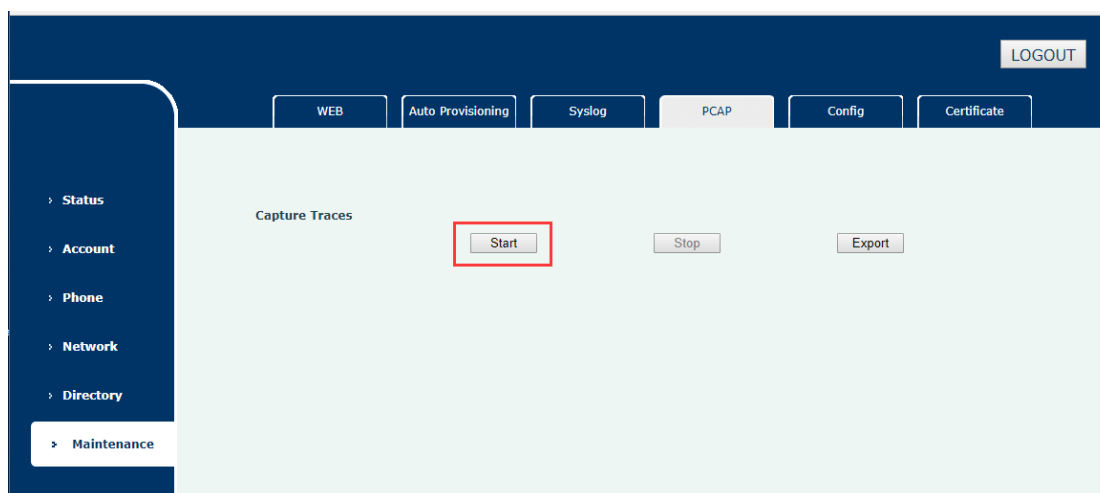


Figure 201 : Start Grab Pack

After started traces capturing, if want to stop it, press **【Stop】** to stop operation. As shown in the following figure:

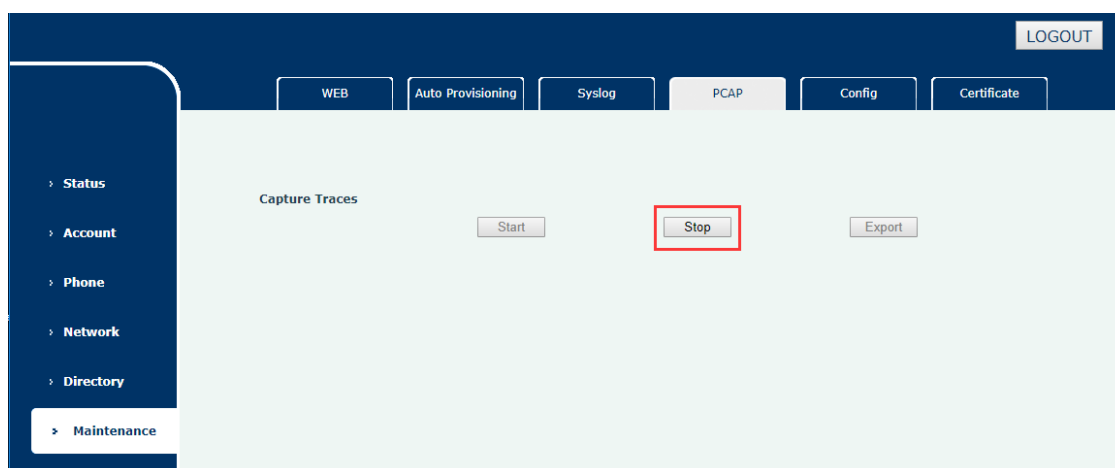


Figure 202 : Stop Grabbing Bag

Once stop traces capturing, press **【Export】** to export the traces capturing. As shown in the following figure:

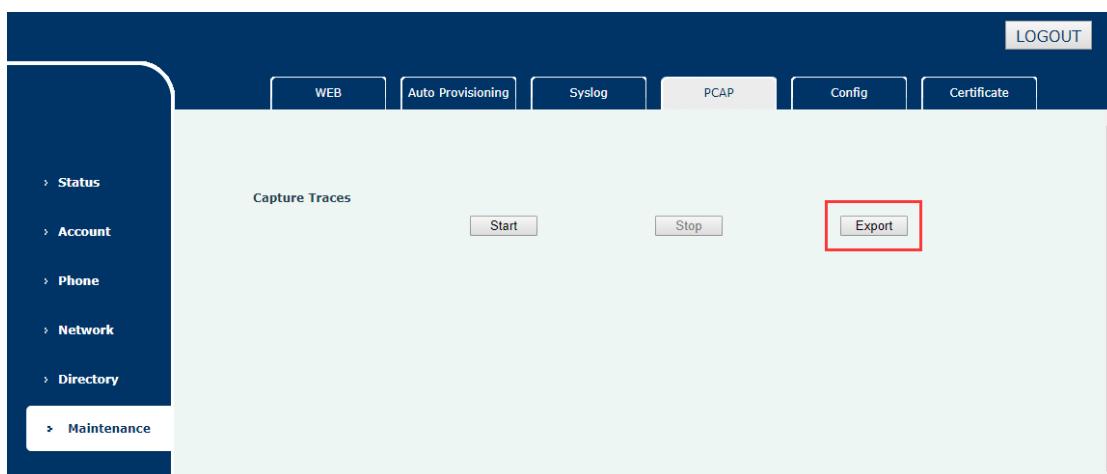


Figure 203 : Grab Package Export

Configuration management

Import configuration

Maintenance->Config->Import/Export Config, Go to the Configuration Import/Export page, Import/Export Config, click the [Select File] button to pop up the profile selection window. As shown in the following figure:

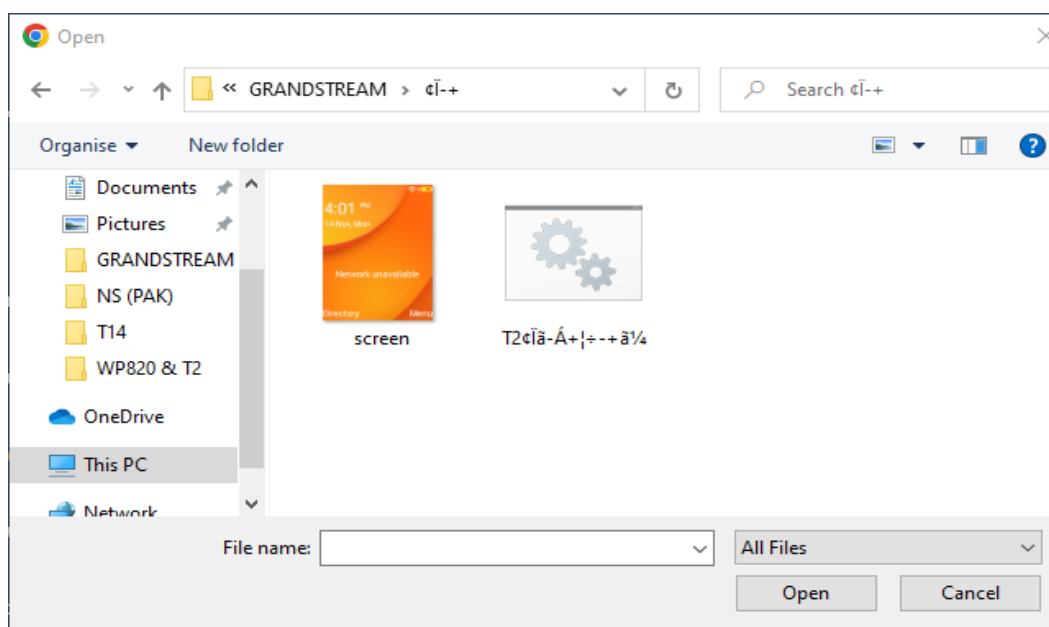


Figure 204 : Import Configuration Selection

To select the configuration file which need be imported, and press IMPORT to achieve configuration file importing. The details will be as below:

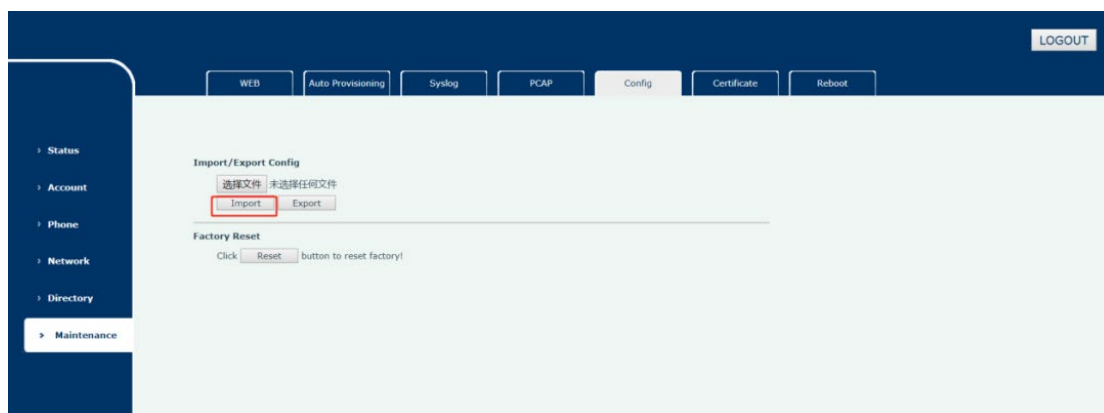


Figure 205 : Configure Import

Configuration Exporting

Press Maintenance->Config->Import/Export Config, to enter configuration Import/Export page, press **【Export】** to achieve configuration file exporting. As shown in the following figure:

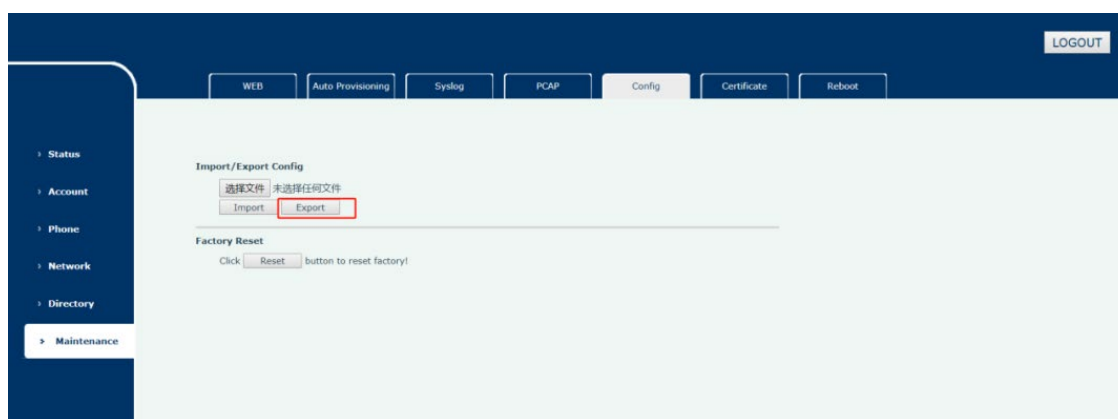


Figure 206 : Configure Export

Factory Reset

Press Maintenance->Config->Factory Reset, to enter Factory Reset, press **【Reset】** to confirm configuration files deleting. In this window, click OK to complete the recovery of factory settings. As shown in the following figure:

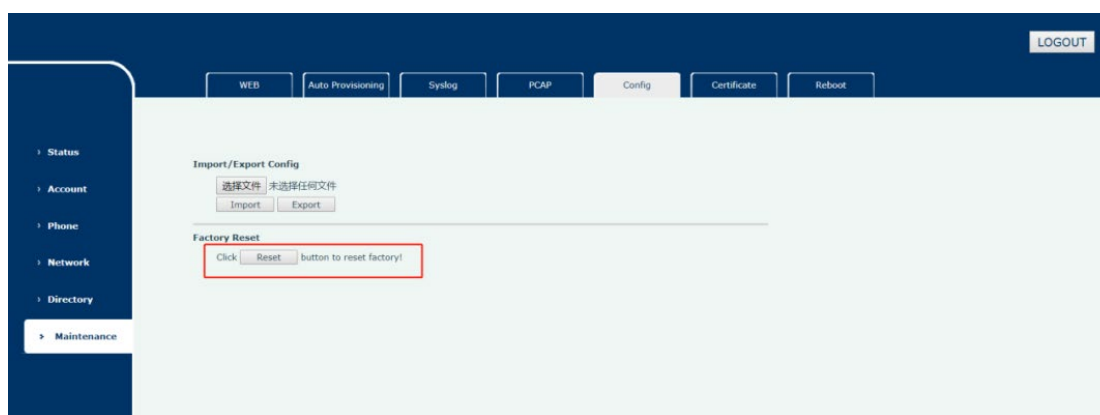


Figure 207 : Restoration Of Factory Setting

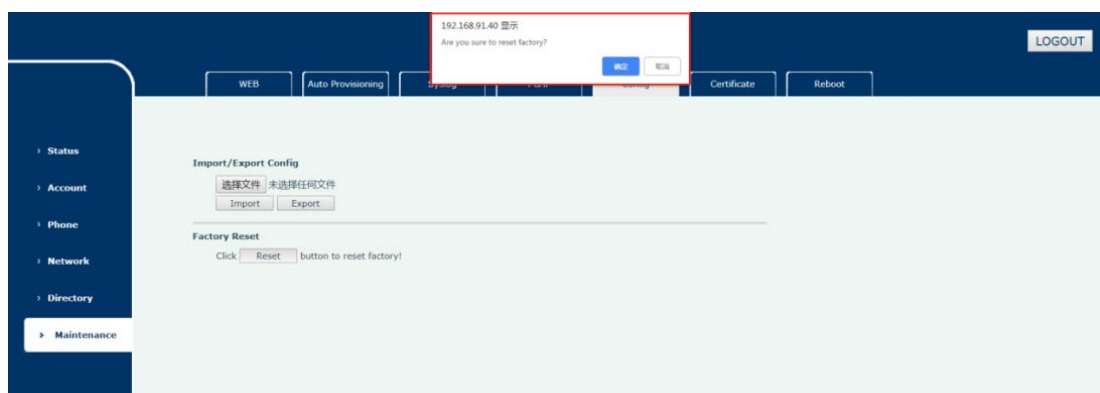


Figure 208 : Restore Factory Set-up Confirmation

Certificate management

CA certificate management

Press Maintenance->Certificate->CA Certificate Setting, to enter CA certificate setting page, As shown in the following figure:

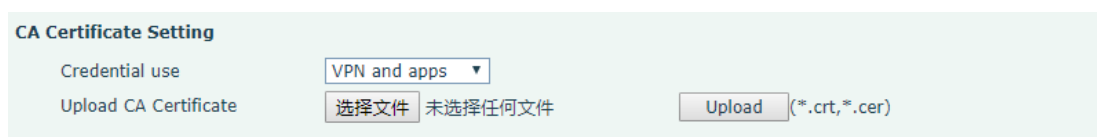


Figure 209 : CA Certificate Setting

To press Credential use combo box, to select the certificate purpose, and to press SELECT FILE. As shown in the following figure:

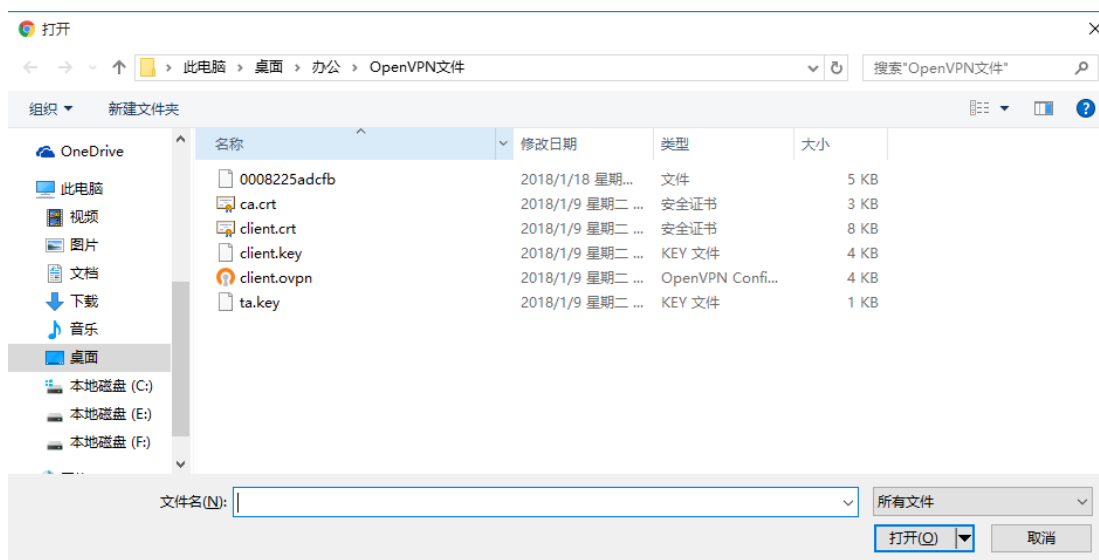


Figure 210 : CA Certificate Selection

To select the certificate which need to be uploaded, and open it. When in CA certificate setting page, press **【upload】** to achieve certificate uploading.

User Certificate Setting

Press Maintenance->Certificate->User Certificate Setting to enter User certificate setting page. As shown in the following figure:



Figure 211 : User Certificate Setting

To press Credential use combo-box, to select the certificate purpose, and to press SELECT FILE. As shown in the following figure:

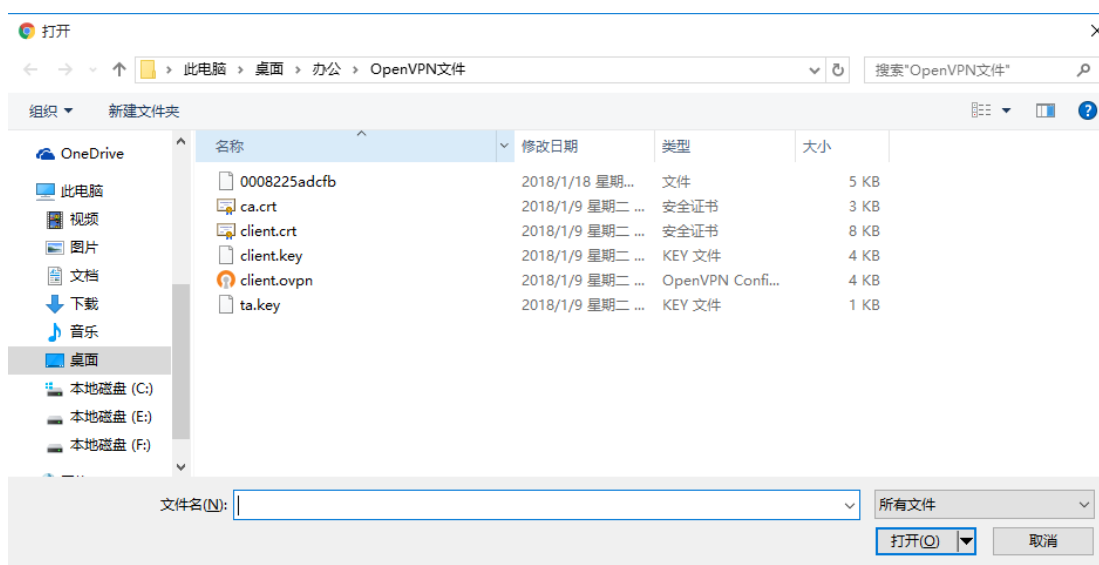


Figure 212 : User Certificate Selection

To select the certificate which need to be uploaded, and open it. When in CA certificate setting page, press **【upload】** to achieve certificate uploading.

Note: parts of certificate need password, you should input the password in Extract Password.

Trusted Certificates Setting

Press Maintenance->Certificate->Trusted Certificates Setting, to enter trusted certificate setting page. User can check the uploaded certificate. As shown in the following figure:

Trusted Certificates List				
Index	Issued_To	Issued_By	Expiration	Delete
1	cdtsm	OpenVPN	Fri Jan 07 11:11:25 GMT+08:00 2028	☐
2				☐
3				☐
4				☐
5				☐
6				☐
7				☐
8				☐
9				☐
10				☐
				Delete
				Delete All

Figure 213 : Trust Certificate List

User can delete the certificate which in the list. To select the certificate and press **【Delete】** to delete the certificate.

Reboot Device

Press Maintenance->Reboot, Enter the restart device page, Click the Reboot key in the Reboot Device to pop up the device confirmation prompt window. The device restart operation can be completed by clicking confirmation in this window. As shown in the following figure:

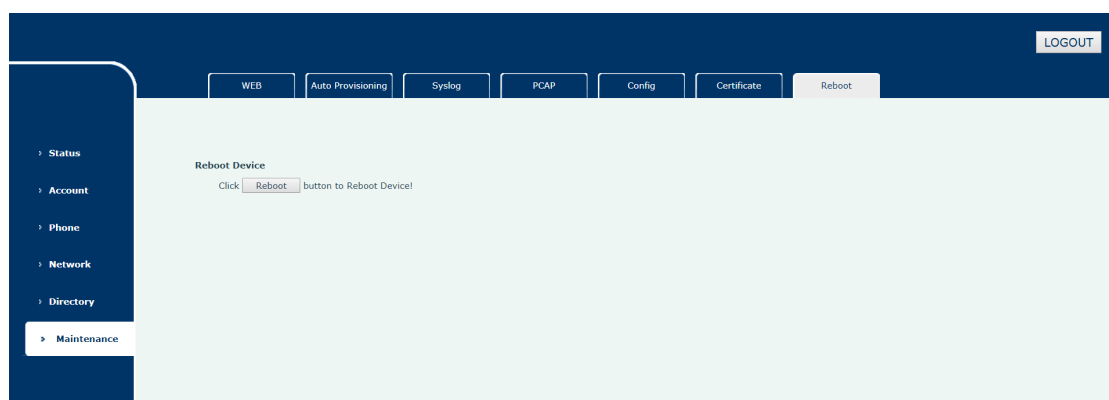


Figure 214 : Restart Device

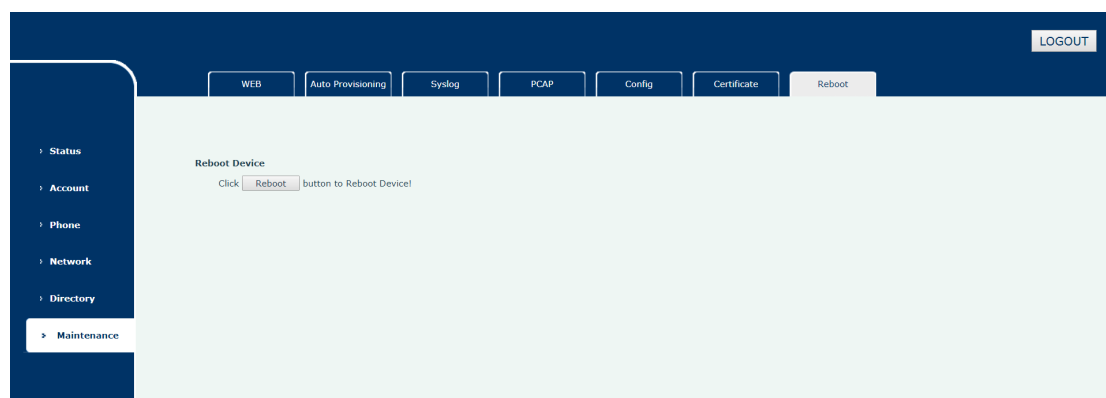


Figure 215 : Restart Device Confirmation

Basic function

Making a call

Dial directly

Direct dialling refers to the method of inputting the number to be dialled through the dial and initiating a call. **T2** supports two types of calling: SIP account call and Point-to-point IP call.

SIP calling

To input SIP account and make calling, and procedure is as below:

-
-
- Step 1: To Input SIP account;
 - Step 2: Press  to make calling
-
-

Point to point dialling

To input the IP address and make calling, procedure is as below:

-
-
- Step 1: To input the IP address, such as 192.168.11, user can input 192*168*1*1
 - Step 2: Press  to make calling.
-
-

Redial

To redialling the phone number which you called last time.The specific steps are as follows:

-
-
- Step 1: press  or the menu key to enter the dialled out phone number list, and the first dialled phone number record in the list is the phone number which was called last time.
 - Step 2: press  to make the call.
-
-

To make call through directory

To find the phone number which you need to dial in the phone book and make a call.The specific steps are as follows:

-
-
- Step 1: press left key to enter the phone book, select local phone book or remote directory;
 - Step 2: press the navigation key or search through the searching box to look for the corresponding contact;
 - Step 3: select the specified contact, press left key and make call, press  to make call.
-
-

To make a call through record list

User can make a call through the call record or history record (including all, dialled, received, unconnected, transferred, etc).The specific steps are as follows:

-
- Step 1: press the left key to enter the call record, or enter the history menu;
 - Step 2: press the navigation key to find the corresponding contact or number.
 - Step 3: press  to send the call.
-

Hearing Call

T2 phone will be ringing, and screen display phone number. If there is the phone number which was stored in the phone book or network number and name transferred by internet, the screen will display the caller's name.

Manual Hearing

Press  to hearing the incoming call.

Reject Call

When incoming a call, if user won't to hear the call, user can press  to reject call.

Call On Hold/Recover

During the call process, if the user needs to keep the phone on hold, the operation steps are as follows:

-
- Step 1: press the left key to the menu to enter call list;
 - Step 2: press the UP and DOWN navigation keys to select hold, and the screen displays HOLD;
 - Step 3: select left key and enter call list. Select the recovery option, and the holding call will be recovered.
-

During the call, the user can press  to hold/recover the current call.

Call Waiting

Call waiting business refers to when the user calls A user is conversation with B, C user attempts to establish connections with A user, at this time system will not send busy tone to C user, but send back with ring tone,

and at the same time system gives User A call waiting, means another user is awaiting the call.

Call transfer

The call transfer business refers to the user who is on the call transferring the existing call to a third party and withdrawing from it, and let the other party and the third party continue the call. T2 product supports two kinds of call forwarding business: blind transferring and inquiry transferring.

Inquiry transferring

Inquiry transferring party transfers call to the third party users, transferring party connected with the third party user, and then transferring party hooks on, and the second party and third party users continue to make the call. The specific steps are as follows:

-
-
- Step 1: user A and user B are in conversation;
 - Step 2: user A select the corresponding key (left key) to enter the list of call menu;
 - Step 3: To select transfer, when the "input number" is displayed on the screen, enter the transfer number (user C) and press dial key;
 - Step 4: user C phone will be ringing, when the original call is holding, user A phone will play the ring tone;
 - Step 5: user C hears the phone, user A establishes conversation with user C;
 - Step 6: user A presses the left key, user A will be released, and user B will establish conversation with user C.
-
-

Blind transferring

T2 support two kinds of blind transferring way, 1: transfer party make call transferring to a third party user, third party user phone will be ringing, and then transfer party to carry out transfer operation, and the transfer party will be released. The second party and third party user will establish conversation; 2: the transfer party carry out transfer operation directly, and the transfer party will be released, and the second party and third party users establish conversation.

Method one:

-
- Step 1: user A and user B are in conversation;
 - Step 2: user A presses the corresponding key (left soft key) to enter the call list;
 - Step 3: select transfer, when the "input number" is displayed on the screen, enter the transfer number (user C) and press the dial key;
 - Step 4: user C phone will be ringing, when the original call is held on, user A phone will play ring tone;
 - Step 5: 步骤 5: when user C fails to answer, user A presses the left key, and user A will be released.
 - Step 6: at this time, user C phone will be ringing and user B will hear the ring tone;
 - Step 7: user C hooks off, user B and user C to establish conversation.
-

Method 2:

-
- Step 1: user A and user B are in conversation;
 - Step 2: user A presses the corresponding key (left soft key) to enter call list;
 - Step 3: select transfer, then display the "input number" on the screen, enter the transfer number (user C) and press the corresponding key (left soft key);
 - Step 4: user A is will be hooked on, and user B will hear the ring tone, and user C phone will be ringing;
 - Step 5: user C hooks off, user B and user C will be in conversation.
-

Conference Call

Conference call can realize three users simultaneously, including the user sponsors call, the equivalent of a small conference call. The user which starts the conference calling can keep a certain user, two or three sides of the conversation at the same time function. The specific steps are as follows:

-
- Step 1: user A and user B are in conversation;
 - Step 2: user A presses the corresponding key (left key) to enter the call list;
 - Step 3: select the conference. At this time, the "input number" is displayed on the screen. Enter the user number (user C) with the invitation to enter the tripartite, and press the corresponding key (left key) of the conference.

- Step 4: at this time, user B is holding on, user A will hear the ring tone, user C phone will be ringing, and user C is connected to the user C to establish the call;
 - Step 5: after user A presses the corresponding key (left key) of the conference, user A, B and C enter into the conference call.
-

Forward Transfer

Unconditional forward transfer

The unconditional forward transfer will automatically move to a pre-specified number (including voice mail), regardless of the status of the dialled user. The specific steps are as follows:

-
- Step 1: user A opens an unconditional forward transfer function and sets the forward transfer number (user B);
 - Step 2: user C calls user A;
 - Step 3: the call is transferred to user B. After user B receives the call, user B establishes the call with user C.
-

Busy Forward Transfer

The busy forward transfer will be automatically transferred to a pre-specified number (including voice mail) when the user is busy. The specific steps are as follows:

-
- Step 1: user A opens the busy forward transfer service and sets the forward number (user B);
 - Step 2: user A and user C will be in conversation;
 - Step 3: user D calls user A;
 - Step 4: the call is transferred to user B. After user B receives the call, user B establishes the call with user D.
-

No Answer Forward Transfer

No answer forward transfer will carry on the calling of user call number which is with this service, if the user doesn't hook off in the configuration of time, all automatically transferred to a predefined number (including voice mail). The specific steps are as follows:

-
- Step 1: user A opens the no answered forward transfer function and sets the forward number (user B) and time of non-response;
 - Step 2: user C calls user A;
 - Step 3: user A phone will be ring, and user A did not answer for A for long time;
 - Step 4: after the non-response time, the call is transferred to user B, user B answers, and user B establishes the call with user C.
-

DND (Do not disturb)

The DND server is "temporarily unserviceable", and users can use the service if they do not wish to interfere with their communication during this period. After the user has enabled the service, all incoming messages will be rejected, but the user's server is unrestricted. The specific steps are as follows:

-
- Step 1: user A open DND function
 - Step 2: user B calls user A, the calling will be failed, user B calls are rejected, user A phone interface shows "missed call"
-

Anonymity Calling

Anonymity calling can make the user hide his own call number, and will let his phone number display in hearing side phone with anonymity. The specific steps are as follows:

-
- Step 1: User A open the anonymity calling function;
 - Step 2: User A calls User B, user B LCD will display anonymity call number.
-

Refuse Anonymity Calling

Refuse anonymity calling can automatically rejects the call from the user who uses the business, and the user automatically rejects the call when the caller calls the user anonymously. The specific steps are as follows:

-
- Step 1: User A starts the refuse anonymity calling function, and user B starts the anonymity calling
-

function.

- Step 2: user B calls user A, user B calling are refused, user A screen shows missed calls.
-

Automatic Re-dialling

The automatic re-dialling business can automatically resets the opposite number at the reset interval set by the user when the user who started the business is rejected. The specific steps are as follows:

-
- Step 1: User A starts the automatic redial function and sets the redial frequency: 3, resets the interval 10s.
 - Step 2: User A calls user B, user B phone ringing;
 - Step 3: User B hang up to speak, when A terminal user interface display redial interface, users A redial interval press redial key corresponding to the left soft key, the user A automatic redial (first) user B, user B phone ringing
 - Step 4: User B hang up to speak, when A terminal user interface display redial interface, the user A waiting redial time interval or directly click redial corresponding left soft key, the user A automatic redial (second) user B, user B ringing;
 - Step 5: User B hang up to speak, when A terminal user interface display redial interface, the user A waiting redial time interval or directly click redial corresponding left soft key, the user A automatic redial (Third) user B, user B phone ringing;
 - Step 6: If user B hangs up or not answer, user A will no longer automatically redial user B (if user B is answering, then user A will establish call with user B)
-

Advanced Function

Messages

T2 phone supports SMS sending and receiving functions. When received a new message, the phone screen will automatically wake up and receiving prompt, slow power light flashes red, LCD screen tips "n unread messages" (n means the number of unread messages, such as: 1 unread messages), and displays a message icon.

New Messages

Users enter the standby interface, manual key: menu - > message- > new message, the terminal interface

switch to the new message screen. As shown in the following figure:

Figure 216 : New Information

- Command function;New message edit
- Required parameters:

From

Input mode: left-right navigation key or the corresponding left soft key.

Parameter description: sender

To

Enter mode: inputting by hand. Format: character string, English character, number special character are acceptable.

Parameter description: receiver

Text box

Input mode: manual key input, format - string English numeric special characters.

Parameter description: text of sends message

After editing new message on user interface, if want to change part content, can be used to the corresponding left soft delete key to delete this part, the modified again; If you want to send it directly after editing the

information, press the "OK" key to send the message. If you want to give up sending, you can exit the new information editing interface by returning the corresponding right soft key.

In box

After the user enters the standby interface, operation key by hand : menu -> message-> in box, the terminal switches to the in box interface, As shown in the following figure:

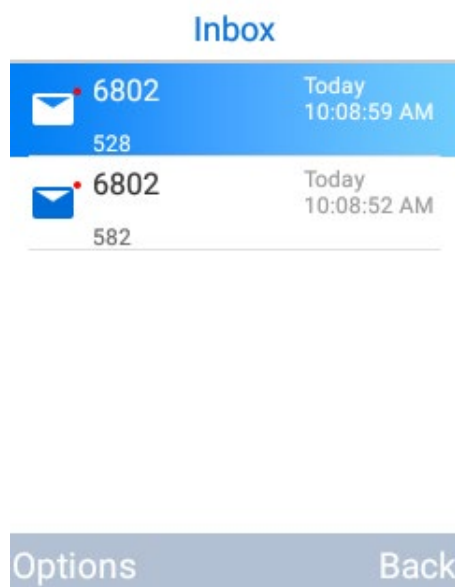


Figure 217 : In-box

Delete

Users enters the standby interface, manually operate the key: menu - > message- > in box, the terminal to switch to the in box, use the up and down navigation keys to select message need be delete, press options corresponding to the left soft key, in the options menu, choose delete, prompt window appears to delete the current information. details are as below photo:

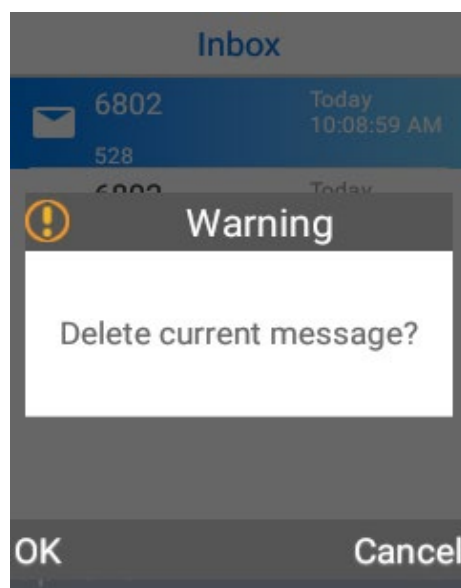


Figure 218 : Delete Message Confirmation

If you want to delete all the message in the in box, just select and delete all in the options menu and confirm it in the pop-up confirmation window ,s As shown in the following figure:

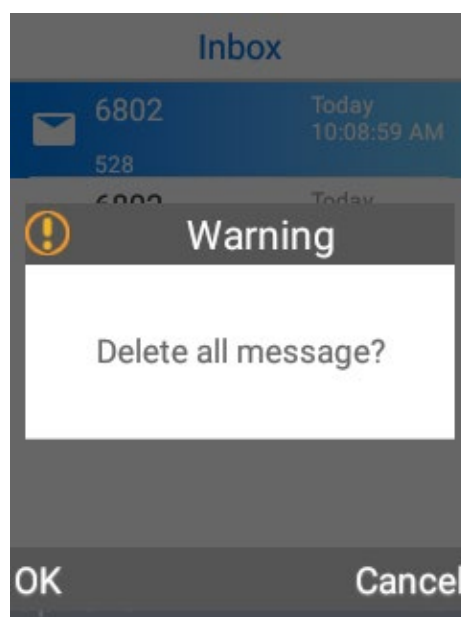


Figure 219 : Delete All Messages Confirmation

Reply

After the user enters the standby interface, manually operate the key: menu > message > in box> select the information to reply, then the terminal switch to the information viewing interface.As shown in the following figure:



Figure 220 : Information View

In the information viewing interface, use the left soft key corresponding to the options, select reply in the list of options menu, and then switch to the information editing interface.As shown in the following figure:



Figure 221 : Information Editing

Note: After editing the message, press "OK" to reply complete message

Recall

After After the user enters the standby interface, manually operate the bottom: menu > message> inbox-> select the information that needs to be recall, then the terminal switches to the information view interface.As shown in the following figure:



Figure 222 : Information View

In the message view interface, use the left soft key corresponding to the options, select recall in the menu list of options that appear, and switch to the calling interface.As shown in the following figure:

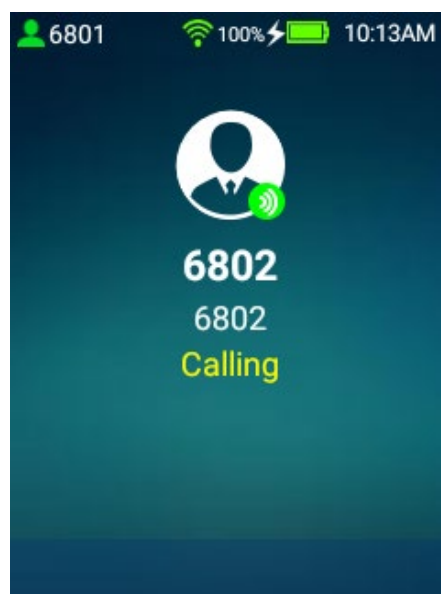


Figure 223 : Outgoing Call

Forward

After the user enters the standby interface, manual operate the key: menu - > message> in box> to select in box information need to be forward, the terminal switch to view information interface,As shown in the following figure:



Figure 224 : Information View

In the message view interface , use the option corresponding to the left soft key, select the options menu in the forwarding list, then switch the forward information into editing interface,As shown in the following figure:



Figure 225 : Information Editing

Note: After editing the information, press OK to complete the send.

Out-box

After the user enters the standby interface, operate the key by hand: menu > message-> out-box, The terminal switch to the in box interface.As shown in the following figure:

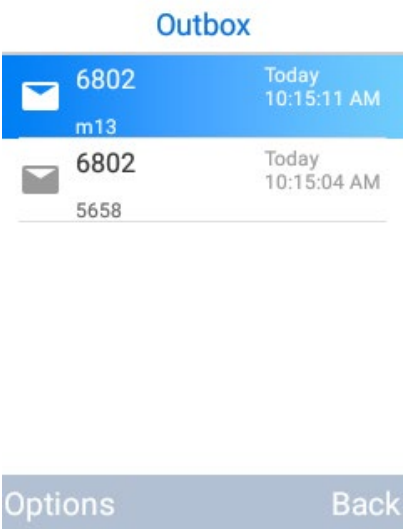


Figure 226 : Out-box

Delete

After the user enters the standby interface, operate the keys by hand: menu-> message-> out-box. the terminal switches to the box interface, uses the up and down navigation keys to select the message that needs to be deleted, and then presses the left soft key corresponding to the option. Select delete from the options menu that appears, and a prompt window for deleting the current message appears, As shown in the following figure:

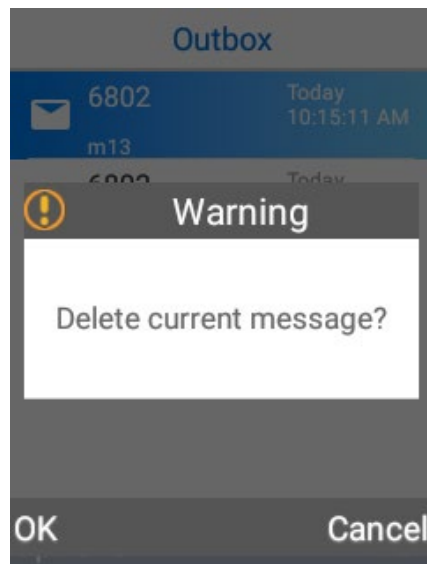


Figure 227 : Information Deletion Confirmation

If you want to delete all information in out-box, only delete all message in the options menu and confirm in the confirmation window that pops up. As shown in the following figure:

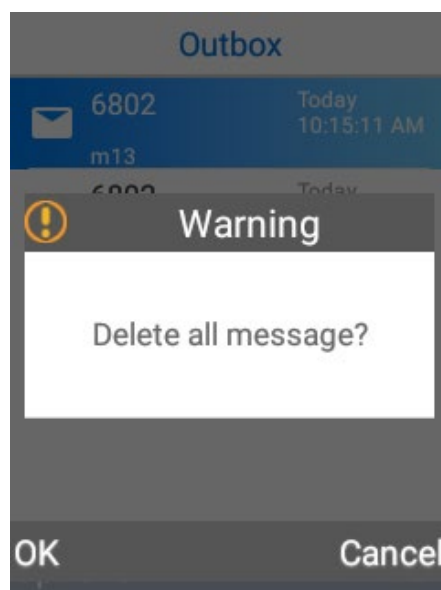


Figure 228 : Deleting Information Confirmation

Reply

After the user enters the standby interface, manually operate the key: menu > message> out-box> select the information that needs to reply, at this time the terminal switches to the information view interface.As shown in the following figure:



Figure 229 : Information View

In the information viewing interface, use the left soft key corresponding to the options, select reply in the list of options menu, and then switch to the information editing interface. As shown in the following figure:

The screenshot displays a 'New Message' screen. At the top, the title 'New Message' is in blue. Below it, the 'From:' field is populated with 'SIP1' and has a double-headed arrow icon. The 'To:' field contains the number '6802' and has a person icon. A large text input area with the placeholder 'Text...' is below these fields. At the bottom, there is a navigation bar with three buttons: 'Delete', '2aB', and 'Back'. Above the 'Delete' button, there is a blue bar with the text 'Press ok Send'.

Figure 230 : Information Editing

Note: After editing the information, press OK to complete the send.

Recall

After the user enters the standby interface, operate the keys by hand: menu > message > out-box> select the information that needs to be recall, at this time the terminal switches to the message viewing interface.As shown in the following figure:



Figure 231 : Information View

In information viewing interface, use the corresponding left soft key in the options menu and select recall in the pops up menu,As shown in the following figure:

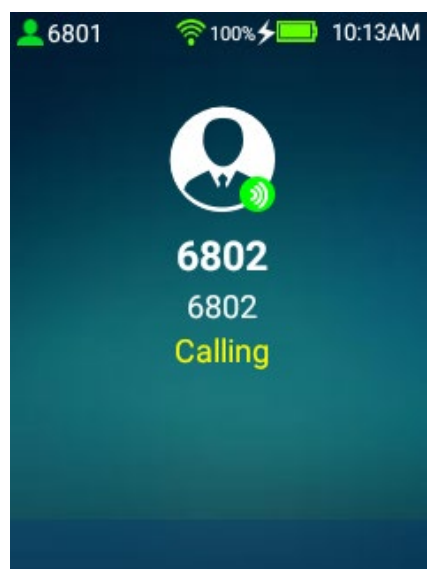


Figure 232 : Outgoing Call

Forwarding

After the user enters the standby interface, operate the keys by hand: menu > message > out-box-> select the information to forward, then the terminal switches to the information viewing interface, As shown in the following figure:



Figure 233 : Information View

In the message viewing interface, use the left soft key corresponding to the options, select forward in the list of options menu, then switch to the information editing interface. As shown in the following figure:



Figure 234 : Information Editing

Note: After editing the information, press OK to complete the message send.

Draft

After the user enters the standby interface, operate the key by hand: menu-> message-> draft box, this time the terminal switch to the draft box interface. As shown in the following figure:

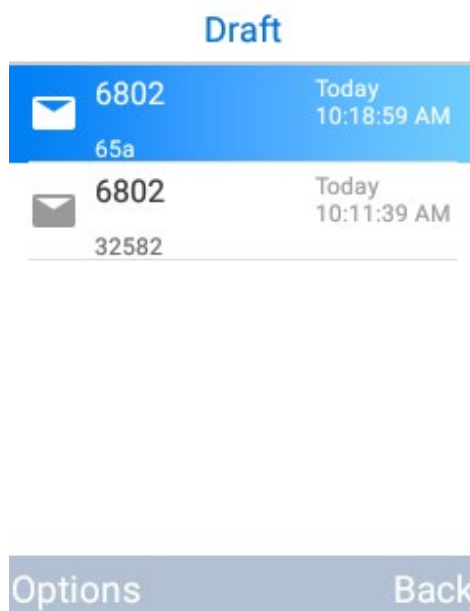


Figure 235 : Draft Box

Delete

After the user enters the standby interface, operate the keys by hand: menu-> information-> draft box. At this time, the terminal switches to the draft box interface, uses the up and down navigation keys to select the information that needs to be deleted, and then presses the left soft key corresponding to the option. Select delete from the options menu that appears, and a prompt window for deleting the current information appears. As shown in the following figure

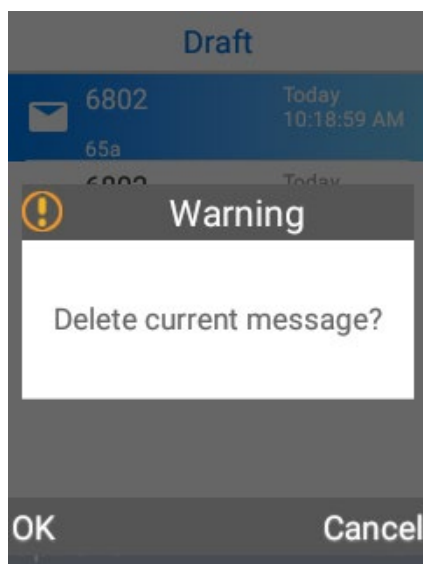


Figure 236 : Deleting Message Confirmation

If you want to delete all information in the draft box, simply select delete all from the options menu and confirm in the pops up window .As shown in the following figure:

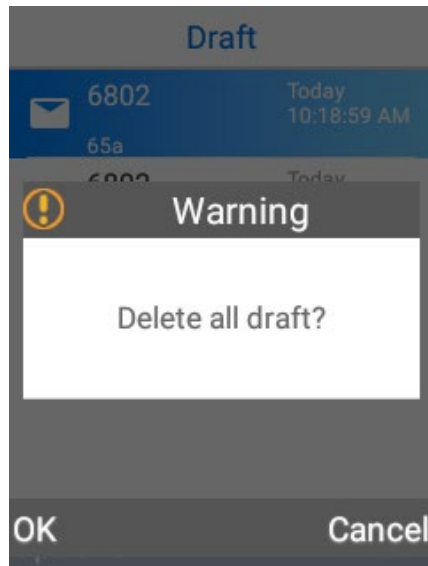


Figure 237 : Deleting The Draft

Reply

After the user enters the standby interface, operate the key by hand: menu > information > draft box-> select

the information to reply, then the terminal switch to the information viewing interface.As shown in the following figure:



Figure 238 : Information View

In the information viewing interface, use the left soft key corresponding to the options, select reply in the list of options menu, and then switch to the information editing interface.As shown in the following figure:



Figure 239 : Information Editing

Note: After editing the information, press OK key to complete the message reply.

Call Back

After the user enters the standby interface, operate the key by hand: menu -> message> draft box -> select the information that needs to be call back, and the terminal switches to the message view interface. As shown in the following figure:



Figure 240 : Information View

In the information view interface, use the option corresponds to the left soft key, in the options menu list recall, the terminal switch to calling interface. As shown in the following figure:

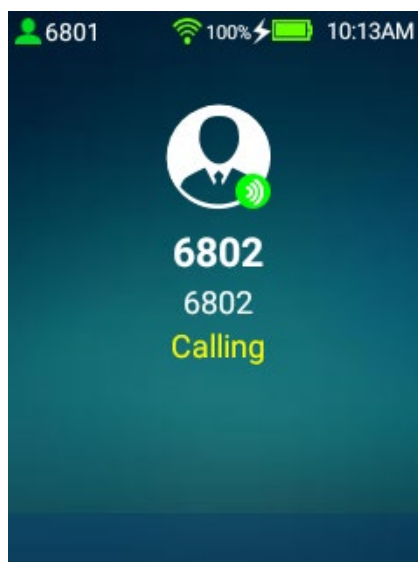


Figure 241 : Outgoing Call

Forwarding

After the user enters the standby interface, operate the key by hand: menu -> message-> draft box -> selects the information to be forwarded, and the terminal switches to the message view interface. As shown in the following figure:



Figure 242 : Information View

In the message viewing interface, use the left soft key corresponding to the options, select forward in the list of options menu, then switch to the message editing interface. As shown in the following figure:



Figure 243 : Information Editing

Note: After editing the information, press OK to complete the message forwarding.

Voice Mail

Voice mail setting

After the user enters the standby interface , operate the key by hand: menu - message-voice mail , when the terminal switches to the voice mail interface , after editing the voice mailbox number , press OK to apply the submission . As shown in the following figure :

Figure 244 : Voice Mailbox Settings

- command function: voice mail settings
- selection parameters

Number

Enter mode: inputting by hand. Format: character string, English character, number special character are acceptable.

Parameter Description: Voice Mail Number.

Message reading

After the user sets up the voice mail on the terminal and the application is submitted, he returns to the main interface, keep presses "key 1" and the device automatically calls the voice message number set by the user.

As, shown in the following figure:

Voice Mail

New/Old:

[0/0]

Number:

*97

Press ok Apply

Delete
2aB
Back

Figure 245 : Voice Mail Number

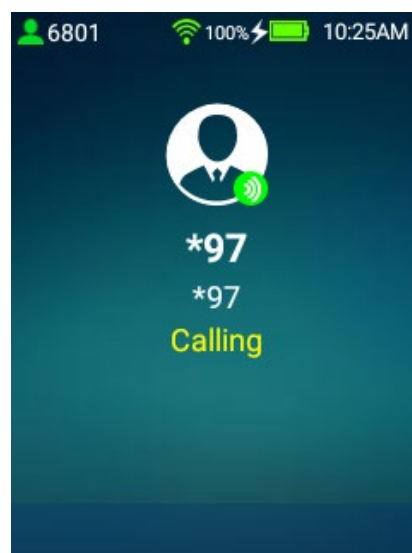


Figure 246 : Calling Voice Mail

No unit or individual may, without the written permission of the Company, extract, reproduce or transmit any part or all of this text without the permission of the Company.

VOGTEC TECHNOLOGY CO. LTD.

Address: 5/F, Kanghesheng Bldg., No.1, Chuansheng Road, Nanshan
District, Shenzhen, China.
Website: <http://www.vogtec.com>
Technical support email: vtc@vogtec.com

Annex

WIFI SIP terminal for network requirements and recommendations

Voice quality directly is affected by all three QoS quality factors: loss, latency, and jitter.

The following list summarizes the key QoS requirements and recommendations for voice (bearer traffic):

Voice traffic should be marked to DSCP EF per the QoS Baseline and RFC 3246.

Loss should be no more than 1 percent.

One-way latency (mouth to ear) should be no more than 150 ms.

Average one-way jitter should be targeted at less than 30 ms.

A range of 21 to 320 kbps of guaranteed priority bandwidth is required per call (depending on the sampling rate, the VoIP codec, and Layer 2 media overhead).

Limitations and Factors Affecting Throughput

First and foremost, throughput to the Internet is capped by the ISP and devices upstream of the APs. Also, 802.11 is a shared medium and is limited by other devices connected to the wireless. Therefore throughput should always be considered aggregate throughput. Interference (radio, physical, electrical) and the distance from client device to the Access Point are two major factors that have a negative impact on observed maximum throughput. Physical obstacles, other wireless networks and even everyday household devices like computers, microwaves, and televisions increase interference significantly, especially on the 2.4GHz band.

The half-duplex nature of wireless combined with other overhead also means that the actual aggregate throughput is typically 50 percent or less of the data rate. It is theoretically possible for 802.11n-capable wireless clients to achieve speeds as high as 100Mbps or more depending on the MIMO capabilities of the AP and the wireless client. However, wireless clients operating at 802.11b/g/a can cause 802.11n users to slow to less than 54Mbps because the radio must adjust to the lowest common denominator.

The nature of Wi-Fi technology makes throughput hard to predict. Therefore, network administrators should maintain reasonable expectations for connection speeds and keep the above factors in mind.

Maximizing Throughput


Optimal throughput rates and wireless performance in general can be improved by mounting APs correctly (high up on a wall or on the ceiling). Additionally, placing APs away from kitchens and other areas with high interference will also result in better performance. In a mesh environment, throughput rates will be significantly better with fewer hops to the gateway.

Meraki recommends that the end user is located no more than 3 hops away from the gateway. Each hop will reduce the bandwidth by 50%. For example, a 6 Mbps connection to a gateway will reduce to 3 Mbps at the second hop and 1.5 Mbps at the third hop.


Vogtec T series phone built-in environment detection tools, if you had wired VoIP phone services can work normally, we need to test your AP processing capacity, please check your wireless network according to the following steps.:

1. Before testing, you need to install the iPerf test software on a PC.
2. Detect communication between terminals and PC, analysis of delay, jitter and drop.
3. Test steps:

3.1 Open the iPerf software on the PC and configure the UDP and server mode, as shown in the screen shot below:

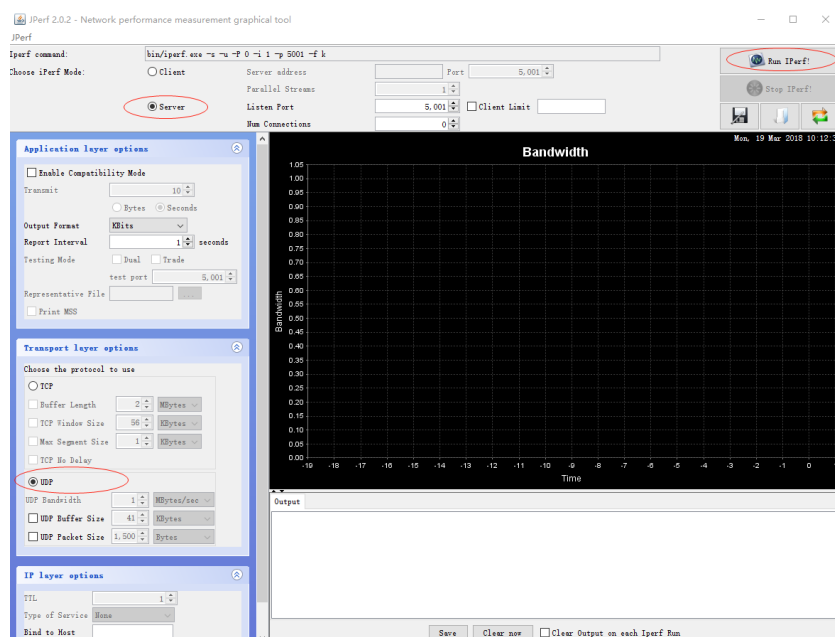

3.2 Hand-held terminal via the Menu → Advanced → iPerf, open iPerf test software, just enter the address of the server, then use the arrow keys to move to Start, and click the left soft button to Start the test.

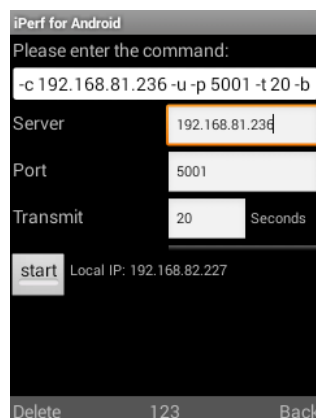

3.3 Check whether the test results can meet the VoIP business requirements:

